

ava Standard

Ava Vibrator Sex Toy Standard Model User Manual

Brand: Ava | Model: Standard

INTRODUCTION

The Ava Vibrator Sex Toy Standard Model is a personal massager designed for clitoral stimulation, offering a customizable and discreet experience. Crafted from medical-grade silicone, it features multiple patterns and intensity levels, a smart memory function, and a long-lasting rechargeable battery. This manual provides essential information for the safe and effective use, maintenance, and care of your device.

PRODUCT FEATURES

- **Body-Safe Material:** Made from medical-grade silicone, ensuring safety and comfort during use.
- **Water-Resistant Design:** Fully water-resistant for easy cleaning and versatile use.
- **Multiple Patterns & Intensities:** Features multiple unique patterns and intensity levels for a personalized experience.
- **Smart Memory Function:** Automatically starts at your last used pattern and intensity setting.
- **Long Battery Life:** Equipped with a rechargeable battery providing over 4 hours of use on a full charge.
- **Quiet Operation:** Operates at a whisper-quiet 45 decibels for discreet use.
- **Max Power Feature:** Double-press the power button to activate Max mode for enhanced intensity.


SETUP

Charging the Device


Before first use, fully charge the device for approximately 4 hours. For subsequent charges, connect the included USB charging cable to the charging port located at the base of the device. Ensure the cable is fully plugged in for proper charging. The indicator light will show charging status.

Charging Tips

GET 4+ HOURS OF PLAY ON A FULL CHARGE

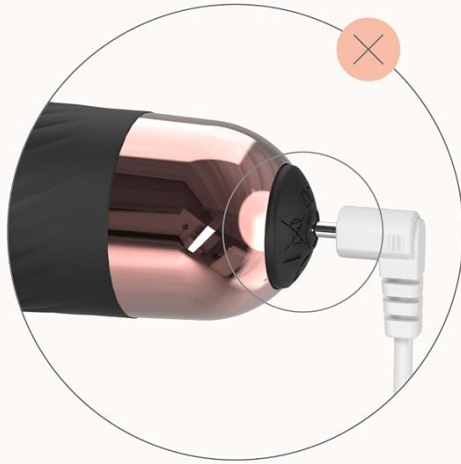

Fully charge battery for up to 4-hours before first use.

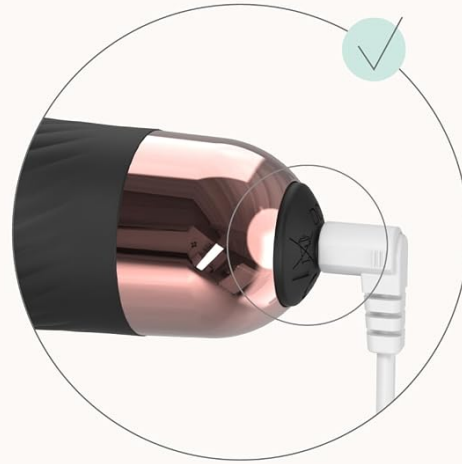

Make sure the cord is fully plugged in to ensure a proper charge.



USB-A Power Adapter options

RECHARGEABLE BATTERY



Image: Proper connection of the USB charging cable to the device's charging port.

The device uses a standard USB-A power adapter (not included) for charging. Options include wall adapters, car chargers, or power banks.

OPERATING INSTRUCTIONS

Power On/Off

To turn the device on, press and hold the power button (usually indicated by a circle with a vertical line) for 2 seconds. To turn it off, press and hold the power button again for 2 seconds.

Adjusting Patterns and Intensities

The device features multiple buttons for control:

- **Power Button:** Turns the device on/off.
- **Pattern Button:** Cycles through the available vibration patterns.
- **Intensity Button:** Adjusts the vibration intensity within each pattern.

The smart memory function will recall your last used pattern and intensity when the device is powered on again.

Activating Max Power Mode

For an intensified experience, quickly double-press the power button to switch to Max mode. This mode provides the strongest vibration setting.





Image: The Ava Vibrator with its power, pattern, and intensity buttons clearly visible.

Note: No relevant product videos from the seller were found for this section.

MAINTENANCE

Cleaning

Due to its water-resistant design and medical-grade silicone material, the Ava Vibrator is easy to clean. After each use, wash the device with warm water and a mild, toy-safe soap. Rinse thoroughly and pat dry with a lint-free cloth. Avoid using harsh chemicals, alcohol-based cleaners, or petroleum-based lubricants, as these can damage the silicone.

Storage

Store your device in a clean, dry place away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent potential damage or degradation of the silicone.

TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. Connect it to the USB charger and allow it to charge for at least 30 minutes before attempting to power it on again.
- **Weak or inconsistent vibration:** The battery might be low. Recharge the device. If the issue persists after a full charge, contact customer support.
- **Charging issues:** Verify that the USB cable is securely connected to both the device and the power source. Try using a different USB port or power adapter.
- **Buttons unresponsive:** Ensure the device is not locked (if applicable, refer to specific model features). If unresponsive, try fully charging the device.

If you encounter any issues not covered here, please refer to the Warranty and Support section for assistance.

SPECIFICATIONS

Feature	Detail
Color	Purple
Material	Silicone
Style	Standard

Feature	Detail
Dimensions (L x W x H)	9.02 x 2.95 x 1.93 inches
Battery Life	4+ hours
Water Resistance	Yes
Noise Level	45 decibels (whisper quiet)

WARRANTY AND SUPPORT

Your Ava Vibrator Sex Toy Standard Model comes with a manufacturer's warranty against defects in materials and workmanship. For specific warranty details, please refer to the product packaging or the official Ava website. If you require technical support, have questions about your device, or need to claim warranty service, please contact Ava customer support through their official channels.

For more information, visit the [Ava Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question