

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [brori](#) /

> [brori Electric Shaver User Manual](#)

brori ZZXELS002US

brori Electric Shaver for Women

Model: ZZXELS002US

Brand: brori

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your brori Electric Shaver. Designed for smooth and efficient hair removal, this cordless and rechargeable device is suitable for various body areas including arms, legs, underarms, and the bikini area. Please read this manual thoroughly before first use and keep it for future reference.

WHAT'S IN THE BOX

Upon opening your brori Electric Shaver package, you should find the following items:

- brori Electric Lady Shaver
- Charging Stand Holder
- Cleaning Brush
- Replacement Blade Head
- USB Charging Cable
- User Manual Book
- Storage Pouch



Two Charging Mode

Compatible with various devices



Socket
Not included



Vehicle-Mounted
USB Port



Power Bank



Laptop
USB port

Figure 1: All components included in the brori Electric Shaver package.

For a visual guide on unboxing and identifying components, please refer to the product video in the "Setup" section.

KEY FEATURES

- **IPX7 Waterproof Design:** Allows for both wet and dry use, making it suitable for use in the shower or bath with foam or gel. Easy to clean under running water.
- **3-in-1 Sharp Dual Blades:** Equipped with a 3D contour foil and dual sharp blades for effective hair removal. Includes a straight blade for broad areas (legs), a curved blade for hard-to-reach areas (underarms), and a floating foil for unwanted hair.
- **Ergonomic Grip & Shaver Head:** Designed with a curved handle and a flexible 27° cutting shaver head for comfortable and precise shaving along body curves.
- **Painless & Mild Hair Removal:** Features thicker stainless steel blades to minimize the risk of scratches, abrasions, redness, and allergic reactions.
- **Built-in LED Light:** An integrated LED light below the shaver head illuminates fine or hard-to-see hairs, ensuring

thorough hair removal, especially in areas like underarms or bikini lines.

- **Dual Charging Modes:** Offers convenient charging via the shaver stand or directly through the shaver body using a USB cable.



Figure 2: Detailed view of the 3-in-1 blade system.

Versatile Triple Blades for Complete Shaving Experience



Figure 3: Application areas for the versatile triple blades.

SETUP AND INITIAL USE

Charging the Shaver

Before first use, ensure your brori Electric Shaver is fully charged. The shaver offers two convenient charging methods:

1. **Direct Charging:** Connect the USB cable directly to the charging port on the shaver body. Plug the other end into a compatible USB power source such as a power bank, adapter (not included), or computer USB port.
2. **Charging via Stand Holder:** Place the shaver into its charging stand. Connect the USB cable to the charging port on the stand. Plug the other end into a compatible USB power source.

The LED light on the shaver will indicate charging status. A single full charge provides approximately 40 minutes of working time.



Compatible with various devices



Socket
Not included



Vehicle-Mounted
USB Port



Power Bank



Laptop
USB port

Figure 4: Two convenient charging options for your shaver.

Initial Preparation

Once charged, you are ready to use your shaver. For optimal results, ensure your skin is clean. The shaver can be used on dry skin or with foam/gel for wet shaving.

Your browser does not support the video tag.

Video 1: This video demonstrates the unboxing process, how to replace the shaver blade, and the two charging methods for the brori Electric Shaver.

OPERATING YOUR SHAVER

1. **Power On:** Press the ON/OFF button located on the shaver body to start the device. The LED light will illuminate, indicating it's ready for use.
2. **Shaving Technique:** Gently glide the shaver against the direction of hair growth. The flexible shaver head and ergonomic grip are designed to follow your body's contours for a close and comfortable shave.

3. **Utilizing the LED Light:** The built-in LED light helps to illuminate fine or hard-to-see hairs, ensuring thorough hair removal, especially in areas like underarms or bikini lines.
4. **Wet or Dry Use:** For dry shaving, ensure your skin is clean and dry. For wet shaving, apply shaving foam or gel to the desired area before use. The IPX7 waterproof rating allows for safe use in wet conditions.
5. **Power Off:** After use, press the ON/OFF button again to turn off the shaver.



Figure 5: Demonstrating full body wet and dry usage.

MAINTENANCE AND CARE

Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene:

1. **Rinse Under Water:** After each use, remove the shaver head and rinse both the head and the main body (if used wet) under running water. The IPX7 waterproof design allows for easy rinsing.
2. **Use Cleaning Brush:** Use the provided cleaning brush to remove any trapped hairs from the blades and foil.

3. **Air Dry:** Allow all parts to air dry completely before reassembling or storing the shaver.



Figure 6: The shaver's waterproof design allows for easy cleaning.

Replacing the Blade Head

For continued optimal performance, it is recommended to replace the blade head when it becomes dull or damaged. A replacement blade head is included in your package.

1. **Remove Protective Cover:** Gently remove the clear protective cover from the shaver head.
2. **Pinch Sides:** Firmly pinch the two sides of the shaver head with your thumb and index finger.
3. **Pull Out Blade:** Slightly pull out the blade head from one side until it detaches from the shaver body.
4. **Insert New Blade:** Align the new blade head with the shaver slot and push it in parallel until it clicks securely into place.

Refer to Video 1 in the "Setup" section for a visual demonstration of blade replacement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver not turning on.	Low battery; Power button not pressed firmly.	Charge the shaver fully. Ensure the ON/OFF button is pressed completely.
Poor shaving performance / Hair not removed effectively.	Blades are dull or damaged; Shaver head not properly attached; Incorrect shaving angle.	Replace the blade head. Ensure the shaver head is securely clicked into place. Adjust shaving angle to be against hair growth.
Irritation or redness after shaving.	Skin not prepared; Blades are dull; Pressure too high.	Ensure skin is clean. Consider wet shaving with foam/gel. Replace dull blades. Use gentle pressure.
Shaver head detaches easily.	Blade head not securely installed; Internal parts damaged (rare).	Re-install the blade head, ensuring it clicks into place. If issue persists, contact customer support.

PRODUCT SPECIFICATIONS

Brand: brori

Model Name: ZZXELS

Item Model Number: ZZXELS002US

Product Dimensions: 6.5 x 2.13 x 1.77 inches

Item Weight: 10.41 ounces

Power Source: Battery Powered

Special Features: Rechargeable, Cordless, Waterproof (IPX7)

Recommended Uses: Armpit, Leg, Pubic

UPC: 778739032776

Manufacturer: brori Factory



Figure 7: Labeled diagram of the brori Electric Shaver components.

IMPORTANT SAFETY INFORMATION

- Always replace blades when they become dull or damaged to prevent skin irritation or injury.
- Clean the shaver properly after each use to prevent bacterial growth and maintain hygiene.
- Do not use the shaver while charging.
- Keep the shaver away from excessive heat sources.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your brori Electric Shaver, please refer to the

contact details provided in the original product packaging or visit the official brori website. Keep your purchase receipt as proof of purchase for warranty claims.

