

[Manuals.plus](#) /

› [GE home electrical](#) /

› GE UltraPro Universal Replacement Samsung Remote+ User Manual

GE home electrical 44235

GE UltraPro Universal Replacement Samsung Remote+ User Manual

Model: 44235

INTRODUCTION

The GE-branded UltraPro 4-Device Universal Replacement Samsung Remote+ is designed to simplify your home entertainment experience by consolidating multiple remote controls into one. This universal remote is preprogrammed for immediate use with Samsung TVs and Blu-ray players, and Roku boxes. It also offers compatibility with thousands of audio/video devices from major brands, providing comprehensive control over your home theater setup.





Image: The GE UltraPro Universal Replacement Samsung Remote+.


KEY FEATURES

- **Multi-Device Control:** Operate up to four audio and video components, such as TVs, Blu-ray/DVD players, cable/satellite receivers, Roku boxes, other streaming media players, and soundbars.
- **Samsung Device Replacement:** Preprogrammed with dedicated TV and Blu-ray buttons, plus Samsung-specific function keys (Samsung hub, e-manual, s.mode) for full functionality and easy navigation.
- **Extensive Code Library:** Compatible with all major brands and thousands of audio/video devices. Note: Not compatible with radio frequency devices like Roku Streaming Sticks and Amazon Fire TV/Sticks.
- **Simple Setup:** Features automatic code search and direct code entry programming. Includes master volume control and a preprogrammed STRM button for Roku boxes.



UltraPro™

Up to 4 controllable devices

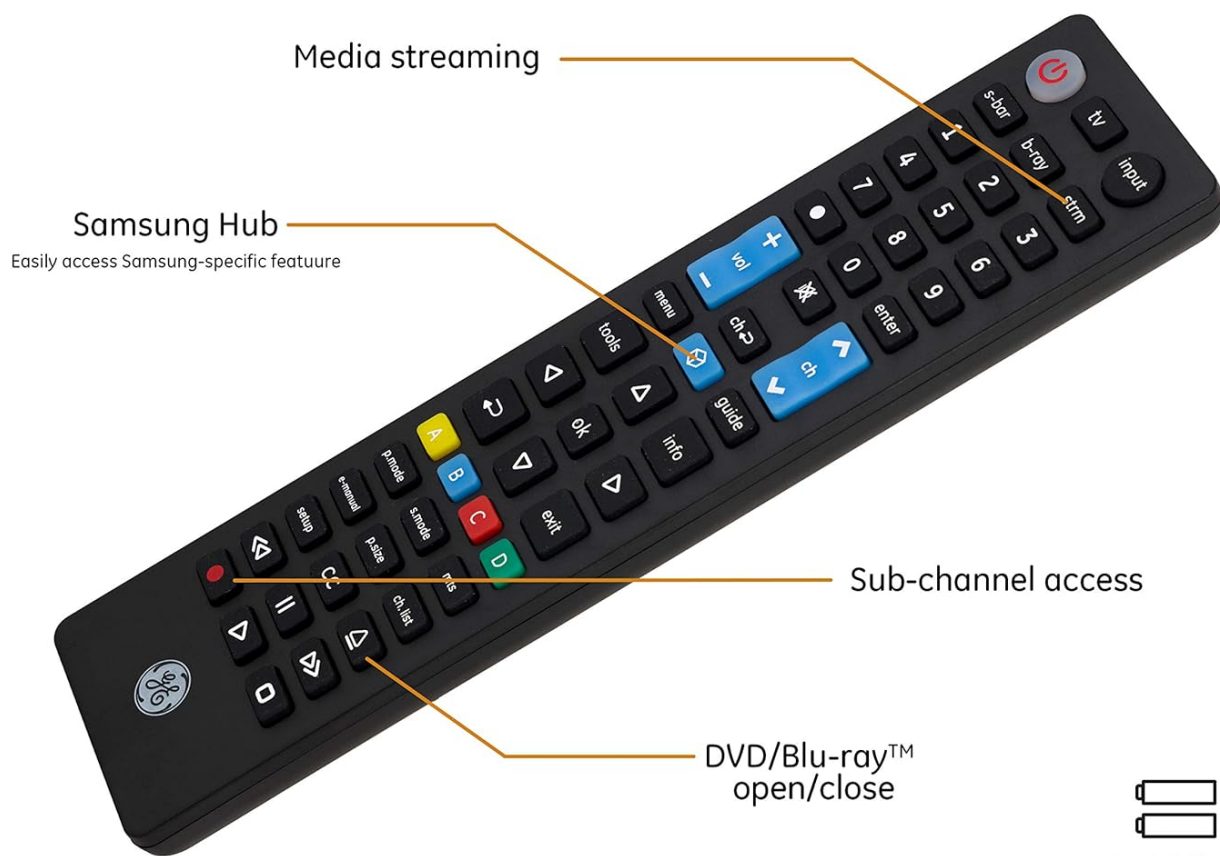

Samsung Hub
Easily access Samsung-specific feature

Media streaming

Sub-channel access

**DVD/Blu-ray™
open/close**



Requires 2 AAA batteries
(Not Included)

Preprogrammed for Roku® & Samsung Devices

Control your Samsung TV, Sound Bar, Blu-ray Player, or Roku Device without any programming required.
NOT COMPATIBLE with Roku Streaming Stick or Amazon Fire TV/Stick

Image: The GE UltraPro remote highlighting its 4-device control capability and Samsung-specific features like the Samsung Hub.



Controls Your Devices



Preprogrammed for Samsung & Roku® Devices



Sound Bar/Audio



Streaming Media Players



Home Theatre



TVs



DVD/Blu-ray™ Player



Cable/Satellite

Comprehensive Code Library Works with ALL MAJOR BRANDS
and supports thousands of the latest and legacy AUDIO/VIDEO components.

Samsung • Vizio • JVC • Sony • Emerson • Element • Hisense • Westinghouse • Etc.

Image: The GE UltraPro remote illustrating the range of devices it can control, including TVs, soundbars, streaming players, and more.

SETUP

1. Battery Installation

The remote requires two AAA batteries (not included). Open the battery compartment on the back of the remote, insert the batteries according to the polarity indicators (+/-), and close the compartment securely.

2. Pre-programmed Devices

This remote is preprogrammed for immediate use with Samsung TVs and Blu-ray players. The 'STRM' button is also preprogrammed for Roku boxes. For these devices, simply insert batteries and begin use.

3. Programming Additional Devices

To control other brands or types of devices, you will need to program the remote using either the automatic code search or direct code entry methods. A detailed code list is available on the Jasco Products Company website.

1. Find the remote codes for your specific device.
2. Press and hold the 'SETUP' button until the red indicator light turns on, then release.
3. Press and release the desired device button on the remote (e.g., 'TV', 'S-BAR', 'B-RAY', 'STRM').
4. Starting with the first code from your list, key in the code using the number buttons.
5. Point your remote at the device and test different buttons to see if the device responds.
6. Repeat the process for each additional device until all desired devices are controlled.



How To Program Device

1. Find the remote codes for your device.*
2. Press the setup button until the red indicator light turns on then release.
3. Press and release device button on remote.
4. Starting with the first code, key in the code using the number buttons.
5. Point your remote at the device and test different buttons to see if the device responds.
6. Repeat process for each additional device.

*Find your codes at www.byjasco.com/remotecodes

Image: Step-by-step guide on how to program the GE UltraPro remote for various devices.

Replace & consolidate

Replaces all SAMSUNG remotes and also works as a universal remote for ALL MAJOR BRAND DEVICES

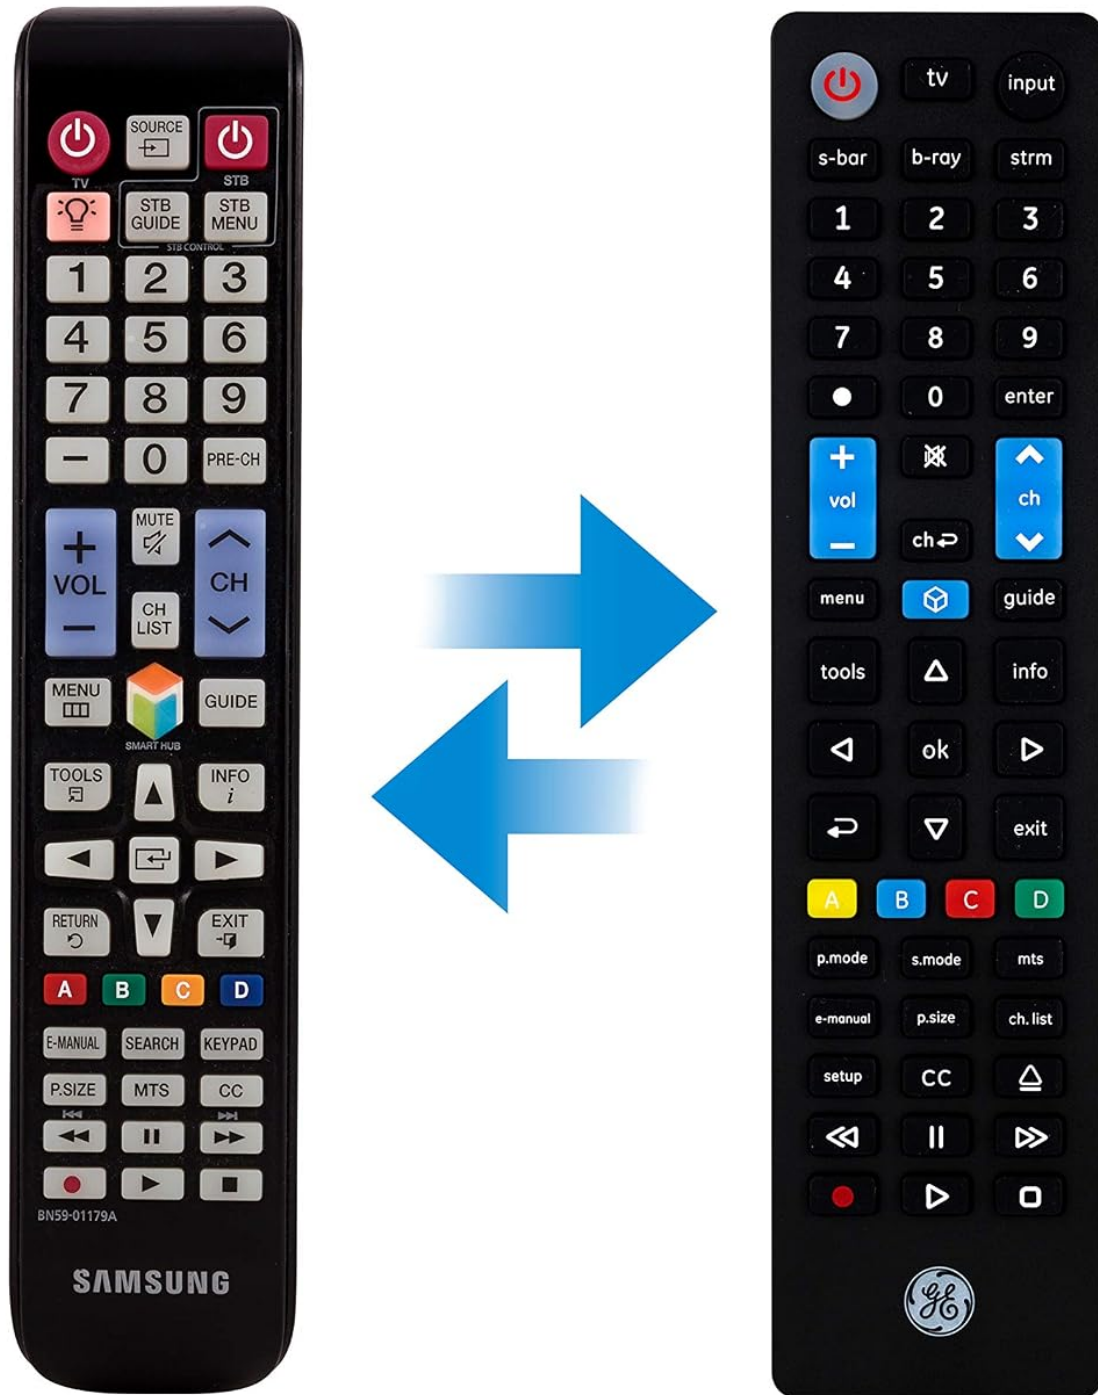


Image: Visual representation of the GE UltraPro remote replacing and consolidating multiple remotes, including an original Samsung remote.

OPERATING INSTRUCTIONS

Once programmed, select the desired device mode (TV, S-BAR, B-RAY, STRM) by pressing the corresponding button at the top of the remote. The remote will then send commands specific to that device. Use the master volume control to

adjust audio regardless of the active device.

- **Power Button:** Turns the selected device on or off.
- **Input Button:** Cycles through input sources on your TV or other display device.
- **Volume (+/-) & Mute:** Controls the volume and mutes audio.
- **Channel (CH +/-):** Changes channels on your TV or cable/satellite box.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used for menu navigation and selection.
- **Samsung-Specific Keys:** Includes buttons for Samsung hub, e-manual, and s.mode for enhanced control of Samsung devices.
- **STRM Button:** Preprogrammed for Roku boxes, providing direct access to streaming functions.
- **DVD/Blu-ray Open/Close:** Dedicated button for disc tray control.
- **Advanced DVR Functions:** Includes buttons for recording, playback, fast forward, rewind, and pause.
- **Dot Button:** For direct sub-channel access.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or the indicator light no longer illuminates. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh AAA batteries are correctly installed.
 - Verify the remote is in the correct device mode (TV, S-BAR, B-RAY, STRM) for the device you are trying to control.
 - Reprogram the remote for the specific device using the setup instructions.
 - Ensure there are no obstructions between the remote and the device's infrared sensor.
- **Some buttons not working:**
 - This may indicate an incorrect programming code. Try alternative codes for your device from the provided list or the Jasco website.
 - Certain advanced functions may not be supported by all devices.
- **Remote not compatible with Roku Streaming Sticks or Amazon Fire TV/Sticks:**
 - This remote operates using infrared (IR) signals. Roku Streaming Sticks and Amazon Fire TV/Sticks primarily use radio frequency (RF) for their remotes, which is not supported by this universal remote.

SPECIFICATIONS

- **Model Number:** 44235
- **Brand:** GE home electrical
- **Max Number of Supported Devices:** 4
- **Power Source:** 2 x AAA Batteries (not included)

- **Dimensions:** 9.5 x 2.5 x 0.9 inches
- **Item Weight:** 3.98 ounces
- **Compatible Devices:** Sony, Samsung, Hisense, Westinghouse, LG, Toshiba, Sharp, Vizio, Insignia, Philips, TCL, Panasonic, Roku, Apple TV, Smart TVs, Streaming Players, Blu-Ray, DVD, VCR, Home Theater.
- **Country of Origin:** China
- **Date First Available:** October 9, 2019



Image: Dimensions of the GE UltraPro Universal Remote Control.

SUPPORT & WARRANTY

For any questions or issues, free U.S.-based technical support is available Monday-Friday, 7 AM-8 PM Central Time. Online step-by-step programming videos are also available to assist with setup and troubleshooting. Please refer to the product packaging or the Jasco Products Company website for specific warranty information.

Jasco Products Company, LLC

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question