

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [K-FEE](#) /

› [K-fee ONE Capsule Machine User Manual](#)

K-FEE K-FEE33-359

K-fee ONE Capsule Machine User Manual

Model: K-FEE33-359

1. INTRODUCTION

Thank you for choosing the K-fee ONE Capsule Machine. This compact and versatile machine is designed to provide you with a wide range of hot beverages, including coffee, espresso, lungo, tea, and cocoa, with ease and efficiency. Featuring Duo Pressure and Smart Brew technologies, it ensures optimal extraction for every drink. Please read this manual carefully before first use to ensure safe operation and to achieve the best results from your machine.



Image 1.1: The K-fee ONE Capsule Machine, showcasing its sleek design and a freshly brewed espresso.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.

- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. COMPONENTS OVERVIEW

Familiarize yourself with the main parts of your K-fee ONE machine:

- **Water Tank:** Removable tank for fresh water (0.8 L capacity).
- **Capsule Compartment:** Area to insert K-fee compatible capsules.
- **Coffee Outlet:** Where the brewed beverage dispenses.
- **Drip Tray:** Collects excess liquid and supports cups.
- **Capsule Container:** Collects used capsules (holds up to 10).
- **Control Buttons:** For power, brewing, and programming.



Image 3.1: Overview of the K-fee ONE machine with its compact dimensions (11.3 cm W x 36.6 cm D x 25.4 cm H).

4. INITIAL SETUP

Follow these steps before first use:

1. **Unpacking:** Carefully remove the machine from its packaging. Remove all protective films and packaging materials.
2. **Cleaning:** Clean the water tank, drip tray, and capsule container with warm water and a mild detergent. Rinse thoroughly and dry.
3. **Positioning:** Place the machine on a stable, flat, and heat-resistant surface, away from water sources and heat.
4. **Fill Water Tank:** Fill the water tank with fresh, cold drinking water up to the MAX mark. Place the tank back onto the machine.
5. **First Rinse Cycle:** Plug the machine into a grounded power outlet. Place a large container (at least 200ml) under the coffee outlet. Press any brew button to start a rinse cycle without a capsule. This primes the system and cleans internal components. Repeat this process 2-3 times.

5. OPERATING YOUR K-FEE ONE MACHINE

5.1 Brewing a Beverage

1. Ensure the water tank is filled with fresh water.
2. Place a cup on the drip tray.
3. Open the capsule compartment lever.
4. Insert a K-fee compatible capsule into the compartment. Close the lever firmly.
5. Select your desired beverage size by pressing the corresponding button (e.g., Espresso, Lungo, or a custom programmed button).
6. The machine will begin brewing. Brewing stops automatically when the programmed volume is reached.
7. After brewing, open the lever to eject the used capsule into the internal container.

5.2 Adjusting Cup Volume (Programming)

You can customize the volume for your preferred cup size:

1. Place a cup under the coffee outlet.
2. Insert a capsule.
3. Press and hold the desired brew button (e.g., Lungo button) until the desired volume is reached in your cup.
4. Release the button. The machine will save this volume for future brews using that button.



Image 5.1: Key features of the K-fee ONE machine, including quick heat-up time and high pump pressure.

6. MAINTENANCE AND CLEANING

6.1 Daily Cleaning

- **Drip Tray and Capsule Container:** Empty and rinse daily. Wash with warm, soapy water and dry thoroughly.
- **Water Tank:** Rinse daily with fresh water. Do not use detergent.
- **Machine Exterior:** Wipe with a soft, damp cloth. Do not use abrasive cleaners or immerse the machine in water.

6.2 Descaling

Descaling is crucial to maintain machine performance and extend its lifespan. The frequency depends on water hardness and usage. Use a K-fee approved descaling solution and follow the instructions on the descaling product packaging.

1. Empty the water tank and used capsule container.
2. Pour the descaling solution (mixed according to product instructions) into the water tank.
3. Place a large container (at least 500ml) under the coffee outlet.
4. Start the descaling process as per your descaling solution's instructions (often involves pressing and holding a button combination).
5. Once the descaling cycle is complete, rinse the water tank thoroughly and fill it with fresh water.
6. Perform at least two rinse cycles with fresh water to remove any descaling residue.

7. TROUBLESHOOTING

If you encounter issues with your K-fee ONE machine, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	No power supply.	Check if the power cord is securely plugged into the machine and the wall outlet. Check the fuse/circuit breaker.
No water flow.	Water tank empty or not properly inserted. Air in the system. Machine is scaled.	Fill water tank and ensure it's correctly seated. Perform a rinse cycle to prime. Descale the machine.
Coffee is cold or not hot enough.	Machine not preheated. Machine is scaled.	Allow machine to heat up fully (approx. 15 seconds). Descale the machine. Preheat cup with hot water.
Capsule not piercing.	Capsule not inserted correctly. Lever not fully closed.	Ensure capsule is correctly oriented. Close the lever firmly until it clicks.
Leaking water.	Water tank not properly seated. Drip tray full.	Ensure water tank is correctly inserted. Empty the drip tray.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	K-FEE
Model Number	K-FEE33-359
Color	Copper Black
Dimensions (L x W x H)	36.6 x 11.3 x 25.4 cm
Weight	2.5 Kilograms
Power	1455 Watts
Voltage	240.0 Volts
Water Tank Capacity	0.8 Liters
Pump Pressure	19 Bar
Heat-up Time	Approx. 15 seconds
Automatic Shut-off	Yes
Compatibility	All K-fee capsules (ESPRESSO, Mr & Mrs Mill, EXPRESSI*, TEALOUGE*)

9. WARRANTY AND SUPPORT

The K-fee ONE Capsule Machine is manufactured by K-fee System GmbH. For specific warranty information, please refer to the warranty card included with your product packaging or visit the official K-fee website. In case of issues not covered by the troubleshooting section, or for technical support, please

contact K-fee customer service.

Please note that the return policy for this product is 30 days from the date of purchase, as per Amazon's standard return policy.