



[Manuals.plus](#) /

› [Prtukyt](#) /

› [Prtukyt 8S Wireless Headphones User Manual](#)

Prtukyt 8S

Prtukyt 8S Wireless Headphones User Manual

Model: 8S

1. INTRODUCTION

Thank you for choosing the Prtukyt 8S Wireless Headphones. These headphones are designed to provide a high-quality audio experience with powerful stereo drivers, Bluetooth 5.0 connectivity, and deep bass. Featuring a premium matte finish, intuitive controls, and a long-lasting battery, they are suitable for various uses including office, home, and outdoor entertainment. This manual will guide you through the setup, operation, and maintenance of your new headphones.



A pair of blue Prtuky 8S wireless over-ear headphones with a red audio cable shown separately.

2. SAFETY INFORMATION

- Do not expose the headphones to extreme temperatures, humidity, or corrosive environments.
- Avoid dropping or subjecting the headphones to strong impacts.
- Do not disassemble or attempt to repair the headphones yourself. This may void the warranty and cause damage.
- Keep the headphones away from children and pets.
- Listen at moderate volume levels to prevent hearing damage.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Prtukyt 8S Wireless Headphones
- USB Charging Cable
- 3.5mm Audio Cable
- User Manual

4. PRODUCT OVERVIEW

The Prtukyt 8S headphones feature a user-friendly design with accessible controls and multiple connectivity options.

4.1. Components and Controls

The headphones are equipped with 5 control buttons for easy management of audio and calls:

- **Play/Pause/Answer/Hang Up Button:** Controls music playback and phone calls.
- **EQ Button:** Adjusts the equalizer settings for different sound effects.
- **Next Song/Volume+ Button:** Skips to the next track and increases volume.
- **Previous Song/Volume- Button:** Skips to the previous track and decreases volume.
- **Mode Switch Button:** Toggles between Bluetooth, FM Radio, and SD Card modes.

Additional features include a Micro SD/TF card slot and a 3.5mm audio jack for wired connection.



Canción siguiente
/canción anterior



Reproducir
pausar



Encendido
/apagado



Responder



Colgar



Llamada de voz

A person wearing the Prtukyt 8S headphones, with icons indicating button functions like play/pause, power, answer/hang up, and voice call.

5. SETUP

5.1. Charging the Headphones

Before first use, fully charge the headphones. Connect the USB charging cable to the charging port on the headphones and to a USB power source (e.g., computer, wall adapter). The LED indicator will show charging status and turn off when fully charged. A full charge takes approximately 2 hours and provides up to 50 hours of playback.



An image illustrating the 50-hour play time and 2-hour charging time of the Prtukyt 8S headphones.

5.2. Powering On/Off

- **To Power On:** Press and hold the Power button until the LED indicator lights up.
- **To Power Off:** Press and hold the Power button until the LED indicator turns off.

5.3. Bluetooth Pairing

The Prtukyt 8S headphones utilize Bluetooth 5.0 for stable and efficient wireless connection.

1. Ensure the headphones are powered off.

2. Press and hold the Power button for approximately 5 seconds until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your device (smartphone, tablet, PC), enable Bluetooth and search for available devices.
4. Select "Prtukyt 8S" from the list of devices.
5. Once connected, the LED indicator will flash blue slowly.



Close-up of the Prtukyt 8S headphone showing the Bluetooth 5.0 technology and a 3.5mm audio jack connection.

6. OPERATING INSTRUCTIONS

6.1. Music Playback

- **Play/Pause:** Press the Play/Pause button once.
- **Next Track:** Press the Next Song/Volume+ button once.
- **Previous Track:** Press the Previous Song/Volume- button once.
- **Volume Up:** Press and hold the Next Song/Volume+ button.
- **Volume Down:** Press and hold the Previous Song/Volume- button.

6.2. Phone Calls

- **Answer Call:** Press the Play/Pause/Answer/Hang Up button once.

- **End Call:** Press the Play/Pause/Answer/Hang Up button once during a call.
- **Reject Call:** Press and hold the Play/Pause/Answer/Hang Up button for 2 seconds.
- **Redial Last Number:** Double-press the Play/Pause/Answer/Hang Up button.

6.3. EQ Function

Press the EQ button to cycle through different equalizer presets, allowing you to customize the sound profile to your preference.

6.4. FM Radio Mode

To activate FM Radio mode, press the Mode Switch button until you hear the FM radio. Use the Next/Previous track buttons to scan for stations.

6.5. Micro SD/TF Card Playback

Insert a Micro SD/TF card with MP3 files into the designated slot. The headphones will automatically switch to SD card playback mode. Use the music playback controls to manage your tracks.

6.6. Wired Mode (3.5mm Audio Cable)

When the battery is low or if you prefer a wired connection, connect the supplied 3.5mm audio cable to the headphone's audio jack and your device's audio output. The headphones will automatically switch to wired mode. Note that controls on the headphones may not function in wired mode, and playback will be controlled by your connected device.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** Store the headphones in a cool, dry place when not in use. The foldable design helps save space.
- **Battery Care:** To prolong battery life, avoid fully discharging the headphones frequently. Charge them regularly, even if not used for extended periods.

DISEÑO ERGONÓMICO



Almohadillas de espuma suave para los oídos



Cinta de cabeza ajustable



Suave y cómodo reposacabezas

Shows the ergonomic features of the Ptukyt 8S headphones, including soft ear pads, an adjustable headband, and its foldable design.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on	Low battery	Charge the headphones fully.
Cannot pair via Bluetooth	Headphones not in pairing mode / Bluetooth disabled on device	Ensure headphones are in pairing mode (flashing blue/red). Enable Bluetooth on your device and search again.
No sound	Volume too low / Incorrect mode / Device not connected	Increase volume on headphones and device. Check if headphones are in the correct mode (Bluetooth, FM, SD). Ensure device is properly connected.
Poor sound quality	Distance from device / Interference	Move closer to your device. Avoid obstacles and sources of interference.

9. SPECIFICATIONS

- **Model:** 8S
- **Brand:** Prtukyt
- **Connectivity Technology:** Wireless (Bluetooth 5.0), Wired (3.5mm Jack)
- **Driver Size:** 57 mm
- **Frequency Range:** 20 Hz - 20,000 Hz
- **Battery Life:** Up to 50 hours (playback)
- **Charging Time:** Approximately 2 hours
- **Features:** Built-in Microphone, Volume Control, EQ Function, FM Radio, Micro SD/TF Card Support, Foldable Design, Active Noise Cancellation (ANC)
- **Ear Placement:** Over-Ear
- **Material:** Leather (earpads)
- **Dimensions:** 15.3 x 15.2 x 8.1 cm
- **Weight:** 320 g

10. WARRANTY AND SUPPORT

Prtukyt is committed to providing a great customer experience. If you encounter any quality problems with your product, please contact us immediately for assistance. Our customer support team is ready to help resolve any issues you may have.

For support, please refer to the contact information provided with your purchase or visit the official Prtukyt website.