

[manuals.plus](#) /› [ORDRO](#) /› **ORDRO 4K Camcorder AC3 User Manual**

## ORDRO HDR-AC3

# ORDRO 4K Camcorder AC3 User Manual

Model: HDR-AC3 (AC3-SET5 Kit)

Brand: ORDRO

## 1. INTRODUCTION

Thank you for choosing the ORDRO 4K Camcorder AC3. This camcorder is designed to capture high-quality video and photos, featuring a 4K Ultra HD resolution, a sensitive Sony IMX258 CMOS sensor, and a versatile 3.1-inch IPS touchscreen. With advanced features like IR night vision, Wi-Fi connectivity, and support for external accessories, the AC3 is suitable for various recording environments. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your device.



Figure 1.1: ORDRO 4K Camcorder AC3 with included accessories such as the microphone, LED light, wide-angle lens, remote control, and carrying case.

## 2. WHAT'S IN THE BOX

The ORDRO AC3-SET5 kit includes the following components:

- ORDRO 4K Camcorder AC3
- Carrying Case
- External Microphone
- Micro/USB Adapter (1 to 2)
- 0.39X Professional Wide-Angle Lens (includes Macro Lens)
- LED Video Light (2700-6500K, 80pcs cold/warm lights)
- Lens Hood
- Camera Holder/Handle
- Two Lithium-ion Batteries

- Battery Charger
- USB Charger
- Camera Pouch and Wrist Strap
- Card Reader (random color)
- Micro USB Cable
- 5-pin USB Charging Cable
- HDMI Cable
- Hot Shoe Mount
- English User Manual

## 3. SETUP GUIDE

---

### 3.1 Battery Installation

The camcorder uses lithium-ion batteries. Ensure batteries are fully charged before first use.

1. Open the battery compartment cover located at the bottom of the camcorder.
2. Insert the charged lithium-ion battery, ensuring the correct polarity.
3. Close the battery compartment cover securely.
4. Use the provided battery charger to charge the spare battery.

### 3.2 SD Card Installation

The camcorder supports SDHC flash memory cards up to 128GB. A 32GB SD card is included in the AC3-SET5 kit.

1. Locate the SD card slot, usually on the side or bottom of the camcorder.
2. Insert the SD card with the metal contacts facing the correct direction (refer to the diagram near the slot).
3. Push the card gently until it clicks into place. To remove, push again until it springs out.

### 3.3 Attaching Accessories

The ORDRO AC3 comes with several accessories to enhance your recording experience.

- **External Microphone:** Attach the microphone to the hot shoe mount on top of the camcorder. Connect the microphone cable to the designated audio input port. The microphone features a super-cardioid polar pattern and a low-cut filter to reduce noise and improve sound quality.



Figure 3.1: Attaching the external microphone to the camcorder.

- **Wide-Angle Lens:** Screw the 0.39X wide-angle lens onto the front of the camcorder's main lens. This lens allows for a broader field of view. The kit also includes a macro lens for close-up shots (effective shooting range 4-5cm).

# 4K Video Camera with 0.39X Wide Angle Lens

HDR-AC3 can support super wide angle lens (including a macro lens) to widen the shooting angles.

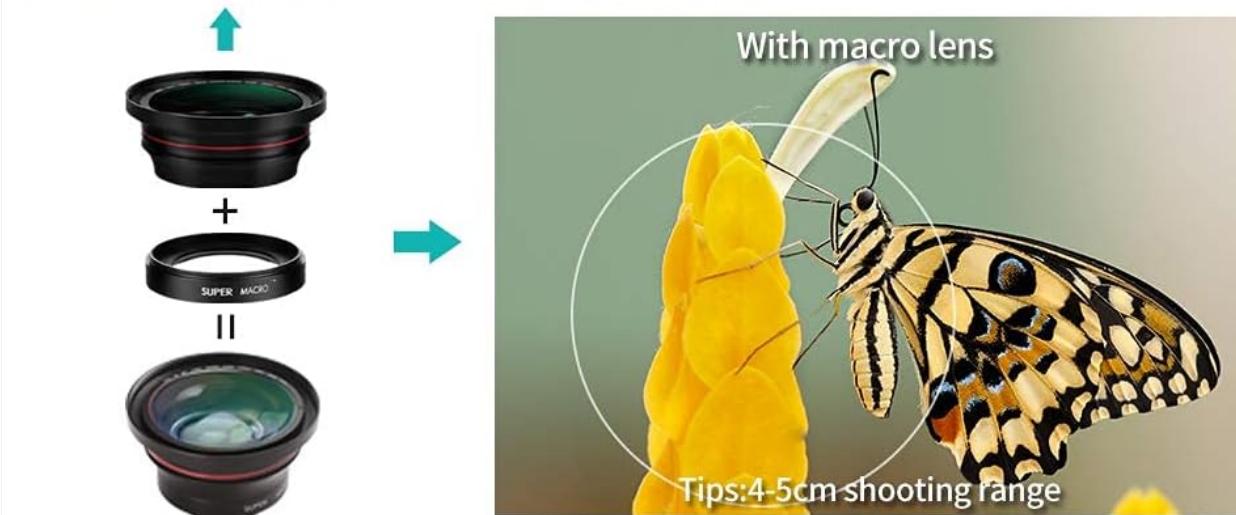


Figure 3.2: Illustration of wide-angle and macro lens attachment and their effects.

- **LED Video Light:** Mount the LED video light onto the hot shoe mount. This light provides adjustable illumination (2700-6500K, 80pcs cold/warm lights) to enhance fill light in various shooting conditions.

In life, every light has its own unique emotions.

The beauty of the light source shows a more versatile side.

ORDRO fill light is used to improve

the quality of the image.



Close-up Shot



Food Shooting



Character Fill Light

Figure 3.3: The LED video light attached to the camcorder, demonstrating its use for improving image quality.

- **Camera Holder/Handle:** Attach the camera holder for stable handheld shooting or to mount on a tripod.

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Operation

- **Power On/Off:** Press and hold the power button to turn the camcorder on or off.
- **Recording Video:** Press the **RECORD** button to start and stop video recording.
- **Taking Photos:** Switch to photo mode and press the **PHOTO** button to capture still images. The maximum photo resolution is 24.0 MP (5600x4200 interpolation).

### 4.2 Display and Navigation

The camcorder features a 3.1-inch IPS capacitive touchscreen with 270° rotation. Use the touchscreen for menu navigation and settings adjustments. The camcorder also supports 30X digital zoom.

### 4.3 4K Video Recording

The ORDRO AC3 records videos in Ultra HD 4K resolution (2880x2160 at 24FPS), ensuring high-quality and vibrant footage.

## 4.4 IR Night Vision

To record clear videos and photos in low-light or dark conditions, activate the IR Night Vision mode.

- Press the **IR** button (typically a dedicated button on the camcorder body) to enter night vision mode.
- The camcorder will switch to infrared recording, capturing monochrome images in darkness.



Figure 4.1: Demonstrates the difference between normal and IR night vision recording.

## 4.5 Wi-Fi Connectivity

The camcorder can be controlled remotely via Wi-Fi using the "D Video" application on your smartphone or tablet.

1. Turn on the camcorder and set the mode button to the "SET" position.
2. Touch the camcorder screen and select the Wi-Fi icon.
3. The Wi-Fi name (SSID: HDV) and password (PWD: 12345678) will be displayed on the screen.
4. Download the "D Video" app from Google Play (Android) or Apple App Store (iOS), or by scanning the QR code in the user manual.
5. Find the Wi-Fi network named "HDV" on your smartphone/tablet and enter the password.
6. Open the "D Video" app to remotely control the camcorder and view a real-time feed.

7. Press the "PHOTO" button on the camcorder to disconnect the Wi-Fi.
8. **Note:** The effective Wi-Fi distance is less than 9.8 feet (3 meters). This Wi-Fi function is for direct device-to-device connection and does not connect to a router.



Figure 4.2: Steps for connecting the camcorder to a smartphone or tablet via Wi-Fi using the "D Video" app.

## 4.6 Time-Lapse Video

The camcorder supports time-lapse video recording, allowing you to capture changes over time.

- You can set the interval between each shot to 1 second, 3 seconds, or 5 seconds.
- The camcorder will then compile these shots into a high-quality 4K time-lapse video.

# See Times Change with Time-Lapse Video



It can shoot a scene with a chosen interval 1sec, 3sec or 5sec between each shot and edit the sequence into a high-quality 4K time-Lapse video



Figure 4.3: Example of time-lapse video capturing changes in a city skyline from day to night.

## 4.7 Connecting to TV or Computer

You can connect your camcorder to a TV for playback or to a computer for file transfer and use as a webcam.

- **To TV:** Use the provided HDMI cable to connect the camcorder's HDMI output port to an HDMI input port on your television. Select the correct HDMI input on your TV to view the camcorder's display.
- **To Computer:** Use the provided USB cable to connect the camcorder to your computer. The camcorder can function as a mass storage device for file transfer or as a webcam. Press the "PHOTO" button on the camcorder to connect it as a webcam.

# Connect to the TV or Computer



Figure 4.4: Diagrams showing how to connect the camcorder to a TV via HDMI and to a computer via USB.

## 5. MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the camcorder body. For the lens, use a specialized lens cleaning cloth and solution. Avoid using abrasive cleaners or solvents.
- Battery Care:** Store batteries in a cool, dry place. Do not expose them to extreme temperatures. Charge batteries regularly, even if not in use, to maintain their lifespan.
- Storage:** When not in use for extended periods, remove the battery and store the camcorder in its carrying case in a dry, dust-free environment.

## 6. TROUBLESHOOTING

If you encounter issues with your ORDRO AC3 camcorder, please refer to the following common troubleshooting tips:

- Camcorder does not power on:** Ensure the battery is fully charged and correctly inserted. Try using a different charged battery.

- **Cannot record:** Check if an SD card is inserted and if it has sufficient free space. Ensure the card is not locked (write-protected).
- **Poor image/video quality:** Clean the lens. Ensure you are shooting in adequate lighting conditions. For 4K recording, ensure sufficient light.
- **Wi-Fi connection issues:** Ensure the camcorder is in "SET" mode and the Wi-Fi function is enabled. Verify the SSID and password. Make sure your smart device is within the 9.8 feet effective range. Remember, the Wi-Fi does not connect to a router.
- **No sound in recordings:** Check if the external microphone is properly connected and enabled in the settings. Ensure microphone volume is not muted.

If the problem persists, please contact ORDRO customer support.

## 7. SPECIFICATIONS

Feature	Specification
Brand	ORDRO
Model	HDR-AC3
Video Resolution	4K (2880x2160 @ 24FPS)
Photo Resolution	24.0 MP (5600x4200 interpolation)
Sensor Technology	CMOS (Sony IMX258, 13 MP)
Screen	3.1 inches IPS Capacitive Touchscreen, 270° Rotation
Digital Zoom	30X
Optical Zoom	1x Multiplier
Connectivity	Wi-Fi, USB, HDMI
Special Features	IR Night Vision, Time-Lapse, Webcam Function
Image Stabilization	Dynamic
Max Focal Length	72 Millimeters
Min Focal Length	39 Millimeters
Aperture	f/22
Memory Card Type	SDHC (up to 128GB capacity)
Battery Composition	Lithium-ion (2 included)
Weight	380 Grams
Dimensions (L x W x H)	37.5 x 26.5 x 9 cm

## 8. WARRANTY AND SUPPORT

Specific warranty details for the ORDRO 4K Camcorder AC3 are not provided in the product information. For warranty claims, technical support, or inquiries regarding spare parts, please contact the seller (ORDRO UK) or the manufacturer directly.

Please retain your proof of purchase for any warranty-related services.

## Related Documents - HDR-AC3

<p><b>Camera</b></p> <p>Thank you for purchasing the ORDRO HDR-AC3 4K Camcorder. This camera features video recording at 4K/240P, 4K/60P, 1080P/120P, 1080P/60P, 720P/120P, 720P/60P, 1080P/30P, 720P/30P, and 1080P/24P, while also supporting 4K image capture. You can connect your camera to your smartphone directly to view the camera live and keep your phone charged or recording.</p> <p><b>Safety Instructions</b></p> <ul style="list-style-type: none"> <li>Do not drop, impact or puncture the camera.</li> <li>Do not use the camera in extremely hot or cold places, excessive heat handling or strong vibration, otherwise the product may be damaged.</li> <li>Do not use the camera in extremely humid environments to avoid the product.</li> <li>Do not allow the camera to come into contact with water or moisture in any manner. If there is any damage to the camera, stop using the camera and contact the product manufacturer or distributor. The manufacturer or distributor will be entitled to the company and the customer.</li> <li>Keep children away from the product, accessories and the packaging materials, it may cause suffocation.</li> <li>Do not use the camera in extremely explosive environments to avoid an explosion.</li> <li>Remove the battery when the camera is not going to be used for long periods, and please fully charge the battery before using it again.</li> </ul>	<h2>ORDRO HDR-AC3 4K Camcorder User Manual</h2> <p>User manual for the ORDRO HDR-AC3 4K Camcorder, detailing its features, operation, and technical specifications. Learn how to use the camera, connect it to devices, and utilize its various modes and settings.</p>				
<p><b>Smartphone</b></p> <p>Thank you for purchasing the product ORDRO EP8. By connecting the smartphone, you can make 4K UHD videos and photos through bottom and controllers. Besides, you can download a special App to control the camera. You can also connect the camera to WiFi, using the App to record videos and photos, after connecting to WiFi. You can also download the app and share them to your social platforms.</p> <table border="1" data-bbox="128 880 290 1044"> <tr> <td><b>Safety</b></td> <td><b>Warning</b></td> </tr> <tr> <td> <ul style="list-style-type: none"> <li>Do not let the camera come into contact with water or moisture in any manner. If there is any damage to the camera, stop using the camera and contact the product manufacturer or distributor. The manufacturer or distributor will be entitled to the company and the customer.</li> <li>Keep children away from the product, accessories and the packaging materials, it may cause suffocation.</li> <li>Do not use the camera in extremely explosive environments to avoid an explosion.</li> <li>Remove the battery when the camera is not going to be used for long periods, and please fully charge the battery before using it again.</li> </ul> </td> <td> <ul style="list-style-type: none"> <li>Do not drop or let the camera fall from a height, as the lens and sensor are very sensitive to impact. If the camera is dropped or let fall from a height, it may cause damage to the camera and the lens.</li> <li>Do not use the camera in extremely hot or cold places, excessive heat handling or strong vibration, otherwise the product may be damaged.</li> <li>Do not use the camera in extremely humid environments to avoid the product.</li> <li>Do not allow the camera to come into contact with water or moisture in any manner. If there is any damage to the camera, stop using the camera and contact the product manufacturer or distributor. The manufacturer or distributor will be entitled to the company and the customer.</li> <li>Do not use the camera in extremely explosive environments to avoid an explosion.</li> <li>Do not place the camera in direct sunlight or near a heat source, as the camera may overheat.</li> </ul> </td> </tr> </table>	<b>Safety</b>	<b>Warning</b>	<ul style="list-style-type: none"> <li>Do not let the camera come into contact with water or moisture in any manner. If there is any damage to the camera, stop using the camera and contact the product manufacturer or distributor. The manufacturer or distributor will be entitled to the company and the customer.</li> <li>Keep children away from the product, accessories and the packaging materials, it may cause suffocation.</li> <li>Do not use the camera in extremely explosive environments to avoid an explosion.</li> <li>Remove the battery when the camera is not going to be used for long periods, and please fully charge the battery before using it again.</li> </ul>	<ul style="list-style-type: none"> <li>Do not drop or let the camera fall from a height, as the lens and sensor are very sensitive to impact. If the camera is dropped or let fall from a height, it may cause damage to the camera and the lens.</li> <li>Do not use the camera in extremely hot or cold places, excessive heat handling or strong vibration, otherwise the product may be damaged.</li> <li>Do not use the camera in extremely humid environments to avoid the product.</li> <li>Do not allow the camera to come into contact with water or moisture in any manner. If there is any damage to the camera, stop using the camera and contact the product manufacturer or distributor. The manufacturer or distributor will be entitled to the company and the customer.</li> <li>Do not use the camera in extremely explosive environments to avoid an explosion.</li> <li>Do not place the camera in direct sunlight or near a heat source, as the camera may overheat.</li> </ul>	<h2>ORDRO EP8 Wearable Camcorder User Manual and Guide</h2> <p>Comprehensive user manual for the ORDRO EP8 wearable FPV camcorder. Covers setup, operation, features, troubleshooting, technical specifications, and app usage.</p>
<b>Safety</b>	<b>Warning</b>				
<ul style="list-style-type: none"> <li>Do not let the camera come into contact with water or moisture in any manner. If there is any damage to the camera, stop using the camera and contact the product manufacturer or distributor. The manufacturer or distributor will be entitled to the company and the customer.</li> <li>Keep children away from the product, accessories and the packaging materials, it may cause suffocation.</li> <li>Do not use the camera in extremely explosive environments to avoid an explosion.</li> <li>Remove the battery when the camera is not going to be used for long periods, and please fully charge the battery before using it again.</li> </ul>	<ul style="list-style-type: none"> <li>Do not drop or let the camera fall from a height, as the lens and sensor are very sensitive to impact. If the camera is dropped or let fall from a height, it may cause damage to the camera and the lens.</li> <li>Do not use the camera in extremely hot or cold places, excessive heat handling or strong vibration, otherwise the product may be damaged.</li> <li>Do not use the camera in extremely humid environments to avoid the product.</li> <li>Do not allow the camera to come into contact with water or moisture in any manner. If there is any damage to the camera, stop using the camera and contact the product manufacturer or distributor. The manufacturer or distributor will be entitled to the company and the customer.</li> <li>Do not use the camera in extremely explosive environments to avoid an explosion.</li> <li>Do not place the camera in direct sunlight or near a heat source, as the camera may overheat.</li> </ul>				
<p><b>Table of Contents</b></p> <ul style="list-style-type: none"> <li>Camcorder And Accessories ..... 1</li> <li>Components Guide ..... 2</li> <li>Charging The Camera ..... 3</li> <li>Using A Memory Card ..... 4</li> <li>Start Using ..... 5</li> <li>Recording ..... 10</li> <li>System Setting ..... 14</li> <li>Connecting To A Computer ..... 16</li> <li>APP ..... 17</li> <li>FAQs ..... 18</li> <li>Parts And Solutions ..... 20</li> <li>Technical Specifications ..... 22</li> </ul>	<h2>ORDRO M5 Camcorder User Manual: Setup, Operation, and Features</h2> <p>Comprehensive guide for the ORDRO M5 camcorder, covering accessories, operation, video/photo modes, system settings, connectivity, troubleshooting, and technical specifications.</p>				
<p><b>Table of Contents</b></p> <ul style="list-style-type: none"> <li>● カメラとアクセサリー ..... 1</li> <li>● バッテリと充電 ..... 2</li> <li>● バッテリ充電 ..... 3</li> <li>● メモリカード ..... 4</li> <li>● リモート操作 ..... 5</li> <li>● 機材 ..... 6</li> <li>● 撮影 ..... 8</li> <li>● ビデオ撮影モード ..... 9</li> <li>● 写真撮影モード ..... 10</li> <li>● フルHD撮影 ..... 11</li> <li>● フルHD撮影 ..... 12</li> <li>● フルHD撮影 ..... 13</li> <li>● フルHD撮影 ..... 14</li> <li>● フルHD撮影 ..... 15</li> <li>● フルHD撮影 ..... 16</li> <li>● フルHD撮影 ..... 17</li> <li>● フルHD撮影 ..... 18</li> <li>● フルHD撮影 ..... 19</li> <li>● フルHD撮影 ..... 20</li> <li>● フルHD撮影 ..... 21</li> </ul>	<h2>ORDRO M5 Video Camera User Manual</h2> <p>A comprehensive user guide for the ORDRO M5 video camera, detailing its features, operation, setup, troubleshooting, and specifications. Learn how to record videos, capture photos, utilize Wi-Fi connectivity, and connect to your computer.</p>				
<p><b>Table of Contents</b></p> <ul style="list-style-type: none"> <li>Camcorder And Accessories ..... 1</li> <li>Buttons And Operation Overview ..... 2</li> <li>Charging The Camera ..... 4</li> <li>Using A Memory Card ..... 5</li> <li>Start Using ..... 6</li> <li>Video Recording Operation ..... 8</li> <li>Photo Recording Operation ..... 11</li> <li>Playback ..... 14</li> <li>System Setting ..... 15</li> <li>Connecting To A Computer ..... 17</li> <li>APP ..... 18</li> <li>Q&amp;A ..... 21</li> <li>Parts And Solutions ..... 22</li> <li>Technical Specifications ..... 24</li> </ul>	<h2>ORDRO M5 Camcorder User Manual and Guide</h2> <p>Comprehensive user manual for the ORDRO M5 camcorder, covering setup, operation, features, troubleshooting, and technical specifications.</p>				

<b>Übersicht</b>
● Kamera und Zubehör.....
● Einleitung in Kamera-komponenten.....
● Kamera aufstellen.....
● Kamera mit Speicherkarte.....
● Verbinden Sie.....
● Wiederaufladen.....
● Systemvoraussetzungen.....
● Computer anschließen.....
● App herunterladen.....
● Häufig auftretende Probleme.....
● Fehlerbehandlung.....
● Technische Spezifikationen.....

## [ORDRO M5 Camera User Manual and Technical Specifications](#)

Comprehensive user manual for the ORDRO M5 camera, covering setup, features, modes, troubleshooting, and technical specifications. Learn how to charge, use memory cards, connect to a computer, and utilize the companion app.