

[Manuals.plus](#) /

› [BestMassage](#) /

› BestMassage Recliner Chair with 2-Point Lumbar Massage Function (Model AC207-Black) Instruction Manual

BestMassage AC207-Black

BestMassage Recliner Chair with 2-Point Lumbar Massage Function

Model: AC207-Black

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your BestMassage Recliner Chair with 2-Point Lumbar Massage Function. Please read this manual thoroughly before use to ensure proper setup and safe operation. Keep this manual for future reference.



Image: The BestMassage Recliner Chair, black, shown in a modern living room environment.

IMPORTANT SAFETY INFORMATION

- **Maximum Weight Capacity:** This recliner chair is designed to support a maximum weight of 275 pounds (125 kg). Do not exceed this weight limit to prevent damage or injury.
- Ensure all components are securely fastened before use.
- Keep hands and feet clear of the reclining mechanism when adjusting the chair.
- Do not allow children to play on or around the recliner without adult supervision.
- Place the chair on a level, stable surface.
- Avoid placing the chair near heat sources or in direct sunlight for prolonged periods to prevent material degradation.

PACKAGE CONTENTS

Before beginning assembly, please verify that all parts are present and undamaged. If any parts are missing or damaged, contact customer support.

- Recliner Base (1)
- Backrest (1)
- Legs (4)
- Massage Remote Control (1)
- Power Adapter for Massage Function (1)

ASSEMBLY INSTRUCTIONS

Assembly of this recliner chair is designed to be quick and straightforward, typically taking less than 2 minutes with no tools required.

Step 1: Attach the Legs

Carefully turn the recliner base upside down. Screw the four legs into the designated threaded holes at the bottom corners of the base. Ensure they are tightened securely.

Step 2: Connect the Backrest

Align the metal brackets on the backrest with the corresponding slots on the recliner base. Slide the backrest down firmly until it clicks into place. Ensure both sides are fully engaged and the backrest is stable.



Image: Diagram illustrating the simple two-step assembly process: attaching legs and sliding the backrest into the base.

Step 3: Connect Power for Massage Function

Locate the power cable for the massage function, usually found in a pouch on the side or back of the chair. Connect it to the provided power adapter, then plug the adapter into a standard electrical outlet.

OPERATING INSTRUCTIONS

Reclining the Chair

To recline, apply gentle pressure to the backrest while pushing back with your body. The chair features a smooth push-back reclining mechanism, allowing adjustment from approximately 95° to 160°. To return to an upright position, lean forward and push the footrest down with your legs.

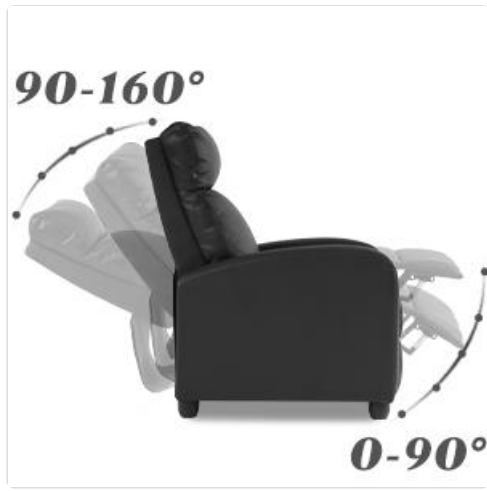


Image: Illustration demonstrating the adjustable reclining angles of the chair, from upright to fully reclined.

Using the Massage Function

Your recliner is equipped with a 2-point vibration massage function targeting the lumbar area, offering 8 customizable modes. Use the wired remote control to operate the massage features.



Image: The recliner's lumbar area highlighting the two massage points, with the massage remote control visible.



Image: A close-up of the massage remote control, detailing buttons for massage modes, intensity, timer, and power on/off.

- **Power On/Off:** Press the power button (usually marked with a circle and a vertical line) to turn the massage function

on or off.

- **Massage Modes:** Use the "Massage Modes Selection" buttons (numbered 1-8) to choose your desired vibration pattern.
- **Massage Intensity:** Adjust the intensity of the vibration using the "+" and "-" buttons.
- **Timer:** Set the massage duration using the timer buttons (e.g., 15, 30 minutes).

MAINTENANCE AND CARE

- **Cleaning:** Wipe the faux leather upholstery with a clean, damp cloth. For tougher stains, use a mild soap solution and wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.



Image: A hand demonstrating how to wipe clean the faux leather surface of the recliner.

- **Mechanism Care:** Periodically check all bolts and screws to ensure they are tight. Lubricate moving parts of the reclining mechanism if necessary, using a silicone-based lubricant.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause the faux leather to fade or crack.
- **Spills:** Clean spills immediately to prevent staining.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not recline smoothly.	Reclining mechanism is stiff or obstructed.	Check for any obstructions under the chair. Apply a silicone-based lubricant to moving parts if needed.
Massage function does not work.	Power adapter not connected or faulty; remote control issue.	Ensure the power adapter is securely plugged into both the chair and the wall outlet. Check for any damage to the remote control cable.
Chair feels unstable or wobbly.	Legs or backrest not securely attached.	Verify that all four legs are tightly screwed in. Ensure the backrest is fully engaged in its slots.

SPECIFICATIONS

Feature	Detail
Brand	BestMassage
Model Number	AC207-Black
Color	Black
Material	Faux Leather, Foam (Fill Material), Wood (Frame)
Product Dimensions (D x W x H)	33"D x 26"W x 39"H
Item Weight	52 Pounds (23.6 kg)
Maximum Weight Recommendation	275 Pounds (125 kg)
Reclining Positions	Adjustable from 95° to 160°
Massage Function	2-point vibration (lumbar), 8 modes
Assembly	Easy Assembly (No tools required)



Image: Detailed dimensions of the recliner chair, including height, width, and depth, and lie-flat size.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact BestMassage customer service directly. Please have your model number (AC207-Black) and purchase date available when contacting support.

Online Resources: You may find additional support and FAQs on the official BestMassage website.

© 2026 BestMassage. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question