

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [FCXJTU](#) /

› [FCXJTU Digital Kitchen Timer User Manual](#)

## FCXJTU YS316

# FCXJTU Digital Kitchen Timer User Manual

Model: YS316

Brand: FCXJTU

## 1. PRODUCT OVERVIEW

The FCXJTU Digital Kitchen Timer (Model YS316) is a versatile and user-friendly device designed to assist with various timing needs in the kitchen and beyond. It functions as both a count-up and count-down timer, supporting durations up to 9 hours, 99 minutes, and 99 seconds. Key features include a large, easy-to-read LCD display, direct digit input for quick setting, an adjustable loud alarm, and multiple placement options.



Figure 1: Front view of the FCXJTU Digital Kitchen Timer, showcasing its large digital display and intuitive numeric keypad for easy time input.

## 2. SETUP

### 2.1 Battery Installation

The timer requires 2 AAA batteries (included). To install or replace batteries:

1. Locate the battery compartment on the back of the timer.
2. Slide open the battery compartment cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+ and -).
4. Close the battery compartment cover securely.

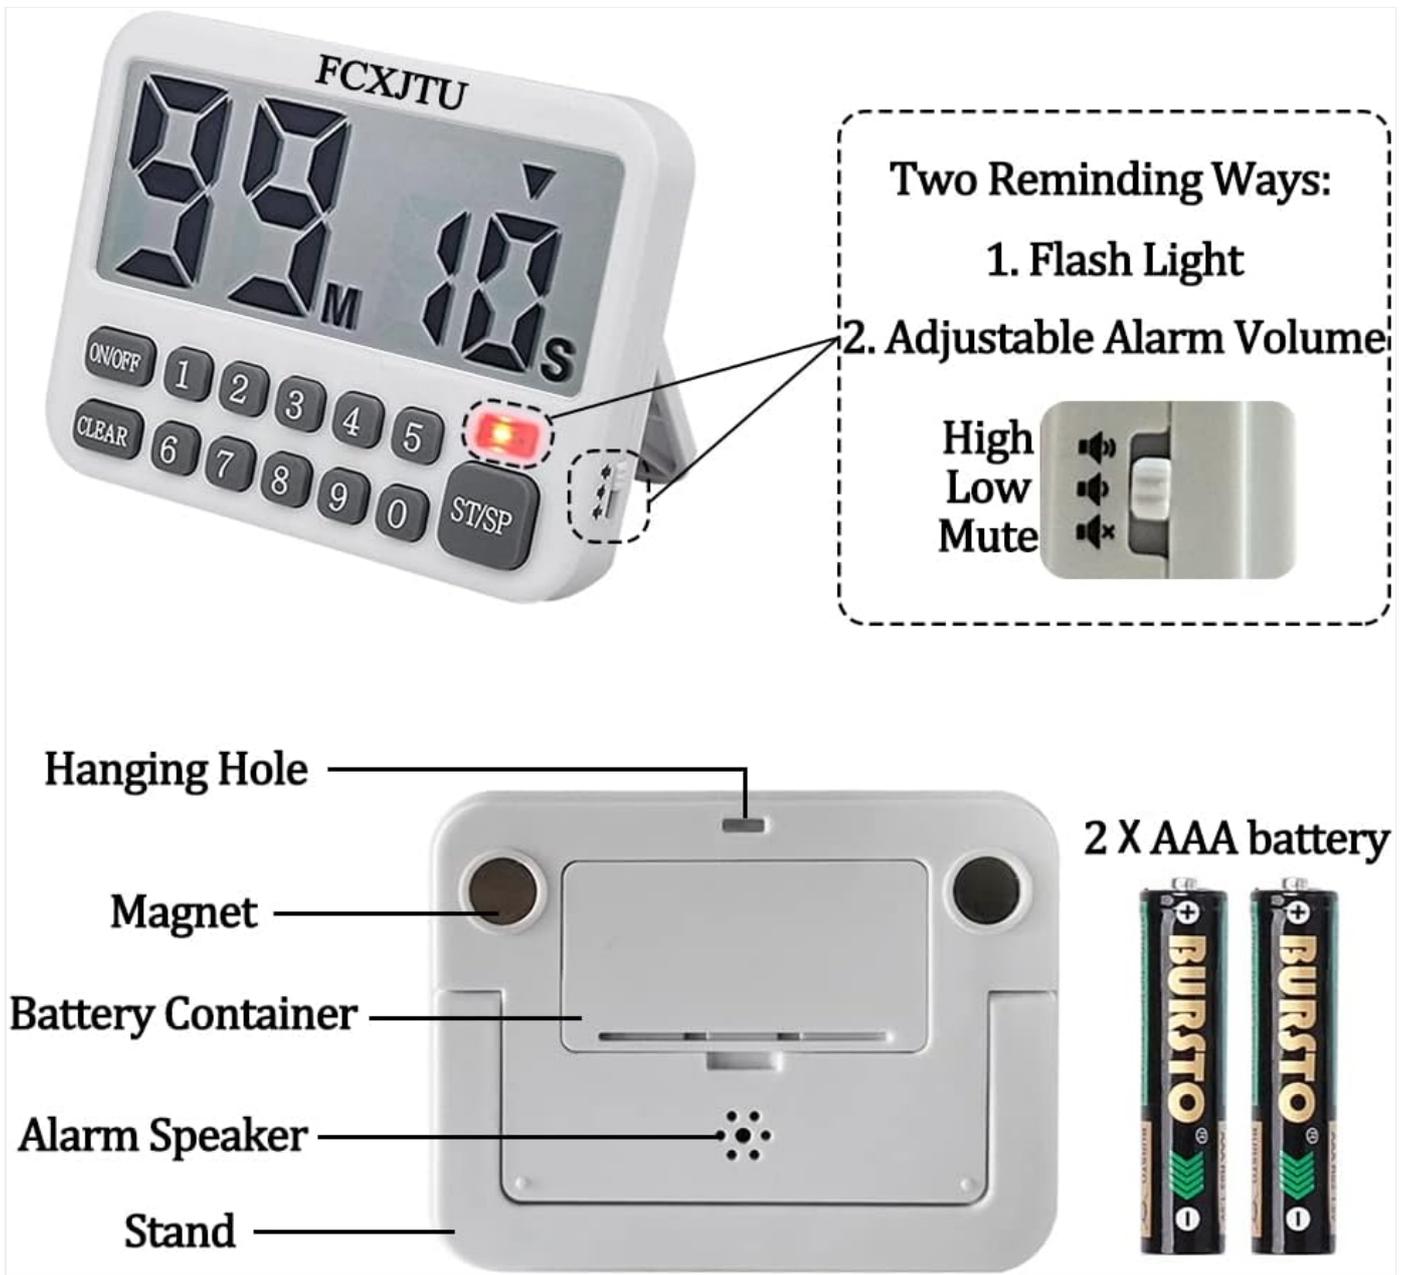


Figure 2: Rear view of the timer, highlighting the battery compartment, integrated magnets, and retractable stand.

## 2.2 Placement Options

The FCXJTU Digital Kitchen Timer offers multiple convenient placement options:

- **Magnetic Back:** Strong magnets allow attachment to metal surfaces like refrigerators or oven doors.
- **Retractable Stand:** A built-in stand allows the timer to be placed upright on a countertop or table.
- **Lanyard Hole:** A small hole is provided for attaching the included lanyard, allowing for hanging or portability.



Figure 3: Examples of timer placement, including magnetic attachment to a refrigerator and freestanding on a countertop.

### 3. OPERATING INSTRUCTIONS

#### 3.1 Power ON/OFF

Press the **ON/OFF** button to turn the timer on or off. Turning the timer off helps conserve battery life.

#### 3.2 Setting the Timer (Countdown)

The timer allows for direct input of digits for quick and easy setting. The maximum countdown time is 9 hours, 99 minutes, and 99 seconds.

1. Ensure the timer is ON.
2. Use the numeric keypad (0-9) to input the desired time. For example, to set 1 hour, 30 minutes, and 00 seconds, press **1, 3, 0, 0, 0, 0**. The display will show "01:30:00".
3. Press the **ST/SP** (Start/Stop) button to begin the countdown.
4. To pause the countdown, press **ST/SP** again. Press it once more to resume.

5. To clear the set time, press the **CLEAR** button.

## Three Timing Modes



Figure 4: Illustration of the three timing modes: countdown, cycle countdown, and count-up.

### 3.3 Count-Up Function (Stopwatch)

To use the timer as a stopwatch (count-up function):

1. Ensure the timer is ON and the display shows "00:00:00". If not, press **CLEAR**.
2. Press the **ST/SP** button to start counting up.
3. To pause, press **ST/SP** again. Press it once more to resume.
4. To reset the count-up time to zero, press the **CLEAR** button while the timer is paused.

### 3.4 Alarm Settings

When the countdown reaches zero, the timer will sound an alarm and flash a red light. The alarm volume can be adjusted:

- Locate the volume switch on the side of the timer (refer to Figure 2).
- Slide the switch to select between **HIGH**, **LOW**, or **MUTE** alarm volume.

The flashing red light provides a visual alert, useful in noisy environments or when the alarm is muted.



***Louder Sound Alarm !!!***

***No More Overcook***

***Relax and Take a break***

Figure 5: The timer's loud alarm feature, designed to be heard across rooms, preventing overcooking.

### 3.5 Memory Function

The timer automatically stores the last set countdown time. To recall the last set time, simply press the **M** (Memory) button. This is convenient for repetitive tasks.

## 4. MAINTENANCE

To ensure the longevity and optimal performance of your FCXJTU Digital Kitchen Timer:

- Clean the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- Avoid exposing the timer to extreme temperatures or direct sunlight for prolonged periods.
- Remove batteries if the timer will not be used for an extended period to prevent battery leakage.

## 5. TROUBLESHOOTING

If you encounter issues with your timer, try the following common solutions:

- **Timer not turning on:** Check if the batteries are correctly installed and have sufficient charge. Replace batteries if

necessary.

- **Display is dim or blank:** This usually indicates low battery. Replace the AAA batteries.
- **Alarm is not sounding:** Check the volume switch on the side of the timer and ensure it is not set to **MUTE**.
- **Buttons are unresponsive:** Try removing and reinserting the batteries to reset the device.

## 6. SPECIFICATIONS

Feature	Detail
Brand	FCXJTU
Model	YS316
Color	White
Material	Plastic
Product Dimensions	2.76"D x 3.54"W x 0.67"H (70mm D x 90mm W x 17mm H)
Item Weight	1.92 ounces (0.12 Pounds)
Max Time Capacity	9 Hours, 99 Minutes, 99 Seconds
Power Source	2 x AAA Batteries (included)
Alarm Volume	Adjustable (High/Low/Mute)
Display Type	Large LCD with Big Digits
UPC	729257995524

# Attractive Feature



3.5 in/ 89 mm



2.7 in  
69 mm

0.71 in/18 mm



**ON/OFF: Save the battery life**



**Digit Key: Easy to set, easy to use**



**Large Screen and Digit: Easy to read**

Figure 6: Detailed dimensions of the FCXJTU Digital Kitchen Timer.

## 7. WARRANTY AND SUPPORT

For detailed warranty information or further assistance, please refer to the official user manual PDF available online or contact FCXJTU customer support.

Official User Manual (PDF): [Download PDF](#)

