

[manuals.plus](#) /› [GOURMETmaxx](#) /› [GOURMETmaxx Digital XXL Air Fryer 9 Liters Instruction Manual](#)

GOURMETmaxx GOURMETmaxx Digital XXL Friteuse

GOURMETmaxx Digital XXL Air Fryer 9 Liters Instruction Manual

1. INTRODUCTION

Welcome to your new GOURMETmaxx Digital XXL Air Fryer. This versatile appliance combines an air fryer, electric oven, and rotisserie grill, offering a healthy and efficient way to prepare a wide variety of meals with significantly less fat. It is designed for frying, grilling, dehydrating, roasting, gratinating, baking, defrosting, heating, and keeping food warm.

Important Safety Information

Please read this instruction manual thoroughly before using the appliance for the first time. Keep these instructions for future reference. Failure to follow these safety guidelines may result in electric shock, fire, or serious injury.

- Always place the appliance on a stable, level, and heat-resistant surface.
- Ensure adequate ventilation around the appliance during operation. Do not block any ventilation openings.
- Do not immerse the main unit, power cord, or plug in water or any other liquid.
- Keep the appliance and its cord out of reach of children.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Use only accessories recommended by the manufacturer.
- Do not touch hot surfaces. Use oven mitts or handles.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.

2. PRODUCT OVERVIEW

Main Unit




The GOURMETmaxx Digital XXL Air Fryer features a spacious 9-liter capacity, allowing for preparation of larger meals. It includes a transparent viewing window to monitor cooking progress without opening the door. The robust red plastic housing ensures durability.

Control Panel



The appliance is equipped with a large digital display and a touch screen for maximum ease of use. A convenient rotary dial allows for manual adjustments to temperature and timer settings. The intuitive interface provides access to various cooking functions and pre-set programs.

Included Accessories

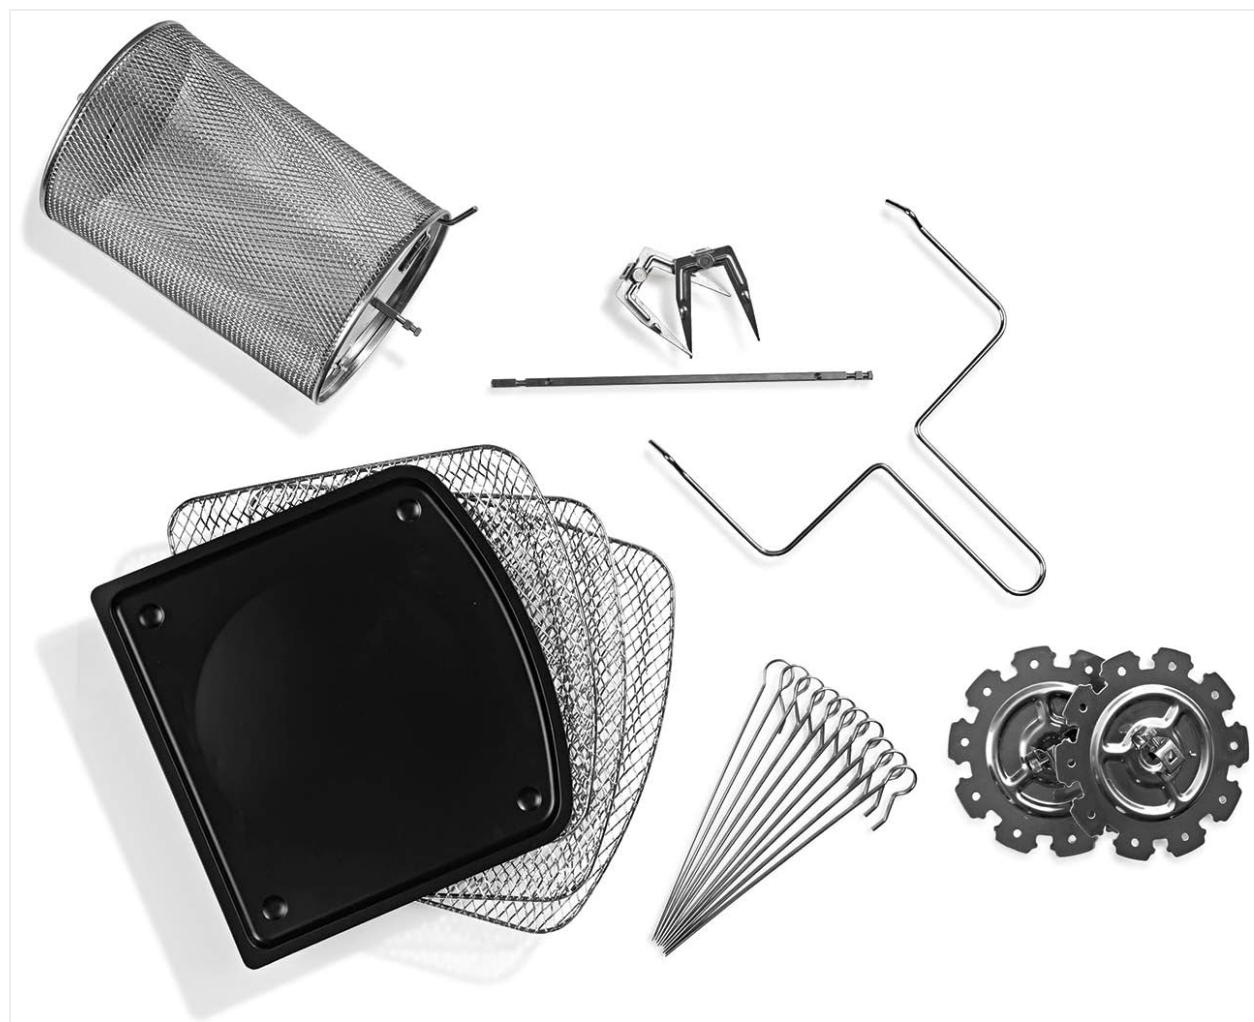

Your GOURMETmaxx Digital XXL Air Fryer comes with a range of accessories to enhance your cooking experience:

- **Mesh Basket:** Ideal for fries, popcorn, or other small items that require tumbling for even cooking.
- **Rotisserie Spit:** For roasting whole chickens or larger cuts of meat.
- **Shashlik Skewers:** For preparing delicious kebabs.
- **Cooking Racks:** Multi-level racks for dehydrating, baking, or cooking multiple items simultaneously.
- **Drip Tray:** Collects excess fat and liquids, making cleanup easier.

3. SETUP

Unpacking

- Carefully remove the appliance and all accessories from the packaging.
- Remove any protective films or stickers.
- Inspect the appliance for any signs of damage. Do not use if damaged.
- Retain the original packaging for storage or transport.

First Use Cleaning

- Before first use, clean all removable accessories (mesh basket, rotisserie spit, skewers, cooking racks, drip tray) with warm water and a mild dishwashing detergent. Rinse thoroughly and dry completely.
- Wipe the interior and exterior of the main unit with a damp cloth. Do not use abrasive cleaners.

Placement

- Place the air fryer on a stable, level, and heat-resistant surface.
- Ensure there is at least 10-15 cm (4-6 inches) of clear space on all sides and above the appliance for proper air circulation.
- Do not place the appliance near flammable materials or heat sources.

4. OPERATING INSTRUCTIONS

Basic Operation

- **Power On:** Plug the appliance into a grounded power outlet. The display will illuminate.
- **Setting Temperature and Time:** Use the touch screen icons or the rotary dial to adjust the desired cooking temperature and time. The temperature range is typically between 80°C and 200°C (175°F - 400°F), and the timer can be set up to 60 minutes for most functions, or longer for dehydrating.
- **Start/Stop:** Press the 'Start/Stop' button to begin or pause the cooking process.
- **Monitoring:** Use the viewing window to check food progress.

Pre-set Programs

The GOURMETmaxx Digital XXL Air Fryer features 8 pre-installed programs designed for common dishes. These programs automatically set optimal temperature and time for items such as fries, meat, fish, and more. Select the desired program by touching the corresponding icon on the digital display. You can typically adjust the time and temperature of pre-set programs manually if needed.

Using the Rotisserie Function



The rotisserie function is ideal for evenly cooking whole chickens, roasts, or shashlik skewers. To use:

- **For Whole Chicken/Roast:** Secure the food onto the rotisserie spit using the forks. Ensure it is balanced.
- **For Shashlik:** Thread your ingredients onto the shashlik skewers, then attach the skewers to the rotisserie frame.
- Insert the assembled rotisserie into the appliance's designated slots.
- Select the appropriate cooking program or manually set the temperature and time. Activate the rotation function (usually a dedicated button on the control panel).

Dehydrating Function



The dehydrating function allows you to preserve fruits, vegetables, and meats. Use the cooking racks to spread out your items in a single layer. Set the temperature to a low setting (e.g., 40-70°C / 105-160°F) and the timer for several hours, depending on the food type and desired dryness. Refer to specific dehydrating guides for optimal results.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your appliance. Always unplug the air fryer and allow it to cool completely before cleaning.

- **Interior and Accessories:** The grease collection tray is removable and dishwasher-safe for convenient cleaning. All other removable accessories (mesh basket, rotisserie spit, skewers, cooking racks) can be washed with warm water and a mild dishwashing detergent. Use a non-abrasive sponge or brush. Rinse thoroughly and dry completely before reassembling.
- **Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use harsh chemicals, abrasive cleaning pads, or scouring agents, as these can damage the surface.
- **Heating Element:** Gently clean the heating element with a soft brush if necessary, ensuring the appliance is unplugged and cool.
- **Do Not Immerse:** Never immerse the main unit of the air fryer in water or any other liquid.

6. TROUBLESHOOTING

If you encounter issues with your GOURMETmaxx Digital XXL Air Fryer, please consult the following common troubleshooting steps:

- **Appliance Not Turning On:**
 - Ensure the power cord is securely plugged into a functional electrical outlet.
 - Check your household's circuit breaker.
- **Food Not Cooking Evenly:**
 - Do not overload the basket or racks. Cook in smaller batches if necessary.
 - For items like fries, shake the mesh basket or rotate the food on racks halfway through cooking.
 - Ensure accessories are correctly positioned.
- **White Smoke Emitting from Appliance:**
 - This is usually caused by fat residue from previous use. Clean the appliance and accessories thoroughly.
 - Ensure the drip tray is in place to catch excess fat.
- **Appliance Emits Burning Smell:**
 - This can occur during the first few uses as manufacturing residues burn off. It should dissipate quickly.
 - If the smell persists or is strong, unplug the appliance and contact customer support.

If the problem persists after trying these steps, please contact GOURMETmaxx customer support.

7. SPECIFICATIONS

- **Brand:** GOURMETmaxx
- **Model Number:** GOURMETmaxx Digital XXL Friteuse
- **Color:** Red
- **Product Dimensions (L x W x H):** 36.5 x 32 x 35 cm (14.37 x 12.6 x 13.78 inches)
- **Capacity:** 9 Liters
- **Volume:** 9 Liters
- **Power:** 1800 Watts
- **Voltage:** 240 Volts (AC)
- **Material:** Plastic
- **Special Feature:** Temperature Control
- **Item Weight:** 8.62 Kilograms (19 lbs)
- **Recommended Uses:** Air frying, roasting, baking, dehydrating

8. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the documentation included with your GOURMETmaxx Digital XXL Air Fryer. You may also visit the official GOURMETmaxx website or contact their customer service department directly for assistance. Please have your model number and

purchase date available when contacting support.

Related Documents - GOURMETmaxx Digital XXL Friteuse

| | |
|--|---|
|  <p>GOURMETmaxx Digitale Heißluft-Fritteuse 10407</p> <p>DE Gebrauchsanleitung EN Operating Instructions</p> <p>FR Mode d'emploi NL Gebruiksaanwijzing</p> | <p><u>GOURMETmaxx Digitale Heißluft-Fritteuse 10407: Bedienungsanleitung & Tipps</u> Umfassende Bedienungsanleitung für die GOURMETmaxx Digitale Heißluft-Fritteuse (Modell 10407). Erfahren Sie alles über Programme, sichere Anwendung, Reinigung und Fehlerbehebung für Ihr Küchengerät.</p> |
|  <p>GourmetMaxx Double Chamber Hot Air Fryer Operating Instructions</p> | <p>Comprehensive operating instructions for the GourmetMaxx Double Chamber Hot Air Fryer, covering setup, usage, safety, troubleshooting, and technical specifications. Learn how to use its 10 preset programs for grilling, frying, baking, and more.</p> |
|  <p>GOURMETmaxx FryUp Vertical Double Chamber Hot Air Fryer - User Manual</p> | <p>Comprehensive user manual for the GOURMETmaxx FryUp Vertical Double Chamber Hot Air Fryer, model ZHAF-960A. Includes setup, operation, safety instructions, cleaning, troubleshooting, and technical specifications.</p> |
|  <p>Gourmetmaxx Digital Air Fryer 15021 Operating Instructions</p> | <p>This document provides operating instructions for the Gourmetmaxx Digital Air Fryer 15021. It covers safety information, intended use, device components, operating procedures, cleaning, and disposal.</p> |
|  <p>GOURMETMAXX Heißluftfritteuse 19170</p> <p>DE Gebrauchsanleitung IT Operating Instructions</p> | <p><u>GOURMETMAXX 19170 Air Fryer Operating Instructions</u> User manual for the GOURMETMAXX 19170 Air Fryer, providing detailed instructions on setup, operation, safety precautions, cleaning, and technical specifications.</p> |
|  <p>GourmetMaxx Double Chamber Air Fryer Operating Instructions</p> | <p>Operating instructions for the GourmetMaxx Double Chamber Air Fryer (11339/12459). Includes important safety notices and product information.</p> |