

[Manuals.plus](#) /

› [Gemini Sound](#) /

› Gemini 5-Channel Bluetooth Audio Mixer (GEM-05USB) Instruction Manual

Gemini Sound GEM-05USB

Gemini 5-Channel Bluetooth Audio Mixer (GEM-05USB) Instruction Manual

Model: GEM-05USB | Brand: Gemini Sound

1. INTRODUCTION

The Gemini GEM-05USB is an ultra-compact 5-channel analog mixer designed for various audio applications, including podcasting, fitness instruction, home studios, DJing, and karaoke. Its small footprint and low-noise design provide professional-grade audio routing in a portable form factor. This manual provides detailed instructions for setting up, operating, and maintaining your GEM-05USB mixer.



Image: The Gemini GEM-05USB mixer connected to a microphone and headphones, ready for use.

2. SAFETY INFORMATION

Please read and understand all safety instructions before operating this device. Retain this manual for future reference.

- **Power Source:** Use only the specified power adapter. Ensure the voltage matches the requirements of your region.
- **Water and Moisture:** Do not expose the unit to rain or moisture. Do not place objects filled with liquids on the unit.
- **Ventilation:** Ensure proper ventilation. Do not block ventilation openings.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- **Cleaning:** Clean only with a dry cloth.
- **Servicing:** Do not attempt to service this unit yourself. Refer all servicing to qualified service personnel.

- **Secure Connection:** The secure screw-on aviation-style power plug prevents accidental disconnects. Ensure it is properly fastened.

3. PACKAGE CONTENTS

Verify that all items are present in the package:


- Gemini GEM-05USB Mixer
- Power Adapter
- Instruction Manual

4. PRODUCT OVERVIEW AND CONTROLS

The GEM-05USB features a user-friendly, color-coded, and clearly labeled interface for intuitive operation. Below is an overview of the main sections and controls.

SOUND CUSTOMIZATION

Perfectly tuned for you - your sound, your way

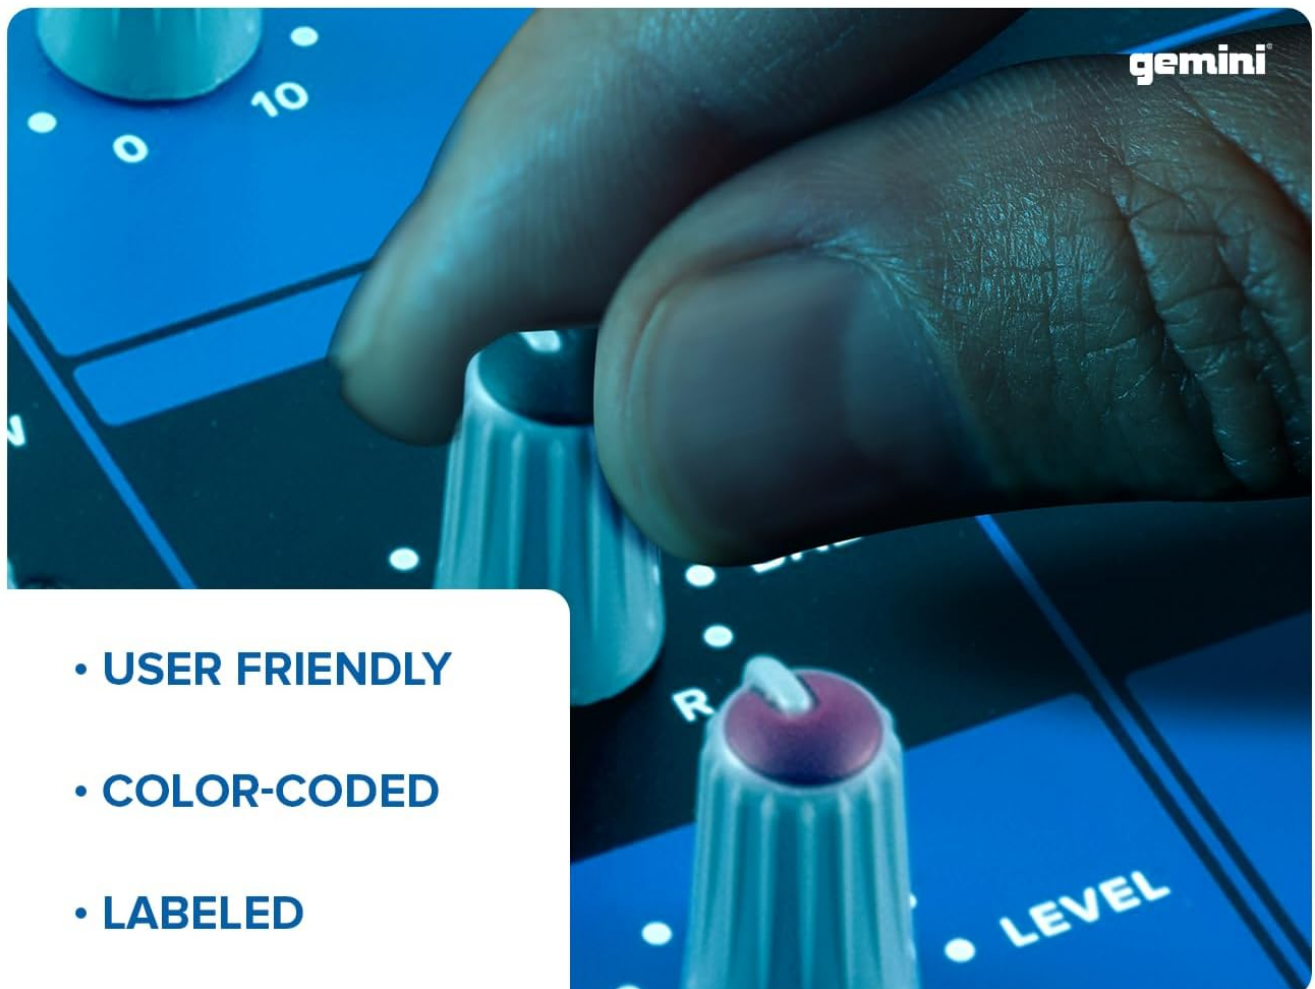

- **USER FRIENDLY**
- **COLOR-CODED**
- **LABELED**

Image: Detailed view of the mixer's controls, highlighting user-friendly design.

4.1 Input Channels

- **Microphone Input (MIC 1):** XLR input with +48V Phantom Power for condenser microphones.
- **Line Inputs (LINE 2/3, LINE 4/5):** 1/4" (6.35mm) TRS/TS inputs for connecting instruments or line-level devices.
- **Gain Control:** Adjusts the input sensitivity for each channel.
- **EQ (High, Low):** 2-band equalizer for shaping the tone of each channel.
- **Level Control:** Adjusts the output volume of each channel to the main mix.
- **Pan/Balance:** Adjusts the stereo position of the channel.

4.2 Main Section

- **Main Output (MAIN OUT):** Dual 1/4" (6.35mm) outputs for connecting to speakers or an amplifier.
- **REC OUT:** RCA outputs for recording the main mix.
- **2TK IN:** RCA inputs for connecting an external playback device (e.g., CD player).
- **Headphone Output (PHONES):** 1/4" (6.35mm) output with dedicated volume control for monitoring.
- **Main Level Fader:** Controls the overall output volume of the main mix.
- **Power LED:** Indicates when the unit is powered on.
- **Clip LED:** Indicates when the signal is too high and clipping.

4.3 Media Player Section (USB/Bluetooth)

- **USB Port:** For playing MP3/WAV files from a USB stick.
- **Bluetooth Button:** Activates Bluetooth pairing mode.
- **Media Player Controls:** Play/Pause, Skip Track, Mode selection.
- **Level Control:** Adjusts the volume of the USB/Bluetooth media player.

4.4 Effects Section

- **Delay Effect:** Onboard adjustable delay effect for vocals or instruments.
- **FX Send:** Controls the amount of signal sent to the internal effects processor.
- **FX Return:** Controls the amount of the processed effect signal returned to the main mix.

5. SETUP


Follow these steps to set up your Gemini GEM-05USB mixer:

1. **Power Connection:** Connect the included power adapter to the DC 15V input on the rear of the mixer. Secure the aviation-style plug by screwing it in. Plug the adapter into a suitable power outlet.
2. **Main Output Connection:** Connect your main speakers or amplifier to the **MAIN OUT (L/R)** 1/4" jacks.
3. **Headphone Connection:** Connect your headphones to the **PHONES** 1/4" jack for monitoring.
4. **Microphone Connection:** For condenser microphones, connect to the **MIC 1** XLR input. Ensure the +48V Phantom Power switch is engaged if your microphone requires it. For dynamic microphones, connect to the **MIC 1** XLR input without engaging phantom power.
5. **Line-Level Device Connection:** Connect instruments or other line-level devices to the **LINE 2/3** or **LINE 4/5** 1/4" inputs.
6. **External Playback Device:** If using an external playback device (e.g., CD player), connect it to the **2TK IN** RCA inputs.

7. **Initial Settings:** Before powering on, ensure all channel level controls and the main level fader are set to their minimum positions.
8. **Power On:** Turn on the mixer using the power switch on the rear panel. The Power LED will illuminate.

CONNECTIVITY

Connect all seamlessly and conquer anywhere

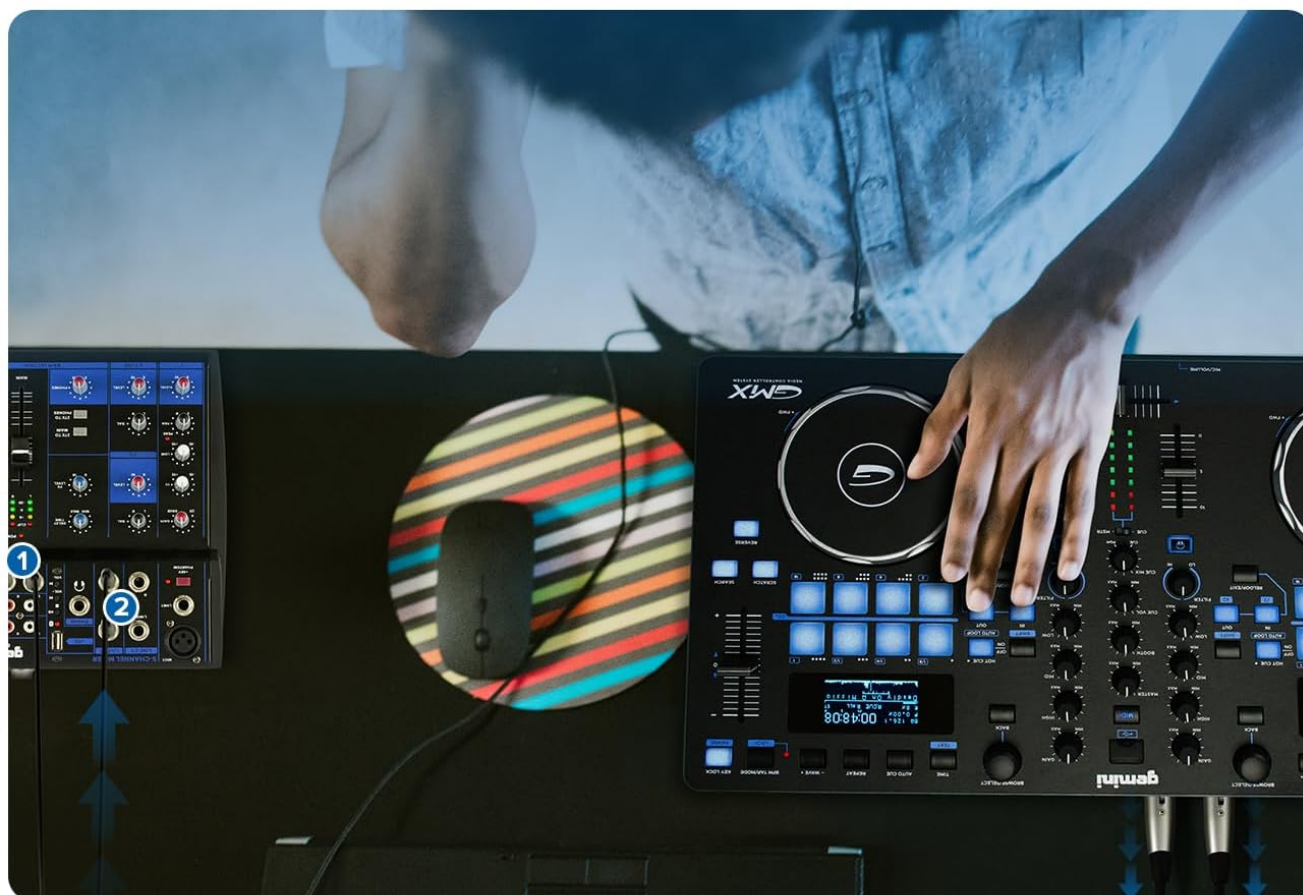

1 1/4" MAIN LINE OUTPUTS 2 1/4" STEREO LINE INPUTS

gemini

Image: Connectivity options for the GEM-05USB, illustrating XLR, 1/4", and RCA inputs/outputs.

6. OPERATING INSTRUCTIONS

This section details the basic operation of your GEM-05USB mixer.

6.1 Adjusting Input Levels

1. Ensure the main level fader is at minimum.
2. Gradually increase the **GAIN** control for the desired input channel until the signal is strong but the **CLIP** LED only flashes occasionally during peak performance. Avoid constant clipping.
3. Slowly raise the channel's **LEVEL** control to send the signal to the main mix.
4. Adjust the **HIGH** and **LOW** EQ controls to shape the tone as desired.

6.2 Main Mix Adjustment

Once individual channel levels are set, slowly raise the **MAIN LEVEL** fader to achieve the desired overall output volume through your speakers. Use the **PHONES** volume control to adjust your headphone monitoring level independently.

6.3 Bluetooth Connectivity

The GEM-05USB allows wireless audio streaming from Bluetooth-enabled devices.

1. Press the **Bluetooth** button on the media player section. The Bluetooth indicator light will flash, indicating pairing mode.
2. On your smart device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "GEM-05USB" from the list of devices to pair. Once connected, the Bluetooth indicator will stop flashing and remain solid.
4. Play audio from your device. Adjust the media player's **LEVEL** control on the mixer.

WIRELESS FREEDOM

Unlock the possibilities without boundaries



Image: Illustrates wireless audio streaming via Bluetooth and USB media playback capabilities.

6.4 USB Media Playback

The mixer supports playing MP3 and WAV audio files directly from a USB flash drive.

1. Insert a USB flash drive containing MP3 or WAV files into the **USB** port.

2. The mixer will automatically detect the drive and begin playback. Use the media player controls (Play/Pause, Skip Track) to navigate your audio files.
3. Adjust the media player's **LEVEL** control on the mixer.

6.5 Using Phantom Power (+48V)

Phantom power is required for condenser microphones. Ensure it is only activated when a condenser microphone is connected to the XLR input.

- Connect your condenser microphone to the **MIC 1** XLR input.
- Locate the **+48V PHANTOM** switch (usually near the MIC 1 input).
- Engage the switch. The corresponding LED will illuminate, indicating phantom power is active.
- *Caution:* Do not activate phantom power for dynamic microphones or ribbon microphones unless specifically designed to handle it, as this can cause damage.

6.6 Applying Effects (Delay)

The GEM-05USB includes an adjustable delay effect.

1. For the desired channel, increase the **FX SEND** control to send signal to the internal delay effect.
2. Adjust the **DELAY TIME** and **MIN/MAX** controls in the effects section to customize the delay sound.
3. Increase the **FX RETURN** control to blend the processed effect signal back into the main mix.

7. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your mixer.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the mixer. Avoid abrasive cleaners or solvents.
- **Storage:** When not in use, store the mixer in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Cable Management:** Avoid bending or crimping cables excessively. Disconnect cables properly by pulling the plug, not the cable itself.
- **Dust Protection:** Consider using a dust cover when the mixer is not in use for extended periods.

8. TROUBLESHOOTING

If you encounter issues with your GEM-05USB mixer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No sound output	Power not connected or turned on. Main level fader or channel level controls are down. Speakers/amplifier not connected or turned on. Incorrect input/output connections.	Check power connection and switch. Increase main level fader and relevant channel level controls. Verify speaker/amplifier connections and power. Ensure cables are connected to correct inputs/outputs.
Distorted sound / Clipping	Input gain too high. Channel level or main level too high.	Reduce the GAIN control for the offending channel until the CLIP LED flashes only occasionally. Lower the channel LEVEL or MAIN LEVEL fader.
Hum or static noise	Ground loop issue. Faulty cable. Interference from other electronic devices.	Try connecting all audio equipment to the same power outlet. Test with different cables. Move the mixer away from power supplies, computers, or other noisy electronics.
Bluetooth not pairing	Mixer not in pairing mode. Device too far from mixer. Bluetooth already connected to another device.	Ensure the Bluetooth indicator is flashing. Press the Bluetooth button to re-enter pairing mode. Move your device closer to the mixer. Disconnect from other Bluetooth devices and try again.
USB playback not working	Unsupported file format. USB drive not properly inserted or corrupted.	Ensure files are MP3 or WAV format. Re-insert the USB drive. Try a different USB drive.

9. SPECIFICATIONS

Feature	Detail
Brand	Gemini Sound
Model	GEM-05USB
Number of Channels	5
Product Dimensions (D x W x H)	9.06"D x 7.09"W x 2.17"H
Item Weight	2 Pounds
Connectivity Technology	Bluetooth, USB
Power Source	Corded Electric (DC 15V)
Frequency Response	20 Hz (full range implied, typical for audio mixers)
Output Connector Type	RCA, 1/4" TRS

Feature	Detail
Audio Input Types	XLR, 1/4" TRS/TS, RCA
Noise Level	80 Decibels
Phantom Power	+48V (switchable on MIC 1)
Included Components	Mixer, Power Adapter, Manual

10. WARRANTY AND SUPPORT

The Gemini GEM-05USB mixer comes with a standard manufacturer's warranty.

- **Warranty Period:** 1 year from the date of purchase.
- **Coverage:** This warranty covers defects in materials and workmanship under normal use.
- **Exclusions:** The warranty does not cover damage caused by misuse, accident, unauthorized modification, or improper installation.
- **Support:** For technical support or warranty claims, please contact Gemini Sound customer service. Refer to the official Gemini Sound website for contact information.

Optional extended protection plans may be available for purchase separately:

- 2-Year Protection Plan
- 3-Year Protection Plan

© 2026 Gemini Sound. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question