

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Adventure Force](#) /
- › [Adventure Force Dirt Bike & Rider Instruction Manual](#)

## Adventure Force 1

# Adventure Force Dirt Bike & Rider Instruction Manual

Model: 1 | Brand: Adventure Force

## 1. PRODUCT OVERVIEW

---

The Adventure Force Dirt Bike & Rider set brings the thrill of motocross to your playtime. This collectible set features a detailed dirt bike and a rider figure, designed to complement the Nitro Circus collection. Each set includes a dirt bike and a rider, with assorted colors available.



Image 1.1: Adventure Force Dirt Bike and Rider. This image displays a black and yellow dirt bike with a red-suited rider, posed on a small black display stand. The bike features "Nitro Circus" branding.



Image 1.2: Assorted Styles. This image shows three packaged Adventure Force Dirt Bike & Rider sets, highlighting the different color variations available: one with a red bike and rider, one with a green bike and rider, and one with a blue bike and rider. Each package indicates "Sound FX" and "Realistic Back Flip Action".

## 2. SAFETY INFORMATION

Please read all safety warnings before using this product. Keep these instructions for future reference.

- **WARNING: CHOKING HAZARD** – This product contains small parts and is not suitable for children under 3 years of age.
- Recommended for ages 5 and up.
- **Battery Safety:**
  - Do not mix old and new batteries.

- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Batteries should be inserted with the correct polarity.
- Remove exhausted batteries from the product.
- Remove batteries if the product is not to be used for an extended period.
- Do not short-circuit the supply terminals.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.

### 3. PACKAGE CONTENTS

---

Your Adventure Force Dirt Bike & Rider package should contain the following items:

- 1 x Adventure Force Dirt Bike (Assorted Color)
- 1 x Rider Figure
- 1 x LR44 Battery (pre-installed)

### 4. SETUP

---

#### 4.1. Battery Installation/Replacement

The Adventure Force Dirt Bike comes with one LR44 battery pre-installed. If the sound effects become weak or stop working, it's time to replace the battery.

1. Locate the battery compartment on the underside of the dirt bike.
2. Using a small Phillips head screwdriver (not included), carefully unscrew the battery compartment cover.
3. Remove the old LR44 battery. Dispose of it properly according to local regulations.
4. Insert a new LR44 battery, ensuring the positive (+) and negative (-) terminals are aligned correctly as indicated inside the compartment.
5. Replace the battery compartment cover and secure it with the screw.

*Note: Adult supervision is recommended for battery replacement.*

### 5. OPERATING INSTRUCTIONS

---

#### 5.1. Activating Motor Noises

The Adventure Force Dirt Bike features realistic motor noises to enhance playtime.

- To activate the motor noises, press the button located on the side of the dirt bike (exact location may vary slightly by model).
- The bike will emit realistic engine sounds.
- The rider figure can be posed on the bike for dynamic play scenarios.

### 6. MAINTENANCE

---

#### 6.1. Cleaning

To keep your Adventure Force Dirt Bike & Rider in good condition:

- Wipe the toy with a soft, damp cloth.
- Do not submerge the toy in water, as this can damage the electronic components.
- Avoid using harsh chemicals or abrasive cleaners.

## 6.2. Storage

When not in use, store the toy in a cool, dry place away from direct sunlight to prevent fading or damage.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or weak sound.	Batteries are low or incorrectly installed.	Replace the LR44 battery. Ensure correct polarity (+/-).
Toy does not respond.	Battery issue or internal malfunction.	Check/replace battery. If problem persists, contact customer support.

## 8. SPECIFICATIONS

<b>Model Number:</b>	1
<b>Brand:</b>	Adventure Force
<b>Material:</b>	Plastic
<b>Power Source:</b>	Battery Powered
<b>Battery Type:</b>	1 x LR44 (included)
<b>Item Weight:</b>	181 g
<b>Parcel Dimensions:</b>	20.9 x 17.5 x 6.71 cm
<b>Recommended</b>	
<b>Age:</b>	5+ Years
<b>Special Features:</b>	Portable, Realistic Motor Noises

## 9. WARRANTY AND SUPPORT

Adventure Force products are manufactured with quality and care. While specific warranty details are not provided in this manual, please retain your proof of purchase for any potential warranty claims.

For product support, inquiries, or to report any issues, please contact the manufacturer or retailer where the product was purchased. Refer to the product packaging for contact information or visit the official Adventure Force website.

*Note: Product styles and colors may vary.*