

## Ninja AOP205

# Ninja Foodi Tube Pan Instruction Manual

Models: OP300, OP400, FD400 Compatible

## 1. PRODUCT OVERVIEW

The Ninja Foodi Tube Pan (Model AOP205) is a specialized accessory designed to enhance baking performance within compatible Ninja Foodi pressure cookers. Its unique two-piece design and non-stick ceramic coating facilitate even cooking and easy food removal.



Image: The Ninja Foodi Tube Pan, featuring its two-piece construction and central tube for optimal heat distribution during baking.

## 2. KEY FEATURES

- **Optimized Capacity:** Designed to fit perfectly within Ninja Foodi Pressure Cookers (OP300, OP400, FD400 series), maximizing baking space.
- **Two-Piece Design:** Allows for effortless removal of baked goods, preventing damage and simplifying serving.
- **Enhanced Airflow:** The central tube design promotes cyclonic airflow, contributing to even cooking and consistent results.
- **Non-Stick Ceramic Coating:** Provides a durable, easy-release surface for various recipes and simplifies cleanup.

## 3. SETUP AND FIRST USE

### Before First Use:

1. Unpack the tube pan and ensure all components are present.
2. Wash both pieces of the pan thoroughly with warm, soapy water.
3. Rinse completely and dry immediately with a soft cloth to prevent water spots.
4. Lightly grease the non-stick surface with cooking spray or butter before initial use to season the pan and ensure optimal non-stick performance.

This tube pan is specifically designed for use with Ninja Foodi models OP300, OP400, and FD400. Ensure your Foodi model is compatible before use.

## 4. OPERATING INSTRUCTIONS

### General Usage:

- Always ensure the pan is clean and lightly greased before adding ingredients.
- Place the tube pan directly into the cooking pot of your Ninja Foodi.
- Follow your recipe's instructions for cooking times and temperatures when using the Air Crisp, Bake, or Pressure Cook functions.
- When baking, the central tube helps distribute heat evenly, which is beneficial for cakes, bread, and other baked goods.
- After cooking, allow the pan to cool slightly before attempting to remove the baked item.

### Removing Baked Goods:

The two-piece design simplifies removal:

1. Once cooled, carefully lift the outer ring of the pan away from the base and the central tube.
2. The baked item will remain on the base with the central tube.
3. Gently slide the baked item off the central tube and base onto a cooling rack or serving plate.

## 5. CARE AND MAINTENANCE

## Cleaning Instructions:

- **Hand Wash Only:** This tube pan is NOT dishwasher safe. Washing in a dishwasher can damage the non-stick coating and affect its performance.
- Wash the pan with warm, soapy water using a soft sponge or cloth.
- Avoid using abrasive cleaners, scouring pads, or metal utensils, as these can scratch and damage the non-stick surface.
- Rinse thoroughly and dry immediately after washing to prevent water spots and maintain the pan's finish.

## Storage:

Store the pan in a dry place. If stacking with other cookware, place a soft cloth or paper towel between pans to protect the non-stick coating from scratches.

## 6. TROUBLESHOOTING

### Common Issues and Solutions:

- **Food Sticking:** Ensure the pan was properly greased before adding ingredients. The non-stick coating may wear over time; re-seasoning with a light coat of oil and baking at a low temperature for a short period can help. Avoid using metal utensils that can scratch the coating.
- **Uneven Baking:** Verify that the pan is placed correctly within the Ninja Foodi cooking pot. Ensure the Foodi's vents are clear and that the appliance is operating as per its own instruction manual.
- **Difficulty Cleaning:** For stubborn residue, soak the pan in warm, soapy water for a short period before gently scrubbing with a soft sponge. Avoid harsh chemicals or abrasive tools.

## 7. PRODUCT SPECIFICATIONS

Specification	Detail
Brand	Ninja
Model Number	AOP205
Material	Steel
Finish Type	Non-Stick Ceramic Coating
Color	Gray
Product Dimensions	8.89 x 8.89 x 4.02 inches
Item Weight	1.85 pounds
Dishwasher Safe	No (Hand Wash Recommended)
Compatible Foodi Models	OP300, OP400, FD400 Series

## 8. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your Ninja Foodi appliance or visit the official Ninja website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may contact Ninja customer service directly through their official support channels.

---

© 2023 Ninja. All rights reserved.