

Remoska P32F/01

Remoska Prima Glass P32F/01-4L Electric Cooking Pot User Manual

Model: P32F/01

1. INTRODUCTION

Thank you for choosing the Remoska Prima Glass P32F/01-4L Electric Cooking Pot. This appliance is designed for versatile cooking, offering an efficient and convenient way to prepare various meals. To ensure safe operation and optimal performance, please read this instruction manual thoroughly before first use and retain it for future reference.

Important Safety Instructions

- Read all instructions carefully before using the appliance.
- Do not immerse the heating element (lid) in water or any other liquid. Clean only with a damp cloth.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Always unplug the appliance from the power outlet when not in use, before cleaning, and before assembling or disassembling parts.
- Keep the appliance and its cord out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use the appliance on a stable, heat-resistant surface.
- The appliance becomes hot during operation. Use oven mitts or handles when touching hot surfaces.
- Do not use abrasive cleaners or scouring pads on the non-stick surface.

2. PRODUCT OVERVIEW

The Remoska Prima is a multifunctional electric cooking pot designed for ease of use and energy efficiency. It consists of several key components:

- **Cooking Pot:** A 4-liter capacity pot with a durable non-stick coating.

- **Lid with Heating Element:** The lid contains the electric heating element and a glass viewing window. It features a handle with an integrated power switch and a detachable power cable.
- **Stand:** A stable base designed to hold the cooking pot securely during operation and serving.
- **Power Cable:** Detachable cable for connecting the lid to a power outlet.



Image: The Remoska Prima electric cooking pot shown with food (potatoes, meat, onions) prepared inside, ready for cooking. The lid is placed next to it.

3. SETUP

Before using your Remoska Prima for the first time, follow these steps:

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or transport if needed.
2. **Initial Cleaning:** Wash the cooking pot and the stand with warm soapy water. Rinse thoroughly and dry completely. Wipe the lid (heating element) with a damp cloth; do not immerse it in water.
3. **Assembly:** Place the clean cooking pot onto the stand. Ensure it sits securely.
4. **Connect Power Cable:** Attach the detachable power cable to the designated port on the lid's handle.



Image: The Remoska Prima lid with its handle and detachable power cable shown separately, illustrating the electrical connection.



Image: A close-up view of the Remoska Prima cooking pot, highlighting its non-stick interior.



Image: The black plastic stand for the Remoska Prima cooking pot, designed for stability.

4. OPERATING INSTRUCTIONS

The Remoska Prima is designed for simple and efficient cooking. It operates with a single heating element in the

lid, providing even heat distribution.

1. **Prepare Food:** Place your ingredients directly into the non-stick cooking pot.
2. **Secure Lid:** Place the lid firmly onto the cooking pot. Ensure it is properly seated to retain heat.
3. **Connect to Power:** Plug the power cable into a suitable 230V electrical outlet.
4. **Start Cooking:** Press the power switch located on the lid's handle to turn on the appliance. The indicator light will illuminate. The Remoska will begin heating and cooking automatically.
5. **Monitor Cooking:** The glass window in the lid allows you to monitor the cooking process without lifting the lid, which helps maintain consistent temperature.
6. **Serving:** Once cooking is complete, switch off the appliance and unplug it. The detachable power cable allows you to easily remove the lid and serve directly from the pot on its stand. Be cautious as the pot and lid will be hot.



Image: The underside of the Remoska Prima lid, showing the circular heating element that cooks food from above.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your Remoska Prima.

1. **Before Cleaning:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Cooking Pot:** The non-stick cooking pot is dishwasher safe. For hand washing, use warm water with a mild dishwashing detergent and a soft sponge. Avoid abrasive cleaners or metal scouring pads, as these can damage the non-stick coating.
3. **Lid with Heating Element:** Wipe the exterior and interior of the lid with a damp cloth. For stubborn food residues, use a slightly damp cloth with a small amount of mild detergent. Ensure no water enters the electrical components. **Never immerse the lid in water or any other liquid.**
4. **Stand:** The stand can be washed with warm soapy water, rinsed, and dried thoroughly.
5. **Storage:** Store the clean and dry appliance in a cool, dry place. The detachable cable can be stored separately.

6. TROUBLESHOOTING

If you encounter issues with your Remoska Prima, refer to the following common problems and solutions:

- **Appliance does not heat up:**
 - Ensure the power cable is securely plugged into both the lid and the wall outlet.
 - Check if the power switch on the lid's handle is in the 'ON' position and the indicator light is illuminated.
 - Verify that the wall outlet is functioning correctly by testing it with another appliance.

- **Food is sticking to the pot:**
 - Ensure you are using a small amount of oil or fat as recommended for non-stick cooking.
 - Avoid using metal utensils that can scratch and damage the non-stick coating. Use only wooden, plastic, or silicone utensils.
 - Clean the pot thoroughly after each use to prevent residue buildup.

- **Uneven cooking:**
 - Ensure the lid is properly seated on the pot to maintain consistent heat.
 - Avoid overcrowding the pot; cook in smaller batches if necessary.

If the problem persists after attempting these solutions, please contact customer support or a qualified service technician.

7. SPECIFICATIONS

Brand	Remoska
Model Number	P32F/01
Capacity	4 Liters
Wattage	580 Watts
Voltage	230V
Material	Glass (Lid), Non-stick coated metal (Pot)
Product Dimensions (D x W x H)	29D x 29B x 11H centimeters
Control Method	Simple On/Off Switch
Special Features	Automatic cooking, Portable
Dishwasher Safe	Yes (Pot only)

8. WARRANTY AND SUPPORT

Your Remoska Prima Electric Cooking Pot is covered by the manufacturer's standard warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or warranty claims, please contact your retailer or the Remoska customer service department. Keep your proof of purchase for any warranty-related inquiries.

