

[Manuals.plus](#) /

› [HADEN](#) /

› Haden 60cm Built-in Electric Oven User Manual

HADEN 193216

Haden 60cm Built-in Electric Oven User Manual

Model: 193216

1. PRODUCT OVERVIEW

The Haden 60cm Built-in Electric Oven is designed for modern kitchens, offering a 64-litre capacity suitable for various cooking needs. It features an energy-efficient design, multiple cooking functions including a high wattage grill, and user-friendly controls. This manual provides essential information for safe and efficient use of your appliance.



Image 1.1: Front view of the Haden 60cm Built-in Electric Oven, showcasing its stainless steel finish and glass door.

2. INSTALLATION AND SETUP

2.1 Unpacking

Carefully remove all packaging materials from the oven. Inspect the appliance for any signs of damage. Keep packaging materials away from children.

2.2 Placement and Dimensions

Ensure the installation area meets the required dimensions for a built-in oven. The oven should be placed in a stable, level cabinet. Proper ventilation is crucial for optimal performance and safety.

SINGLE FAN STEEL 64 LITRE OVEN



● **Programmable Timer**

● **Cooling Fan**

● **Enamel Interior**

● **2000W Grill**

Image 2.1: The Haden oven with its approximate dimensions of 60cm (width) x 60cm (height) x 60cm (depth) indicated, along with key features like programmable timer, cooling fan, enamel interior, and 2000W grill.

2.3 Electrical Connection

The oven requires a 240 Volts (AC) electrical supply. Electrical installation must be carried out by a qualified electrician in accordance with local wiring regulations. Ensure the appliance is properly earthed.

3. OPERATING INSTRUCTIONS

3.1 Control Panel Overview

The control panel features three main rotary knobs and an LED display for timer functions. The left knob controls the cooking function, the middle knob sets the temperature, and the right knob manages the timer.



Image 3.1: Close-up view of the oven's control panel, showing the three rotary knobs for function, temperature, and timer, along with indicator lights.

3.2 Setting the Time

Refer to the LED display instructions to set the current time. This is often required for the oven to operate and for timer functions to work correctly.

3.3 Cooking Functions

This oven offers 5 cooking functions. To select a function, turn the left rotary knob to the desired setting. Common functions include:

- **Fan Oven:** For even cooking and baking across multiple shelves.
- **Grill:** For browning and toasting.
- **Fan Grill:** Combines fan and grill for faster grilling.
- **Defrost:** Gentle thawing of frozen foods.
- **Oven Light:** To illuminate the oven interior.

3.4 Setting the Temperature

Turn the middle rotary knob to select the desired cooking temperature, ranging from 100°C to MAX. The oven will preheat to the set temperature.

3.5 Using the Grill

The oven features a 2000W variable grill. Position food on the top shelf for best grilling results. Always keep the oven door slightly ajar when using the grill function, unless specified otherwise in the full manual.



Image 3.2: The oven with its door open, revealing the interior racks and the fan at the back, demonstrating the spacious 64L capacity.

3.6 Timer Functions

The LED display allows for programmable timer settings, including a minute minder and automatic cooking duration. Consult the full manual for detailed instructions on setting these functions.

4. CARE AND MAINTENANCE

4.1 Cleaning the Interior

The oven features an easy-clean enamel interior. For best results, clean the oven regularly after it has cooled down. Use a damp cloth and mild detergent. Avoid abrasive cleaners or scourers that could damage the enamel surface.



Image 4.1: Close-up view of the oven's interior, highlighting the enamel coating and removable racks for easy cleaning.

4.2 Cleaning the Exterior

Wipe the stainless steel exterior with a soft, damp cloth and a non-abrasive cleaner. Dry thoroughly to prevent water marks.

4.3 Replacing the Oven Light

Ensure the oven is disconnected from the power supply before attempting to replace the oven light bulb. Refer to the full manual for specific instructions on accessing and replacing the bulb.

5. TROUBLESHOOTING GUIDE

This section provides solutions to common issues you might encounter. If the problem persists, contact customer support.

- **Oven not heating:** Check if the oven is properly plugged in and the circuit breaker has not tripped. Ensure the timer is set correctly and not on an 'off' setting.
- **Oven light not working:** The bulb may need replacing. Ensure the oven is cool and disconnected from power before attempting replacement.
- **Uneven cooking:** Ensure food is placed centrally on the rack. Avoid overcrowding the oven. Check if the fan function is selected if even heat distribution is desired.
- **Excessive smoke:** This can occur if there is food residue or grease build-up. Clean the oven thoroughly. If it's a new oven, some initial smoke from manufacturing residues is normal.

6. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	HADEN
Model	193216
Capacity	64 litres
Product Dimensions	60 x 60 x 60 cm
Item Weight	30 kg
Installation Type	Built-In
Wattage	2000 watts (Grill)
Voltage	240 Volts (AC)
Fuel Type	Electric
Special Features	Easy Clean Enamel Interior, LED Display
Material Type	Glass (Door)
Door Orientation	Drop-Down

7. WARRANTY AND SUPPORT

7.1 Manufacturer Warranty

This Haden oven comes with a **2-Year Manufacturer Warranty**. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects and faulty materials under normal domestic use.

7.2 Customer Support

For technical assistance, spare parts, or warranty claims, please contact Haden customer support. Refer to the contact information provided with your purchase documentation or visit the official Haden website for the most up-to-date support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question