

[Manuals.plus](#) /

› [RecPro](#) /

› RecPro 26-inch Recessed Electric Fireplace (Model RP-FP) Instruction Manual

RecPro RP-FP

RecPro 26-inch Recessed Electric Fireplace (Model RP-FP) Instruction Manual

Model: RP-FP | Brand: RecPro

1. PRODUCT OVERVIEW

This manual provides essential information for the safe and efficient use of your RecPro 26-inch Recessed Electric Fireplace, Model RP-FP. This electric fireplace is designed to provide supplemental heat and a realistic flame effect for your living space, particularly suitable for RVs.



Image 1.1: RecPro 26-inch Recessed Electric Fireplace.

Key Features:

- **Efficient Heating:** Offers 8 heating levels, ranging from 68°F to 82°F (20°C to 27°C), providing adjustable warmth.
- **Realistic Flame Effects:** Features four flame color modes (Orange, Blue, Orange + Blue, and Cycle) with four intensity settings for varied ambiance.
- **Easy Operation:** Controlled via a remote and an LED touch control panel, displaying temperature in both Fahrenheit and Celsius, along with timer and power indicators.
- **Safety Features:** Equipped with Zero Clearance Safety Technology and thermal cut-off sensors that automatically shut down the unit if it overheats or if objects are too close.
- **Durable Design:** Constructed with steel and a sleek black finish, including a removable tempered glass panel for easy cleaning.

2. IMPORTANT SAFETY INFORMATION

Read all instructions before installing and using this electric fireplace. Failure to follow these instructions may result in fire, electric shock, or personal injury.

General Safety Precautions:

- Ensure the power supply matches the voltage requirements specified on the product label.
- Do not operate the fireplace with a damaged cord or plug, or if the heater malfunctions or has been dropped or damaged in any manner.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains, at least 3 feet (0.9 m) from the front of the heater and away from the sides and rear.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- Never leave the fireplace unattended while in use.
- This fireplace is equipped with a thermal cut-off sensor that will automatically shut down the unit if it overheats. If this occurs, unplug the unit and allow it to cool for at least 15 minutes before restarting.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- Always unplug the fireplace when not in use.

3. PACKAGE CONTENTS

Upon opening the package, verify that all components are present and undamaged. If any parts are missing or damaged, do not attempt to assemble or operate the fireplace. Contact RecPro customer support immediately.

- RecPro 26-inch Recessed Electric Fireplace Unit (Model RP-FP)
- Remote Control
- Mounting Hardware (screws)
- Instruction Manual

4. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	RecPro
Model Name	Fireplace
Model Number	RP-FP
Size (Width)	26 inches

Feature	Specification
Product Dimensions (D x W x H)	6"D x 26"W x 17"H (Approximate, based on diagram)
Item Weight	35 Pounds
Power Source	Corded Electric
Material	Glass, Steel
Finish Type	Powder Coated
Installation Type	Recessed (Wall Mount)
Heat Output Levels	8 levels (68°F to 82°F / 20°C to 27°C)
Wattage	Low (750W), High (1500W)
Heating Coverage	Up to 300 sq ft
Special Features	Adjustable Flame, Adjustable Thermostat, Multicolor Flame, Timer, Zero Clearance Safety Technology, Thermal Cut-off Sensors, Removable Tempered Glass Panel
UPC	193652022596



RP-FP-26L *26-inch Fireplace*

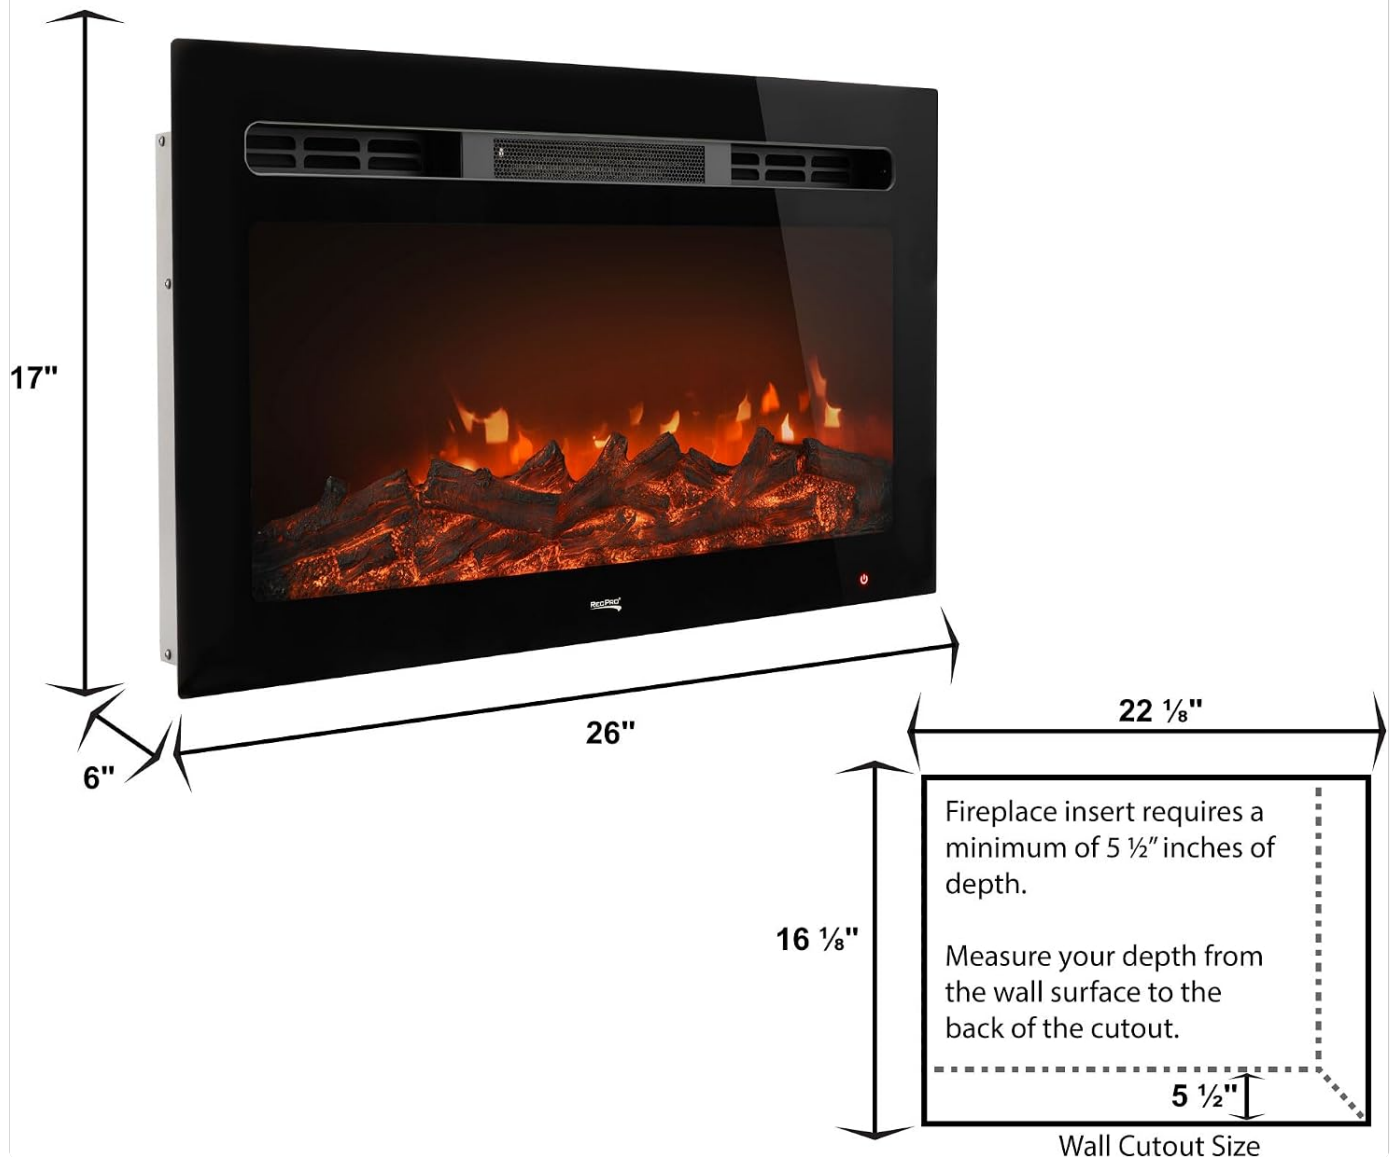


Image 4.1: Dimensions for RecPro 26-inch Electric Fireplace (Model RP-FP-26L).

5. INSTALLATION INSTRUCTIONS

This RecPro electric fireplace is designed for recessed installation, typically into a wall or cabinet opening. Ensure the installation area meets the specified dimensions and has access to a suitable electrical outlet.

Preparation:

1. Unpack the fireplace and all components. Inspect for any damage.
2. Choose a suitable location for installation. Ensure the area is dry and clear of obstructions.
3. Measure and prepare the wall cutout. For the 26-inch model, the cutout should be approximately 22 $\frac{1}{4}$ inches wide

by 16 1/4 inches high, with a minimum depth of 5 1/2 inches.

4. Ensure there is adequate clearance around the fireplace for proper ventilation and safety.

Recessed Installation Steps:

1. Carefully slide the fireplace unit into the prepared opening. Ensure it fits snugly and is level.
2. Secure the fireplace to the surrounding structure using the provided mounting screws. Typically, screws are inserted through pre-drilled holes on the side flanges of the fireplace frame.
3. Connect the power cord to a grounded electrical outlet.
4. Attach the tempered glass front panel. The panel typically hooks onto the top of the fireplace unit and then slides down into place. Secure it with the small screws located at the top corners of the panel. Do not overtighten these screws.



**Realistic Fire
and Logs with
Several Color
Options**



**Black Color
and Recess
Mounted
Design**



**Controllable
With Touch
and Remote
Control**

Image 5.1: Recessed installation of the electric fireplace.

6. OPERATING INSTRUCTIONS

Your RecPro electric fireplace can be operated using either the remote control or the LED touch control panel located on the unit.

Remote Control Functions:



Image 6.1: Remote Control for the Electric Fireplace.

- **Power Button ():** Turns the fireplace ON or OFF.
- **Temperature Up/Down (▲ / ▼):** Adjusts the desired temperature setting (68°F to 82°F).
- **Heat Setting ():** Toggles between Low (750W) and High (1500W) heat output.
- **Flame Color ():** Cycles through four flame color modes: Orange, Blue, Orange + Blue, and Cycle (all colors).
- **Flame Intensity ():** Adjusts the brightness and intensity of the flame effect (four settings).
- **Timer ():** Sets an automatic shut-off timer for the fireplace.



Image 6.2: Operating the fireplace with the remote control.

Flame Color Modes:

The fireplace offers various flame colors to suit your preference:

- **Orange:** Classic, warm fireplace glow.
- **Blue:** Modern, cool flame effect.
- **Orange + Blue:** A dynamic mix of warm and cool tones.
- **Cycle:** Automatically transitions through all available flame colors.



Image 6.3: Examples of blue and purple flame effects.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your electric fireplace.

Cleaning:

- Always unplug the fireplace from the power outlet before cleaning.
- The tempered glass front panel is removable for easy cleaning. Carefully lift and remove the panel as described in the installation section.
- Wipe the glass panel and exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or sprays.

- Ensure the air intake and exhaust vents are free from dust and debris. Use a vacuum cleaner with a brush attachment to gently clean these areas.
- Allow all parts to dry completely before reassembling and plugging in the fireplace.

8. TROUBLESHOOTING

If you encounter issues with your RecPro electric fireplace, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power cord not plugged in, remote control battery low, thermal cut-off activated.	Check power outlet and connections. Replace remote control batteries. Unplug unit and allow to cool for 15 minutes if thermal cut-off was activated.
No heat output.	Heat function not activated, temperature setting too low, thermal cut-off activated.	Ensure heat function is ON and temperature is set above ambient room temperature. Check for obstructions around vents.
Flame effect not working.	Flame effect function OFF, internal component issue.	Activate flame effect using the remote or control panel. If issue persists, contact customer support.
Remote control not responding.	Low or dead batteries, obstruction between remote and unit.	Replace remote control batteries. Ensure clear line of sight to the fireplace sensor.

If the problem persists after attempting these solutions, please contact RecPro customer support for further assistance.

9. WARRANTY AND CUSTOMER SUPPORT

This RecPro electric fireplace comes with a**Limited Warranty**. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official RecPro website.

Customer Support:

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact RecPro customer support. Have your model number (RP-FP) and purchase information ready when contacting support. Contact information can typically be found on the RecPro website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question