

HORI PS4-149E

HORI PS4 Onyx Plus Wireless Controller Instruction Manual

Model: PS4-149E

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your HORI PS4 Onyx Plus Wireless Controller. Please read this manual thoroughly before use to ensure proper functionality and longevity of your device.

PRODUCT OVERVIEW

The HORI PS4 Onyx Plus Wireless Controller is designed for use with the PlayStation 4 console, offering wireless connectivity and a range of features for an enhanced gaming experience.

Key Features

- **Wireless Connectivity:** Connects wirelessly to the PS4 console.
- **Adjustable Triggers:** Customizable trigger pressure.
- **Dual Analog Sticks:** For precise control.
- **Built-in Mic:** For online chat and voice commands.
- **Multi-Functional:** Various buttons and features for diverse gameplay.

Controller Layout



Image: Front view of the HORI PS4 Onyx Plus Wireless Controller. It features two analog sticks, a D-pad, four action buttons (Triangle, Circle, Cross, Square), Share and Options buttons, a PS button, a touchpad, and a light bar. The controller is black with textured grips.

SETUP AND INITIAL CONNECTION

Charging the Controller

The controller includes a built-in rechargeable battery. Before first use, fully charge the controller using a standard USB charging cable. Connect the cable to the controller's charging port and a powered USB port on your PS4 console or a USB wall adapter. The light bar on the controller will indicate charging status.

Pairing with PlayStation 4

1. Ensure your PlayStation 4 console is powered on.
2. With the controller powered off, press and hold the **PS button** and the **SHARE button** simultaneously until the light bar begins to flash rapidly.
3. On your PS4 console, navigate to **Settings > Devices > Bluetooth Devices**.
4. Select the "HORI Onyx Plus" controller from the list of available devices.
5. Once paired, the light bar will glow a solid color, indicating a successful connection.

Note: Some versions of this controller may require a USB wireless dongle for connection. If direct Bluetooth pairing is unsuccessful, refer to any included quick start guide for dongle-specific instructions.

OPERATING THE CONTROLLER

Basic Controls

The HORI PS4 Onyx Plus Wireless Controller features standard PlayStation button layouts:

- **Analog Sticks:** Used for movement and camera control. Push the sticks in for L3/R3 functions.
- **D-Pad:** For directional input in menus and certain games.
- **Action Buttons (Triangle, Circle, Cross, Square):** Perform in-game actions.
- **SHARE Button:** Access sharing options (screenshots, video clips).
- **OPTIONS Button:** Pause games or access in-game menus.

- **PS Button:** Access the PS4 Home screen, switch users, or power off the console.
- **Touchpad:** Functions as a clickable button and a touch-sensitive surface for specific game interactions.

Adjustable Triggers

The L2 and R2 triggers feature adjustable pressure. Consult your game's settings or the controller's specific software (if available) for customization options. This allows users to fine-tune trigger sensitivity for different game genres.

Built-in Microphone

The integrated microphone allows for voice chat in online multiplayer games and voice commands for the PS4 system. Ensure your PS4 audio settings are configured to use the controller's microphone.

MAINTENANCE AND CARE

Cleaning

To clean the controller, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the controller's finish and internal components.

Battery Care

- Avoid fully discharging the battery frequently to prolong its lifespan.
- Store the controller in a cool, dry place when not in use for extended periods.
- Do not expose the controller to extreme temperatures.

TROUBLESHOOTING

Connection Issues

- **Controller not connecting:** Ensure the controller is charged. Re-attempt the pairing process as described in the "Pairing with PlayStation 4" section. Move closer to the PS4 console to rule out range issues.
- **Intermittent connection:** Check for potential interference from other wireless devices. Ensure the controller is fully charged. If using a dongle, ensure it is securely plugged into the PS4.

Touchpad Sensitivity

Some users may find the touchpad to be highly sensitive. If accidental inputs occur, adjust your grip or check in-game settings for touchpad sensitivity options. There is no physical adjustment for touchpad sensitivity on the controller itself.

Battery Life Indication

The controller does not display battery life on the PS4 system menu. The light bar will indicate charging status, and the controller will power off when the battery is depleted.

Controller Not Turning On Console

This controller may not support turning on the PS4 console directly from a powered-off state. Power on the console manually before connecting the controller.

SPECIFICATIONS

Feature	Detail
Model Number	PS4-149E
Connectivity	Wireless
Dimensions (L x W x H)	2.76 x 6.3 x 7.09 inches
Weight	8.1 ounces
Battery	1 A battery (included)
First Available	January 30, 2022

WARRANTY AND SUPPORT

Product Warranty

 
 
For information regarding the product warranty, please refer to the warranty card included with your purchase or visit the official HORI website. Warranty terms and conditions may vary by region.

Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact HORI customer support. You can find contact information on the official HORI website or through the retailer where you purchased the product.

[Visit the HORI Store on Amazon](#) for more product information and support resources.

Related Documents - PS4-149E

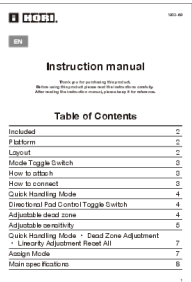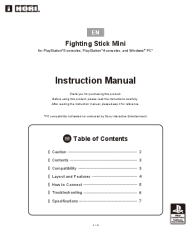	HORI RACING WHEEL APEX Instruction Manual Comprehensive instruction manual for the HORI RACING WHEEL APEX, covering setup, features like Quick Handling Mode, dead zone adjustment, sensitivity settings, and button remapping for PlayStation 4 and PlayStation 3.
	HORI Fighting Stick Mini Instruction Manual for PlayStation 5, 4, and PC Official instruction manual for the HORI Fighting Stick Mini gaming controller. Learn how to connect and use it with PlayStation 5, PlayStation 4, and Windows PC. Includes compatibility, features, troubleshooting, and specifications.

Mounting Racing Wheels & Pedals


Please contact the manufacturer directly for information about specific racing wheel models and sizes.

PS4-052 Racing wheel APES for PlayStation®4 PS4-142 wireless Racing wheel APES for PlayStation®4

Racing Wheel Use

- 01 The product can be attached to a screen for mounting.
- 02 The racing wheel can be attached to a flat surface that has a thickness of between 40mm and 50mm (range 10" reference). The product will not properly attach to a surface that exceeds these values.

 
Setup Instructions

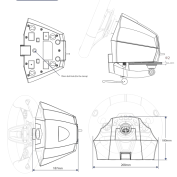


Pedal Use

- 01 The product can be setup instead of a screen for mounting.
- 02 A strap may be needed to properly attach the racing wheel to the racing wheel console.

 Mounting Diagram

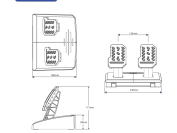

Mounting to wall

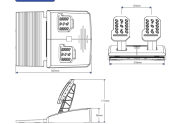 


AB04-001 Racing wheel OverDrive for Xbox Series X/S

Racing Wheel Use


- 01 The product can be setup instead of a screen for mounting.
- 02 The racing wheel can be attached to a flat surface that has a thickness of between 40mm and 50mm (range 10" reference). The product will not properly attach to a surface that exceeds these values.

 Setup Instructions

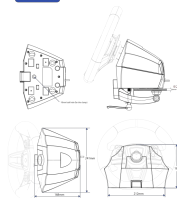

Pedal Use

 - 01 The product can be setup instead of a screen for mounting.
- 02 A strap may be needed to properly attach the racing wheel to the racing wheel console.




AB05-001 Force Feedback Racing wheel DLX for Xbox Series X/S

Racing Wheel Use

- 01 The product can be attached to a screen or light compatible with VR headsets.
- 02 Two VR headsets are needed to attach the product to a racing wheel console.
- 03 The length of the VR headset can be the thickness of the head surface + 10 mm to 20 mm.
- 04 Make sure the VR headset is not too thick and the product may be damaged or it may not properly attach. Please refer to the image below.

 VR Headset



Mounting Diagram



Setup Instructions

 
- 01 The racing wheel can be attached to a flat surface that has a thickness of between 40mm and 50mm (range 10" reference). The product will not properly attach to a surface that exceeds these values.



Pedal Use




- 01 The product can be attached to a racing console compatible with VR headsets.
- 02 Two VR headsets are needed to attach the product to a racing wheel console.
- 03 The length of the VR headset can be the thickness of the head surface + 10 mm to 20 mm.
- 04 Make sure the VR headset is not too thick and the product may be damaged or it may not properly attach. Please refer to the image below.

VR Headset



[HORI Racing Wheel Mounting Guide](#)

   Instructions and specifications for mounting HORI racing wheels and pedals, including models for PlayStation and Xbox.

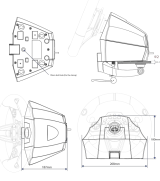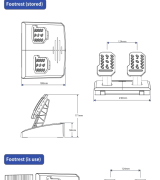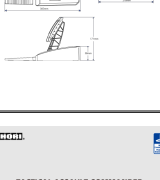Mounting Racing Wheels & Pedals Please consult the manufacturer directly for information about specific racing wheel models and pedals. PS4-052 Racing Wheel APEX for PlayStation®4 PS4-142 Wireless Racing Wheel APEX for PlayStation®4 NSW-228 Mario Kart Racing Wheel Pro Deluxe for Nintendo Switch Racing Wheel Use 1. The racing wheel is designed for use with the following: 1.1 The racing wheel can be attached to a desk or table that has a thickness of between 10mm and 20mm. Please refer to the diagram for reference. The racing wheel is not compatible with a desk that is thicker than 20mm. Easy Attachment  Pedal Use 1. The racing wheel is designed for use with the following: 1.1 The racing wheel is designed for use with the following: 1.2 A step may be needed to properly attach the racing wheel to the racing wheel console. Easy Attachment  Control Is Easy 	HORI Racing Wheel & Pedal Mounting Guide - PS4-052, PS4-142, NSW-228 Mounting instructions and specifications for HORI Racing Wheel APEX (PS4-052, PS4-142) and Mario Kart Racing Wheel Pro Deluxe (NSW-228) for PlayStation 4 and Nintendo Switch.
TACTICAL ASSAULT COMMANDER -MECHANICAL KEYPAD- for PlayStation®5 consoles, PlayStation®4 consoles, PC Instruction Manual Compatible only with keyboard & mouse enabled titles Compatible Software	Hori Tactical Assault Commander (TAC) Mechanical Keypad for PS5, PS4, PC - Instruction Manual Comprehensive instruction manual for the Hori Tactical Assault Commander (TAC) mechanical keypad, detailing setup, compatibility, features, and troubleshooting for PlayStation 5, PlayStation 4, and PC.
TACTICAL ASSAULT COMMANDER -MECHANICAL KEYPAD- for PlayStation®5 consoles, PlayStation®4 consoles, PC Instruction Manual Compatible only with keyboard & mouse enabled titles Compatible Software	HORI Tactical Assault Commander Mechanical Keypad Instruction Manual for PS5, PS4, PC Official instruction manual for the HORI Tactical Assault Commander Mechanical Keypad. Learn about setup, compatibility, features, and troubleshooting for PlayStation 5, PlayStation 4, and PC.

[\[pdf\]](#) User Manual Decleration of Conformity Warranty

1955 33WP4B 20211222 page PS4 149E Onyx Plus Wireless Controller Manual multilingual store

kmne79kvbv mybigcommerce content PRODUCT MANUALS |||

B Warranty For all warranty claims made within the first 30 days after purchase, please check with the retailer where the original purchase was made for details. If the warranty claim cannot be processed through the original retailer or for any other inquiries pertaining to our products, plea...

lang:it score:30 filesize: 3.31 M page_count: 37 document date: 2021-12-22

[\[pdf\]](#) User Manual Troubleshooting Guide Declaration of Conformity Warranty

1955 33WP4B 20211222 page PS4 149E Onyx Wireless ControllerTROUBLESHOOTING HORI

EuropePS4 Plus Controller Manual multilingualcdn shopify s files 1 0747 2650 6763 multilingual v

1728917537 |||

B Warranty For all warranty claims made within the first 30 days after purchase, please check with the retailer where the original purchase was made for details. If the warranty claim cannot be processed through the original retailer or for any other inquiries pertaining to our products, plea...

lang:it score:30 filesize: 3.31 M page_count: 37 document date: 2021-12-22

[\[pdf\]](#) Decleration of Conformity

declaration of conformity ps4 149e hori jp image 2021 04 |||

■ ■ ■

lang:it score:20 filesize: 117.06 K page count: 2 document date: 2021-04-26


[\[pdf\]](#)

ИЗГОТОВИТЕЛЬ «HORI UK Ltd » Место нахождения и адрес места HORI артикулы PS4 149E

NSW 293U 310U 273U 274U 104U 400083098static mvideo ru certificates Certificates 400083098 ||

...

 lang:it score:17 filesize: 5.2 M page_count: 1 document date: 2020-11-02

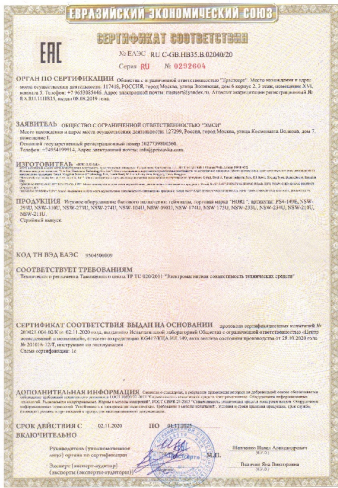

[pdf]

евразийский экономический союз сертификат соответствия HORI артикулы PS4 149E NSW 293U

310U 273U 274U 104U 098U 174U 175U 233U 234U 210U 211U 400083096 img mvideo ru certificates

Certificates |||

...

lang:it score:14 filesize: 5.2 M page_count: 1 document date: 2020-11-02

[pdf]

Información sobre reciclaje de envases xlsx Adam Page aquíInformación para el del embalaje HORI

EuropeInformacion envasescdn shopify s files 1 0747 2650 6763 Informacion v 1738765967 |||

Envases de papel y cartn Envases de plstico, envases de metal y briks Referencia

2DS-101U 2DS-111U ... NSW-513U NSW-800U NSW-802U NSW-803U NSW-809U

NSW-810U NSW-811U NSW-812U NSW-818U PS4-100E PS4-101E **PS4-149E** PS4-

159U SPF-004U SPF-009U SPF-012U SPF-013U SPF-014U SPF-015U SPF-022U

 
SPF-023U SPF-030U S...

lang:es score:14 filesize: 527.12 K page_count: 3 document date: 2025-02-05

Información para el reciclaje del embalaje

Este documento proporciona información detallada sobre el reciclaje de diversos tipos de embalajes utilizados por HORI Europe, incluyendo envases de papel, cartón, plástico, metal y briks, con listados de componentes y códigos SKU.


lang:it score:14 filesize: 519.91 K page_count: 12 document date: 2025-09-03

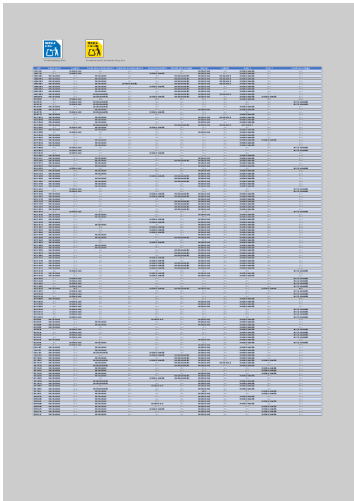

[HORI Europe Packaging Material Specifications and Product SKUs](#)

Comprehensive list of HORI Europe product SKUs detailing packaging materials such as recycled blue and yellow components, plastic, metal, and cardboard, along with internal and external box specifications.

 lang:it **score:13** filesize: 478.65 K page_count: 1 document date: 2025-09-03

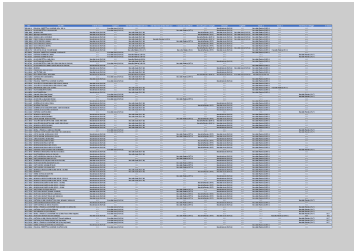


[\[pdf\]](#)

Italian Environmental Page Webstore 110425.xlsx Adam quiInformazioni Sul Riciclo dell Imballaggio
HORI EuropeInformazioni 14 04 25cdn shopify s files 1 0747 2650 6763 Informazioni 25 v 1744648459 |||
SKU Prodotto 2DS-101U PELLICOLA PROTETTIVA SCHERMO NEW 2DS XL 2DS-111U COVER PROTETTIVA PIKACHU O ... CAMERA PIANTA PIRANHA PER NINTENDO SWITCH 2 PS4-100E HORIPAD MINI BLU PS4-101E HORIPAD MINI ROSSO **PS4-149E** CONTROLLER WIRELESS ASIMMETRICO ONYX PS4-159U CUFFIE PRO PER GAMING SPF-004U RACING WHEEL...

lang:it **score:12** filesize: 502.07 K page_count: 2 document date: 2025-04-14

 [\[pdf\]](#)

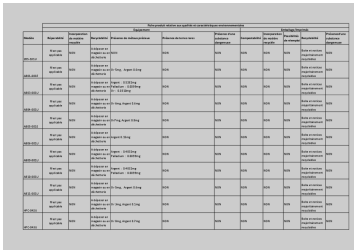

WEB PAGE DATA Ficheproduitrelativeauxqualitésetcaractéristiqueenvironnementales.xlsx Adam Page
iciFiche produit relative aux qualités et caractéristiques environnementa HORI EuropeFiche qualites
caracteristiques environnementales 15 04 25cdn shopify s files 1 0747 2650 6763 Fiche 25 v 1744714390
|||

Modle 2DS-101U AB01-001E AB03-001U AB04-001U AB05-001E AB06-001U AB09-001U AB10-001U AB11-001U HPC-0 ... dchetterie NON N est pas NON A dposer en magasin ou en Or 5mg , Argent 0.1mg NON applicable **PS4-149E** dchetterie A dposer en N est pas NON magasin ou en Argent 0.15mg NON PS4-159U appli...

lang:fr **score:12** filesize: 456.55 K page_count: 11 document date: 2025-04-15