

[manuals.plus](#) /

› [ProfiCare](#) /

› [ProfiCare PC-BS3035 Cordless 2-in-1 Stick and Handheld Vacuum Cleaner User Manual](#)

ProfiCare PC-BS3035

ProfiCare PC-BS3035 Cordless 2-in-1 Stick and Handheld Vacuum Cleaner User Manual

Model: PC-BS3035

1. INTRODUCTION

Thank you for choosing the ProfiCare PC-BS3035 Cordless 2-in-1 Stick and Handheld Vacuum Cleaner. This appliance is designed for efficient and flexible cleaning of various surfaces in your home. Its 2-in-1 design allows for quick conversion between a powerful stick vacuum and a convenient handheld unit. Please read this manual carefully before first use to ensure safe operation and optimal performance.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions when using the ProfiCare PC-BS3035:

- Read all instructions before operating the appliance.
- Keep the appliance away from water or other liquids. Do not use it in wet conditions.
- Do not vacuum flammable or combustible materials, hot ashes, or sharp objects.
- Ensure the charging station is placed on a stable, dry surface.
- Use only the original charger and accessories provided by ProfiCare.
- The appliance is equipped with an **overheat protection** system. If the motor temperature rises too high, the vacuum will automatically shut off to prevent damage and ensure safety. Allow it to cool down before resuming use.
- Do not operate the vacuum cleaner if it is damaged or malfunctioning. Contact customer support for assistance.
- This appliance is intended for household use only.

3. PACKAGE CONTENTS

Please check that all items are present in the package:

- ProfiCare PC-BS3035 Main Unit (Handheld Vacuum)
- Extension Tube (for Stick Vacuum configuration)
- Electric Rotating Floor Brush with LED Lighting

- Crevice Nozzle
- Brush Nozzle
- Charging Station with Accessory Holder
- Power Adapter (220-240 V, 50/60 Hz)
- User Manual (Multilingual)



Image: The charging station with the crevice and brush nozzles attached.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your ProfiCare PC-BS3035 vacuum cleaner.





Image: Front view of the ProfiCare PC-BS3035 in stick vacuum configuration.



Image: Side view of the ProfiCare PC-BS3035 stick vacuum, highlighting its slim profile.







Image: Close-up of the main handheld unit, showing the dustbin, power button, and battery indicator.

5. SETUP

5.1 Assembly

1. Insert the extension tube into the main handheld unit until it clicks securely into place.
2. Attach the electric rotating floor brush to the bottom of the extension tube, ensuring it is firmly connected.
3. For handheld use, detach the extension tube and attach the desired accessory (crevice nozzle or brush nozzle) directly to the main unit.

PC-BS 3035 A Akku Bodenstaubsauger

PROFI CARE.

Mit einem Klick vom Bodenstaubsauger zum Handstaubsauger

2 in 1 -
Leistungsstarker Akku Hand- und Bodenstaubsauger für kabelloses Reinigen

Turbo Rotation
EXTRA SAUGKRAFT durch elektrisch rotierende Bodenbürste

2.200 mAh
Lithium-Ionen-Akku

90° klappbar
erleichtert das Reinigen unter Möbeln

www.proficare-germany.de

Image: Illustration of how to convert the PC-BS3035 from a stick vacuum to a handheld vacuum.

5.2 Initial Charging

Before first use, fully charge the vacuum cleaner for approximately 3 hours.

1. Place the charging station on a flat surface. You can store the accessories in the integrated holder.
2. Connect the power adapter to the charging station and plug it into a suitable wall outlet (220-240V).
3. Place the vacuum cleaner onto the charging station. The 3-level LED battery indicator will illuminate to show charging status. All three lights indicate a full charge.

6. OPERATING

6.1 Power On/Off

Press the power button on the main unit to turn the vacuum cleaner on or off.

6.2 Using the Stick Vacuum

For floor cleaning, use the appliance in its stick vacuum configuration. The electric rotating floor brush is ideal for various floor types, including hard floors and carpets. The integrated LED lighting on the brush head helps illuminate dark areas, such as under furniture, for thorough cleaning.



Image: The PC-BS3035 demonstrating its ability to clean under low furniture with its flexible design and LED lighting.

6.3 Using the Handheld Vacuum

Convert the unit to a handheld vacuum for cleaning upholstery, car interiors, stairs, or hard-to-reach areas. Attach the crevice nozzle for narrow gaps or the brush nozzle for dusting and delicate surfaces.

6.4 Maneuverability

The vacuum features a 180° swivel joint on the floor brush and a 90° adjustable handle, allowing for flexible cleaning around obstacles and under furniture without excessive bending.





Image: Overview of key features including one-hand operation, practical charging station, and separately switchable LED lighting.

7. MAINTENANCE

7.1 Emptying the Dust Container

Regularly empty the dust container to maintain optimal suction power. The dust container is bagless and can be easily detached and emptied into a waste bin.

7.2 Cleaning the Filter

The PC-BS3035 uses a foam filter. For best performance, clean the filter regularly. Detach the dust container, remove the foam filter, and tap out any accumulated dust. If necessary, rinse the filter with water and allow it to air dry completely before reinserting it into the vacuum cleaner. Do not operate the vacuum without a dry filter.

7.3 Cleaning the Electric Floor Brush

Periodically check the electric rotating floor brush for tangled hair or debris. Carefully remove any obstructions to ensure the brush rotates freely and effectively.

8. TROUBLESHOOTING

If you encounter issues with your ProfiCare PC-BS3035, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is discharged Power button not pressed correctly	Charge the battery fully Press the power button firmly
Low suction power	Dust container is full Filter is clogged Nozzle/tube is blocked	Empty the dust container Clean or replace the filter Remove any blockages from the nozzle or tube
Electric brush not rotating	Brush is tangled with hair/debris Brush motor malfunction	Clean the brush roll Contact customer support
Vacuum stops during use	Overheat protection activated Battery is low	Allow the unit to cool down Charge the battery

If the problem persists after attempting these solutions, please contact ProfiCare customer support.

9. SPECIFICATIONS

Feature	Specification
Brand	ProfiCare
Model Number	PC-BS3035 (330350)
Type	Cordless 2-in-1 Stick and Handheld Vacuum Cleaner
Color	Grey and Blue
Dimensions (L x W x H)	13 x 11 x 120 cm
Weight	2.7 kg
Dust Container Capacity	1 Litre
Battery Type	14.8V Lithium-ion (2200 mAh)
Runtime	Up to 3 hours (Note: Actual continuous vacuuming time may vary)
Noise Level	61 Decibels
Filter Type	Foam
Special Features	Bagless, Electric Rotating Floor Brush with LED, Overload Protection, 180° Swivel Joint, 90° Adjustable Handle

10. WARRANTY AND SUPPORT

ProfiCare products are designed and manufactured to high-quality standards. This product is certified CE compliant. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact ProfiCare customer service. Spare parts are generally available for up to 2 years from the date of purchase. For technical support, service, or to inquire about spare parts, please contact your local ProfiCare distributor or visit the official ProfiCare website.