



[Manuals.plus](#) /

› [De'Longhi](#) /

› De'Longhi KG210 Electric Coffee Grinder Instruction Manual

De'Longhi KG210

De'Longhi KG210 Electric Coffee Grinder Instruction Manual

Model: KG210 | Brand: De'Longhi

1. INTRODUCTION

Thank you for choosing the De'Longhi KG210 Electric Coffee Grinder. This appliance is designed to provide freshly ground coffee beans for your brewing needs. With its powerful motor and adjustable grind settings, you can achieve the perfect consistency for your preferred coffee type. Please read this manual carefully before using the appliance to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your De'Longhi KG210 Coffee Grinder:

- **Main Unit:** Houses the motor and grinding mechanism.

- **Bean Hopper:** Transparent container for whole coffee beans.
- **Grind Selector:** Dial or slider to choose desired grind fineness (Coarse, Medium, Fine).
- **Quantity Selector:** To select the number of cups (2-12 cups).
- **Lid:** Covers the bean hopper and activates the grinding process when pressed.
- **Ground Coffee Container:** Removable container to collect ground coffee.
- **Cleaning Brush:** Included for easy cleaning of the grinding chamber.





Figure 3.1: Front view of the De'Longhi KG210 Electric Coffee Grinder, showing the grind and quantity selectors.



Figure 3.2: Hand inserting the transparent ground coffee container into the base of the grinder.

4. GETTING STARTED (SETUP)

1. **Unpack:** Carefully remove the coffee grinder and all accessories from the packaging.
2. **Clean:** Before first use, wipe the exterior of the grinder with a damp cloth. Wash the removable ground coffee container and lid with warm, soapy water, rinse thoroughly, and dry completely.
3. **Assemble:** Ensure the ground coffee container is correctly placed in the base of the grinder.
4. **Placement:** Place the grinder on a stable, flat, and dry surface.

5. OPERATING YOUR COFFEE GRINDER

1. **Add Beans:** Open the lid and pour whole coffee beans into the bean hopper. The maximum capacity is 90g, suitable for grinding 4 to 12 cups of coffee.



Figure 5.1: Pouring whole coffee beans into the transparent bean hopper.

2. **Select Grind Fineness:** Use the grind selector to choose your desired fineness: **Coarse** for French press, **Medium** for drip coffee makers, or **Fine** for espresso. LED lights indicate the selected consistency.



Figure 5.2: Adjusting the grind size selector to choose between coarse, medium, and fine settings.

3. **Select Quantity:** Use the quantity selector to choose the number of cups you wish to grind, from 2 to 12 cups.
4. **Start Grinding:** Place the lid securely on the bean hopper. The grinder will only operate when the lid is properly closed and pressed down. Press down on the lid to begin grinding. The grinding will stop automatically once the selected quantity is reached, or you can release the lid to stop manually.



Figure 5.3: Pressing the lid to initiate the grinding process.

5. **Remove Ground Coffee:** Once grinding is complete, unplug the appliance. Carefully remove the ground coffee container from the base and pour the freshly ground coffee into your brewing device.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your grinder.

- **Always unplug** the grinder before cleaning.
- **Ground Coffee Container and Lid:** These parts are removable and can be washed with warm, soapy water. Rinse thoroughly and dry completely before reassembling.
- **Grinding Chamber:** Use the included cleaning brush to remove any residual coffee grounds from the grinding chamber and blades. Do not use water or liquids inside the grinding chamber.
- **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scourers.
- **Storage:** Store the grinder in a cool, dry place when not in use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not start.	Not plugged in. Lid not properly closed/pressed.	Ensure power cord is securely plugged in. Ensure lid is fully closed and pressed down firmly.
Grinding is inconsistent.	Too many beans. Grinding chamber clogged.	Do not overfill the bean hopper. Clean the grinding chamber thoroughly with the brush.
Grinder stops during operation.	Overheating. Lid released.	Allow the unit to cool down for 30 minutes. Ensure continuous pressure on the lid during grinding.
Ground coffee spills out.	Ground coffee container not properly seated.	Ensure the ground coffee container is fully inserted and correctly aligned before grinding.

8. TECHNICAL SPECIFICATIONS

- **Model:** KG210
- **Brand:** De'Longhi
- **Color:** Black/White
- **Product Dimensions:** 11 x 11 x 22 cm
- **Item Weight:** 1 kg
- **Bean Hopper Capacity:** 90 grams (approx. 12 cups)
- **Power / Wattage:** 170 watts
- **Voltage:** 240 Volts
- **Material:** Stainless Steel
- **Special Features:** Integrated Coffee Grinder, Adjustable Grind Size (1-3)

9. WARRANTY AND SUPPORT

De'Longhi products are manufactured to the highest quality standards. For any issues or support, please refer to your product's original purchase documentation or contact De'Longhi customer service in your region.

Extended Warranty Options:

- 1-Year Extended Warranty by Salama Care (E-mail delivery)
- 2-Year Extended Warranty by Salama Care (E-mail delivery)

These extended warranty options are available through third-party providers and can be purchased separately. Please check the terms and conditions of these plans at the time of purchase.