Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Cherry /
- > CHERRY Stream Keyboard (Model JK-8500EU-2) User Manual

Cherry JK-8500EU-2

CHERRY Stream Keyboard (Model JK-8500EU-2) User Manual

Wired USB SX Scissors Mechanism QWERTY Keyboard

1. Introduction

This manual provides comprehensive instructions for the CHERRY Stream Keyboard, Model JK-8500EU-2. Designed for reliability and comfort, this wired USB keyboard features a high-quality CHERRY SX scissor mechanism for a precise and quiet typing experience. It is suitable for various environments, including home offices and professional workspaces.



Image 1.1: Top-down view of the CHERRY Stream Keyboard, showcasing its full QWERTY layout and integrated multimedia keys.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- CHERRY Stream Keyboard (Model JK-8500EU-2)
- Integrated USB Cable

3. SETUP

3.1 System Requirements

- Operating System: Windows 11, Windows 10, Windows 8, or Windows 7
- · Available USB-A Port

3.2 Connecting the Keyboard

- 1. Locate an available USB-A port on your computer.
- 2. Plug the USB connector of the CHERRY Stream Keyboard into the USB-A port.
- 3. The operating system will automatically detect and install the necessary drivers. No additional software installation is required.

4. OPERATING THE KEYBOARD

4.1 Basic Typing

The CHERRY Stream Keyboard features a standard QWERTY layout. The CHERRY SX scissor mechanism provides a tactile and quiet typing experience, designed for comfort and precision.

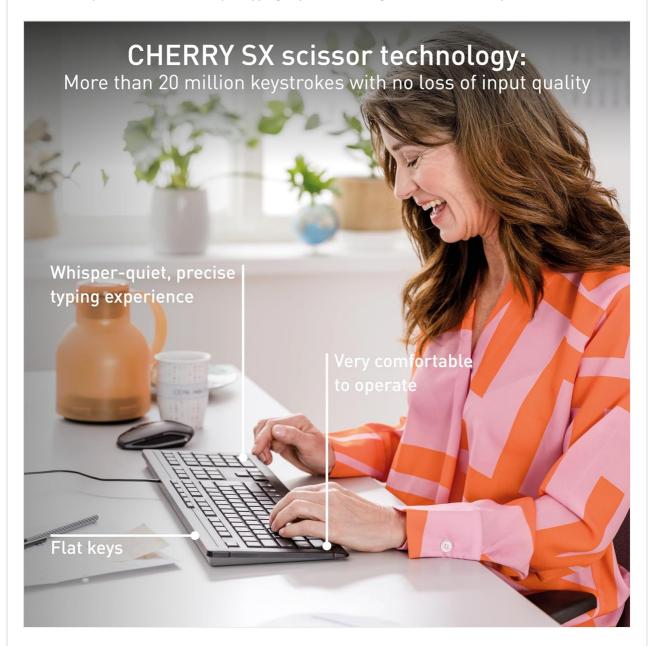


Image 4.1: A user typing on the CHERRY Stream Keyboard, illustrating the comfortable and flat key design.

4.2 Special Function Keys

The keyboard includes dedicated keys for enhanced productivity and multimedia control:

- **Multimedia Keys:** Located above the function keys (F7-F12), these control volume (decrease, increase, mute), track navigation (previous, next), and media playback (play/pause).
- Office Keys: Dedicated keys for quick access to browser, email, calculator, and PC lock functions.



Image 4.2: Close-up of the keyboard showing the dedicated multimedia and office function keys.

4.3 Status LEDs

Three integrated red status LEDs indicate the activation status of:

- CAPS LOCK
- NUM LOCK
- SCROLL LOCK

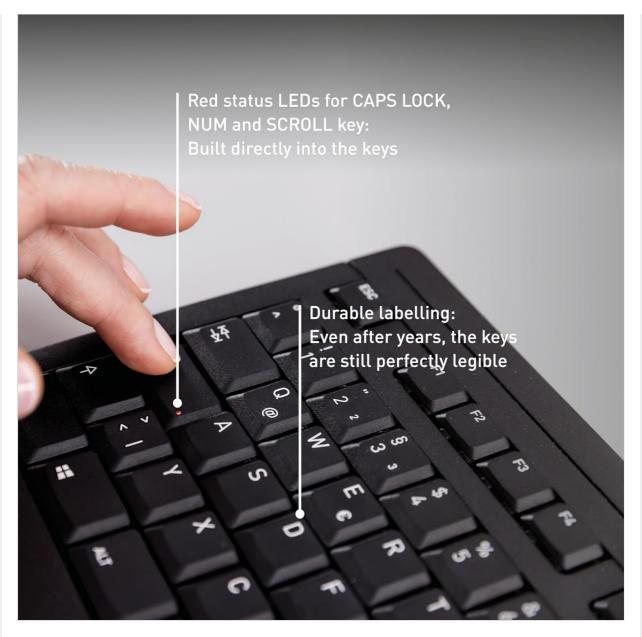


Image 4.3: Detail of the CAPS LOCK key, highlighting the integrated red status LED and durable key labeling.

4.4 Height Adjustment

The keyboard features two detachable rubber feet on the underside, allowing for height adjustment to suit your ergonomic preferences. Eight additional rubber pads ensure stability and prevent slipping during use.

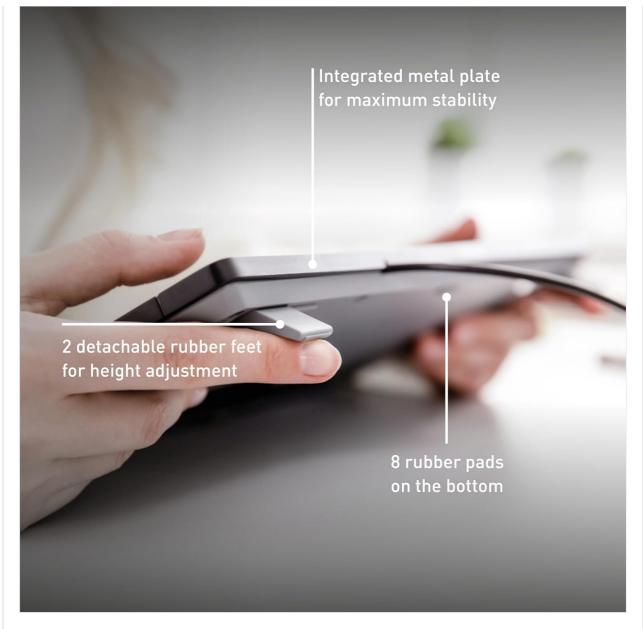


Image 4.4: Side profile of the keyboard, illustrating the integrated metal plate for stability, detachable rubber feet for height adjustment, and eight rubber pads on the bottom.

5. MAINTENANCE

To ensure the longevity and optimal performance of your CHERRY Stream Keyboard, follow these maintenance guidelines:

- Cleaning: Use a soft, damp cloth to wipe the surface of the keyboard. Avoid abrasive cleaners or solvents. For cleaning between keys, compressed air can be used.
- **Durability:** The key labeling is abrasion-resistant, designed to remain legible even after extended use.
- Storage: Store the keyboard in a dry, dust-free environment when not in use.

6. TROUBLESHOOTING

If you encounter issues with your CHERRY Stream Keyboard, consider the following:

• **Keyboard Not Responding:** Ensure the USB cable is securely connected to both the keyboard and the computer's USB-A port. Try plugging the keyboard into a different USB port or a different computer to rule out port or system issues.

- **Specific Keys Not Working:** Check for any physical obstructions under the key. If the issue persists, and other keys function, contact support.
- **Unexpected Behavior:** Restart your computer. This can often resolve temporary software-related issues.

7. SPECIFICATIONS

Feature	Detail
Model Number	JK-8500EU-2
Connectivity Technology	USB-A
Keyboard Mechanism	SX Scissors Mechanism
Keyboard Description	Tactile
Color	Black
Product Dimensions	18.23 x 6.42 x 0.71 inches (46.3 x 16.3 x 1.8 cm)
Item Weight	2 pounds (0.91 kg)
Compatible Devices	Laptop, PC
Special Features	Ergonomic, Silent Stroke

8. WARRANTY AND SUPPORT

8.1 Warranty Information

CHERRY products are manufactured to high-quality standards. For detailed warranty information, please refer to the warranty card included with your product or visit the official CHERRY website.

8.2 Customer Support

For technical assistance, troubleshooting, or product inquiries, please contact CHERRY customer support through their official website or the contact information provided in your product documentation.


© 2025 Cherry. All rights reserved.

Related Documents - JK-8500EU-2



CHERRY KC 6000 SLIM Keyboard: User Manual, Setup, and Technical Specifications

Detailed user guide for the CHERRY KC 6000 SLIM keyboard. Learn about setup, safety precautions, ergonomic tips, cleaning, troubleshooting, technical data, and compliance information.

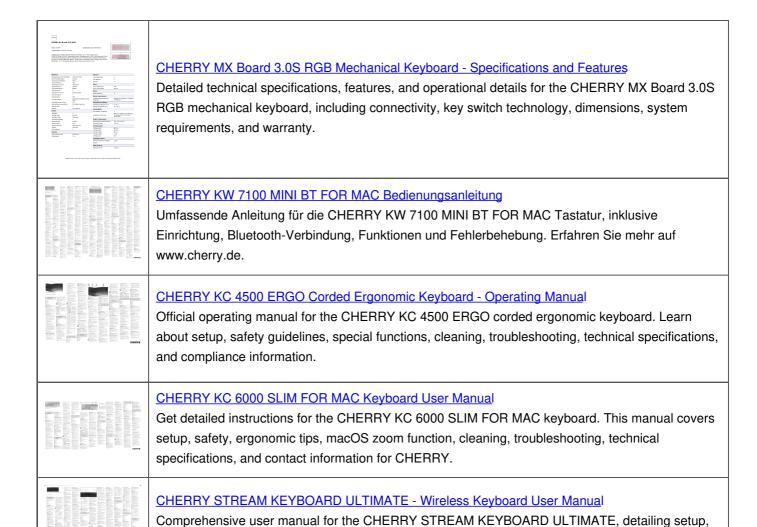

connection methods (Bluetooth, 2.4 GHz wireless, cable), features, maintenance, and

troubleshooting for this wireless keyboard.