

SMATAR RMT-TX100D

SMATAR Replacement Remote Control for Sony Bravia TVs - RMT-TX100D User Manual

Model: RMT-TX100D

1. INTRODUCTION

This manual provides instructions for the SMATAR RMT-TX100D replacement remote control, designed for use with various Sony LCD LED HDTV Smart Bravia TV models. This remote is ready to use directly out of the box with no programming required, offering a convenient solution for replacing a lost or damaged original remote.



The SMATAR RMT-TX100D remote control in use, providing a seamless viewing experience.

2. SETUP AND BATTERY INSTALLATION

The SMATAR RMT-TX100D remote control requires two AAA batteries (not supplied) for operation. No programming or pairing is necessary; simply insert the batteries, and the remote is ready to control your compatible Sony TV.

2.1. Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image showing the open battery compartment of the remote control, ready for battery insertion.



AAA batteries are required for the remote control's operation.

3. KEY FUNCTIONS AND BUTTONS

The SMATAR RMT-TX100D remote control features a standard layout with dedicated buttons for common functions, including a Netflix button for direct access to the streaming service.



Detailed view of the remote control's buttons, including the central navigation pad and dedicated Netflix button.

- **Power Button** (●): Turns the TV on or off.
- **Number Pad (0-9)**: For direct channel input.
- **Navigation Pad (Up, Down, Left, Right, Enter)**: Used to navigate menus and select options.
- **Netflix Button**: Provides direct access to the Netflix application.
- **Action Menu**: Accesses quick settings and contextual options.
- **Guide**: Displays the TV program guide.
- **Home**: Returns to the TV's home screen or main menu.
- **Back**: Returns to the previous screen or menu.

- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down (PROG +/-):** Changes TV channels.
- **Mute:** Mutes or unmutes the TV audio.
- **Playback Controls:** Play, Pause, Fast Forward, Rewind, Stop, Record.



The remote control operates effectively within an approximate 8-meter range and a 45-degree angle.

4. COMPATIBILITY

This replacement remote control is compatible with a wide range of Sony Brand LCD LED Smart Bravia TVs. Below is a list of some compatible models:

- RMT-TX100D
- RMT-TX102D
- RMT-TX101J
- RMT-TX102U
- RMT-TX200
- RMT-TX300C
- RMT-TX100U

- RMT-TX201U
- RM-YD005
- RM-YD014
- RM-YD018
- RM-YD021
- RM-YD024
- RM-YD025
- YD026
- RM-YD027
- RM-YD028
- RM-YD040
- RM-YD063
- RM-YD065
- RM-YD092
- RM-YD102
- RM-YD103
- RM-Y156
- RMF-TX200U
- RMF-TX310U
- KDL-50W800C
- KDL-50W850C
- KDL-55W800C
- KDL-55W850C
- KDL-65W800C
- KDL-46Z4100
- NSX-46GT1
- XBR-75X800G
- KDL-75W850C
- KDL-65W850C
- KDL-75W800C
- KDL-75W850C
- XBR-43X830C
- XBR-49X800C
- XBR-49X830C
- XBR-49X835C
- XBR-55X810C
- XBR-55X850C
- XBR-55X857C
- XBR-55X890C
- XBR-55X900C
- XBR-55X905C
- XBR-55X907C
- XBR-65X810C
- XBR-65X850C
- XBR-65X890C

- XBR-65X900C
- XBR-65X905C
- XBR-65X907C
- XBR-65X930C
- XBR-75X850C
- XBR-75X900C
- XBR-75X910C
- XBR-75X930C
- XBR-75X940C
- XBR-75X945C
- XBR-49X700D
- XBR-49X750D
- XBR-55X700D
- XBR-55X705D
- XBR-55X707D
- XBR-55X750D
- XBR-65X750D
- XBR49X700D
- XBR49X750D
- XBR55X700D
- XBR55X705D
- XBR55X707D
- XBR55X750D
- XBR65X750D
- KDL-32R500C
- KDL-32W600D
- KDL-32W650D
- KDL-40R510C
- KDL-40R530C
- KDL-40R550C
- KDL-40W600D
- KDL-40W650D
- KDL-48R510C
- KDL-48R530C
- KDL-48R550C
- KDL-48W600D
- KDL-48W650D
- KDL-55W650D
- KDL-55W6500
- KDL-55W6500D

If your Sony TV model is not listed, it may still be compatible. The remote is designed to work with most Sony LCD LED HDTV Smart Bravia TVs.

5. SPECIFICATIONS

Feature	Detail
Model Number	RMT-TX100D
Product Dimensions	1.97 x 1.18 x 1.57 inches (approximately 5cm x 3cm x 4cm)
Item Weight	1.06 ounces (approximately 30 grams)
Batteries Required	2 x AAA batteries (not included)
Special Feature	Ergonomic design
Color	Black
Max Supported Devices	1 (Television)
Compatible Devices	Sony LCD LED HDTV Smart Bravia Televisions



The remote control measures approximately 20cm in length and 5cm in width.

6. TROUBLESHOOTING

- **Remote is not responding:**
 - Ensure batteries are inserted correctly with the proper polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote and the TV's infrared receiver.
 - Ensure you are within the effective operating range (approximately 8 meters) and angle (45 degrees).
- **Buttons feel stiff or unresponsive:**
 - Apply firm, consistent pressure to the buttons. If a specific button consistently requires excessive force, it may indicate a manufacturing defect.
 - Ensure no foreign objects or debris are lodged around the buttons.
- **Batteries are getting hot:**
 - Immediately remove the batteries from the remote control.
 - This can indicate a short circuit within the remote or faulty batteries. Do not continue to use the remote with these batteries.
 - Try a new set of high-quality AAA batteries. If the issue persists, discontinue use of the remote and contact customer support.
- **Remote does not control my TV:**
 - Verify that your TV model is listed in the compatibility section (Section 4).
 - Ensure your TV is a Sony Brand LCD LED HDTV Smart Bravia TV. This remote is specifically designed for these models and does not require programming.
 - If your TV is compatible and the remote is still not working, try removing and reinserting the batteries.

7. MAINTENANCE

- Clean the remote control regularly with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Avoid exposing the remote to extreme temperatures, direct sunlight, or moisture.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

8. WARRANTY AND SUPPORT

For any quality problems or further assistance, please contact SMATAR customer support. We are committed to providing a satisfactory solution.

Please refer to your product packaging or the retailer's website for specific warranty details and contact information.