

[manuals.plus](#) /› [DOMO](#) /› [DOMO DO1004BL 1 Liter Soup Maker User Manual](#)**DOMO DO1004BL**

DOMO DO1004BL 1 Liter Soup Maker User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Incorrect use may lead to injury or damage to the appliance.

- Always ensure the voltage indicated on the appliance matches your mains voltage.
- Do not immerse the motor unit, cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts. The blades are sharp; handle with extreme care during assembly, disassembly, and cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use the appliance outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always operate the appliance on a stable, dry, and level surface.
- Do not fill the jug above the 'MAX' level or below the 'MIN' level indicated inside the jug.
- Be careful when handling hot liquids. Steam can cause burns.

2. PRODUCT OVERVIEW

The DOMO DO1004BL is a compact 1-liter soup maker designed for preparing various hot and cold beverages and meals. It features a stainless steel jug and a lid with an integrated blending unit and control panel.



Image 1: The DOMO DO1004BL 1 Liter Soup Maker, showing the stainless steel jug with measurement markings, handle, and the lid with its control panel.

Components:

- **Main Jug:** Stainless steel container with a capacity of 1 liter, featuring MIN and MAX fill lines.
- **Lid with Control Panel:** Contains the motor, blending blade, and electronic controls for various functions.

- **Handle:** Ergonomically designed for safe handling and pouring.
- **Power Cord:** For connecting the appliance to an electrical outlet.



Image 2: Close-up view of the soup maker's lid, highlighting the control panel with various program buttons (Smooth, Chunky, Compote, Juice, Re-heat, Blend) and the digital display.



Image 3: The underside of the soup maker's lid, showing the integrated blending blade and the electrical connection points that engage with the jug.

3. SETUP

Before first use, follow these steps:

1. **Unpack:** Carefully remove the soup maker and all its components from the packaging. Retain packaging for future storage or transport if desired.
2. **Clean:** Wash the inside of the stainless steel jug and the blending blade (located on the underside of the lid) with warm, soapy water. Wipe the exterior of the jug and the top of the lid with a damp cloth. Ensure all parts are thoroughly dried before assembly. **Do not immerse the lid (motor unit) in water.**
3. **Placement:** Place the soup maker on a stable, flat, and heat-resistant surface, away from the edge of the counter.
4. **Assembly:** Ensure the lid is correctly aligned and securely placed on the jug. The appliance will not operate if the lid is not properly seated.

5. **Power:** Plug the power cord into a grounded electrical outlet. The appliance is now ready for use.

4. OPERATING INSTRUCTIONS

Follow these steps to prepare your desired meal or beverage:

1. **Prepare Ingredients:** Cut solid ingredients into small pieces (approximately 2-3 cm) to ensure optimal blending and cooking.
2. **Add Ingredients:** Place all desired ingredients into the stainless steel jug. Ensure the total volume of ingredients (including liquids) is between the 'MIN' (800ml) and 'MAX' (1000ml) fill lines marked inside the jug. Overfilling or underfilling can affect performance and safety.



Image 4: Demonstrates adding fresh vegetables and other ingredients into the soup maker's jug before securing the lid.

3. **Secure Lid:** Place the lid onto the jug and turn it clockwise until it locks securely into place. The appliance will not start if the lid is not properly closed.
4. **Select Program:** Plug in the appliance. Use the 'MODE' button on the control panel to cycle through the available programs:
 - **SMOOTH:** For creamy soups and sauces.
 - **CHUNKY:** For soups with larger pieces of ingredients.
 - **COMPOTE:** For fruit compotes or purees.
 - **JUICE:** For blending cold beverages or smoothies.
 - **RE-HEAT:** To warm up pre-cooked soups or liquids.
 - **BLEND:** Manual blending function for desired consistency.

The selected program will be indicated on the digital display.

5. **Start Operation:** Press the 'START/STOP' button to begin the selected program. The appliance will automatically heat and blend according to the program's pre-set cycle.
6. **Completion:** Once the program is complete, the appliance will usually beep and/or the display will show 'END'.
7. **Serve:** Unplug the appliance from the power outlet. Carefully remove the lid. Using the handle, pour the contents into a bowl or serving dish. Be cautious of hot steam and contents.



Image 5: The DOMO DO1004BL Soup Maker pouring freshly made tomato soup into a bowl, ready for serving.

8. **Cool Down:** Allow the appliance to cool down before cleaning.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your soup maker.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Clean Jug:** Wash the inside of the stainless steel jug with warm, soapy water and a non-abrasive sponge. For stubborn residue, you may fill the jug with warm soapy water and let it soak for a few minutes before scrubbing. Rinse thoroughly.
3. **Clean Lid and Blade:** Carefully clean the blending blade and the underside of the lid with a damp cloth and mild detergent. Use a small brush if necessary to remove food particles from around the blade.
Never immerse the lid (motor unit) in water or place it under running water, as this can damage the electrical components.
4. **Exterior Cleaning:** Wipe the exterior of the jug and the top of the lid with a damp cloth. Do not use harsh abrasive cleaners or scouring pads, as they may scratch the surfaces.
5. **Dry and Store:** Ensure all parts are completely dry before reassembling or storing the appliance. Store in a dry place.

6. TROUBLESHOOTING

If you encounter issues with your DOMO DO1004BL soup maker, refer to the following common problems and solutions:

- **Appliance does not turn on:**
 - Check if the power cord is securely plugged into a working electrical outlet.
 - Ensure the lid is correctly and securely placed on the jug. The appliance has a safety mechanism that prevents operation if the lid is not properly closed.
- **Soup is not blending properly:**
 - Ensure ingredients are cut into small enough pieces (approx. 2-3 cm).

- Check that the liquid level is between the 'MIN' and 'MAX' marks. Insufficient liquid can hinder blending.
- If using the 'CHUNKY' program, it is designed for less blending than 'SMOOTH'.
- **Appliance stops during operation or shows an error code:**
 - Unplug the appliance and allow it to cool down for at least 15-20 minutes. Overheating can cause the appliance to shut off.
 - Check for any obstructions around the blade.
 - Ensure the lid is properly secured.
- **Leakage from the lid:**
 - Ensure the lid is securely locked in place.
 - Do not overfill the jug beyond the 'MAX' line.
 - Check the lid's sealing gasket for proper placement and damage.

If the problem persists after attempting these solutions, please contact DOMO customer support for further assistance.

7. SPECIFICATIONS

Brand	DOMO
Model	DO1004BL
Volume	1 Liter
ASIN	B07Z3W6CB5