

## Great Asia TK-E101GC

# Great Asia TK-E101GC 10-inch Android Tablet User Manual

Model: TK-E101GC

## 1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Great Asia TK-E101GC 10-inch Android Tablet. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

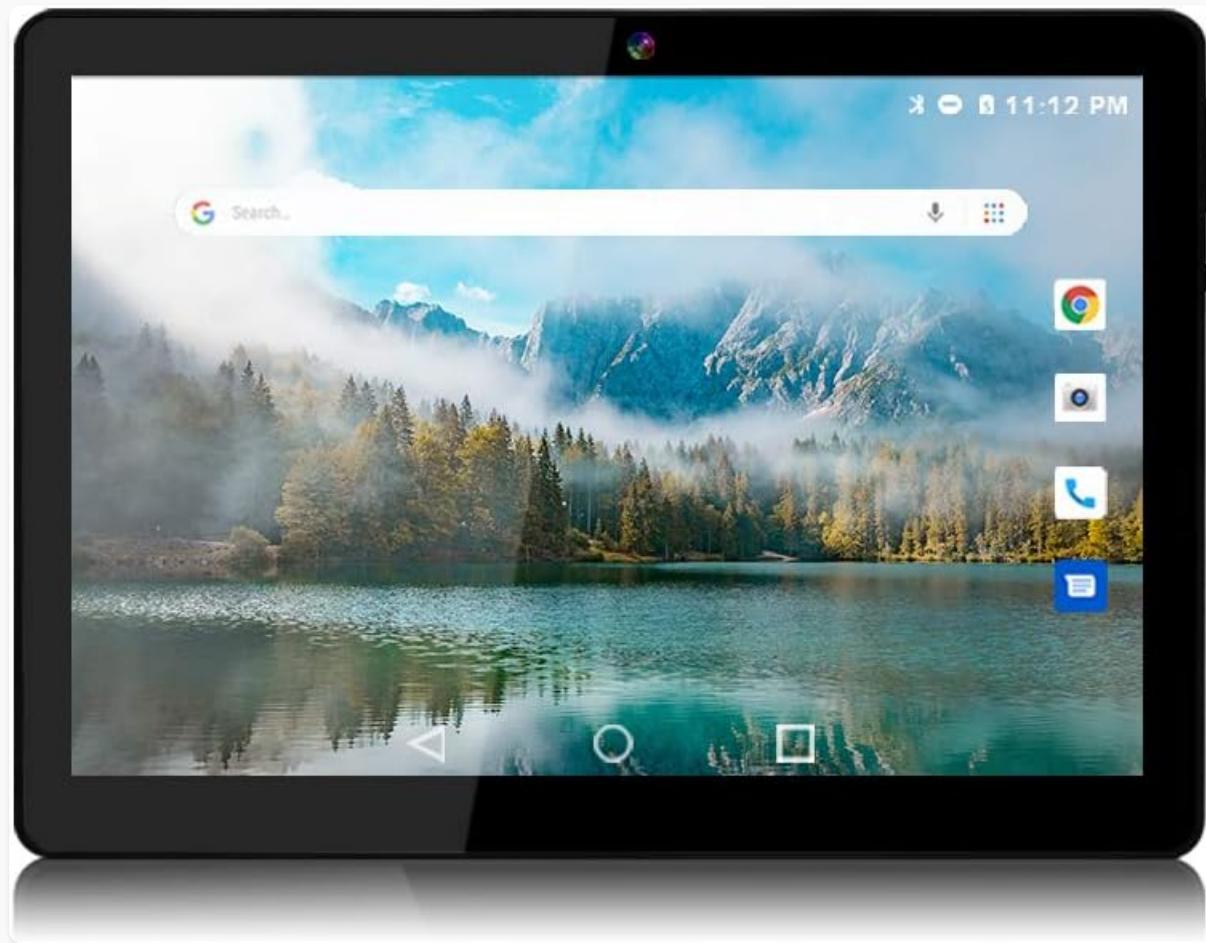


Image 1.1: Front view of the Great Asia TK-E101GC 10-inch Android Tablet, displaying its screen.

## 2. PACKAGE CONTENTS

Verify that all items listed below are included in your product package:

- TK-E101GC Tablet X 1
- USB Cable X 1
- Power adapter X 1
- Reset PIN X 1
- Instruction Manual X 1 (this document)
- Magnetic Charging Cable X 1
- SIM Card Sleeve X 1
- Screen Protector X 1
- Earphone X 1
- Stylus Pen X 1
- OTG Cable X 1

## 3. PRODUCT OVERVIEW

Familiarize yourself with the physical components and key features of your tablet.



Image 3.1: Detailed diagram highlighting the tablet's physical features including cameras, ports, and dimensions.

## Key Features:

- **Display:** 10.1-inch IPS Capacitive Touch Screen (1280x800 pixels)
- **Processor:** MTK6580 Quad Core Cortex A7 1.3GHz
- **Memory:** 2GB RAM, 32GB ROM (expandable up to 128GB via Micro SD card)
- **Operating System:** Android 7.0
- **Cameras:** 2MP Front, 5MP Rear
- **Connectivity:** WiFi (IEEE802.11 b/g/n), Dual SIM Card Slots (2G/3G), Bluetooth (not explicitly listed but common), GPS, FM
- **Ports:** 5pin Micro USB (2.0 speed), Magnetic Charging port, 3.5mm Audio Jack
- **Battery:** 6000mAH

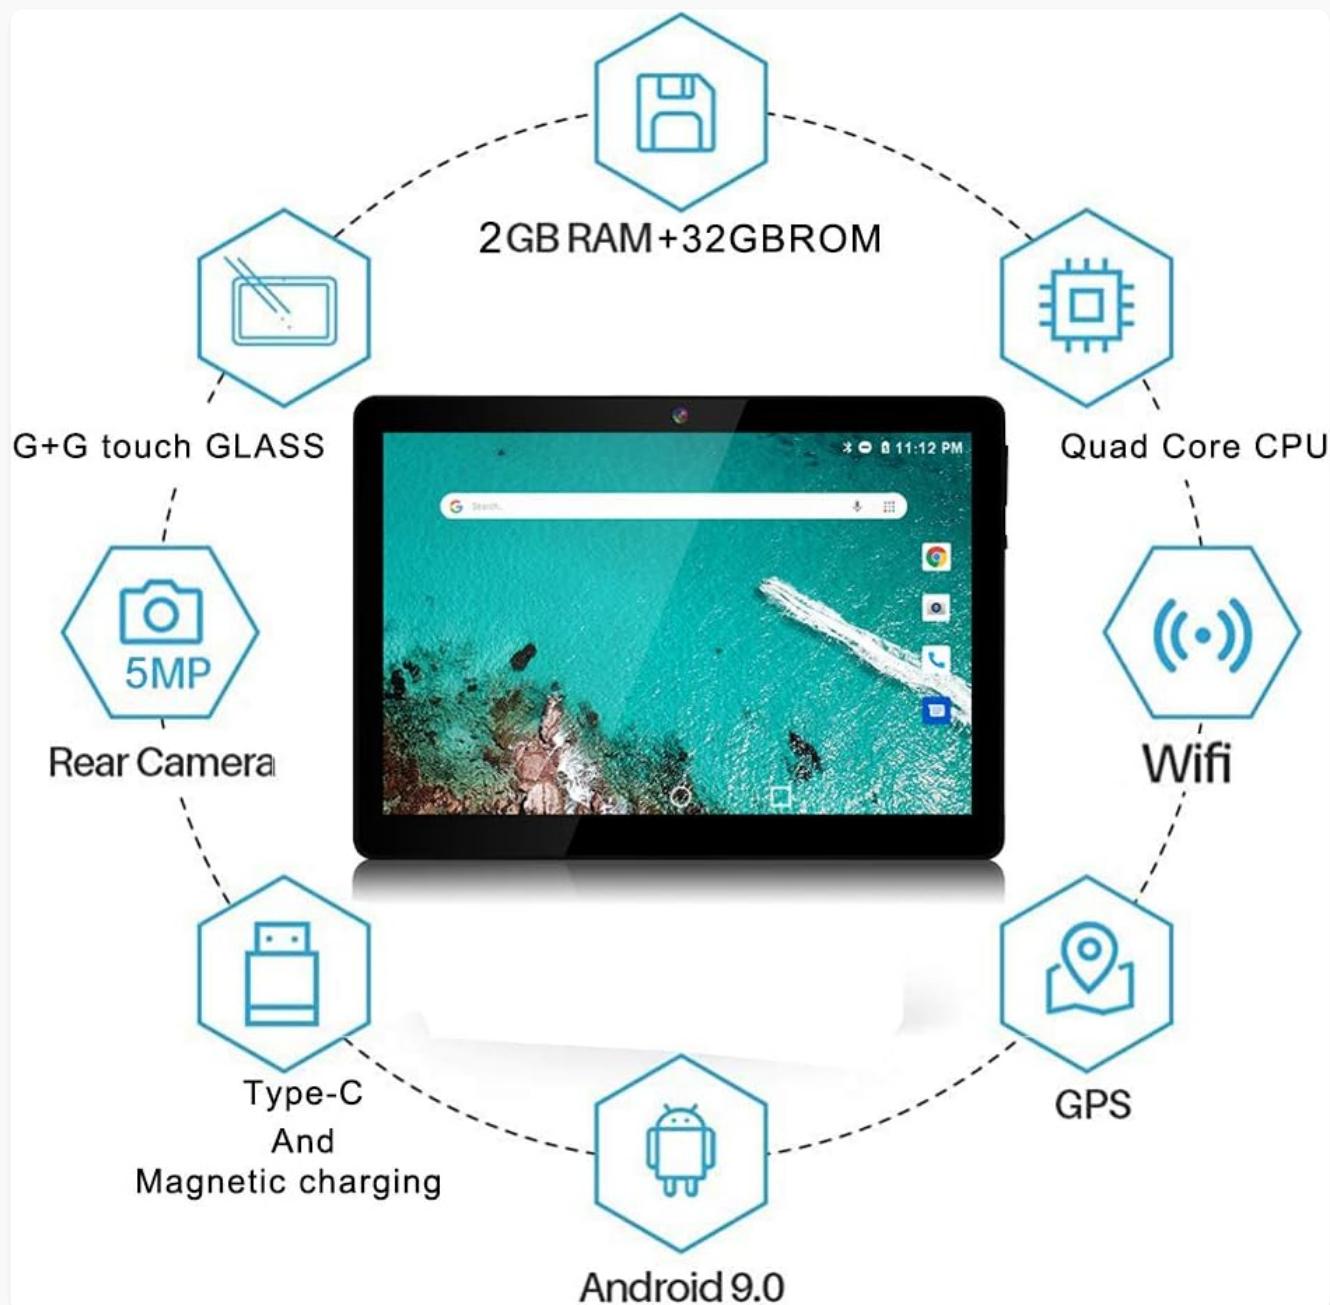


Image 3.2: Diagram illustrating the tablet's internal specifications such as RAM, ROM, CPU, and connectivity options.

## 4. SETUP

### 4.1. Charging the Tablet

Before initial use, fully charge the tablet. Connect the provided power adapter to the tablet's magnetic charging port or the Micro USB port. The charging indicator will illuminate. Disconnect the charger once the battery is full.

## 4.2. Inserting SIM Cards and Micro SD Card

The tablet supports dual SIM cards and a Micro SD card for expanded storage.

1. Locate the SIM/Micro SD card tray on the side of the tablet.
2. Use the provided SIM card sleeve or a small pin to gently eject the tray.
3. Carefully place your standard SIM cards (SIM1 and SIM2) and Micro SD card into their respective slots on the tray. Ensure the gold contacts face downwards.
4. Gently push the tray back into the tablet until it clicks into place.

# Dual SIM Card Slots

Allows 2 sim cards standby at the same time



Image 4.1: Illustration demonstrating the correct method for inserting dual SIM cards and a Micro SD card into the tablet's tray.

## 4.3. Initial Power On

Press and hold the power button located on the side of the tablet until the screen illuminates. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.

# 5. OPERATING INSTRUCTIONS

## 5.1. Basic Navigation

The tablet features a capacitive touchscreen. Use the following gestures for navigation:

- **Tap:** Select an item or open an application.
- **Swipe:** Scroll through lists or switch between home screens.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.

## 5.2. Connecting to Wi-Fi

1. Go to **Settings > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list of available networks.
4. Enter the password if prompted and tap **Connect**.

## 5.3. Making Calls and Using Mobile Data

With inserted SIM cards, your tablet can make phone calls and access mobile data (2G/3G).

- Open the **Phone** application to dial numbers or access contacts.
- To enable mobile data, go to **Settings > Data usage** or **Network & internet > Mobile network** and toggle mobile data **On**.

## 5.4. Using the Cameras

The tablet is equipped with a 2MP front camera and a 5MP rear camera.

- Open the **Camera** application from the home screen or app drawer.
- Tap the shutter button to take photos.
- Switch between front and rear cameras using the camera toggle icon.

## 5.5. Connecting Magnetic Charging Cable

The tablet supports magnetic charging for convenience. Align the magnetic charging cable connector with the magnetic charging port on the tablet. The magnetic connection will secure the cable and begin charging.

# 6. SPECIFICATIONS

Feature	Specification
Operation System	Android 7.0 Nougat
CPU	MTK6580 Quad Core Cortex A7 1.3GHz
RAM	2GB
ROM	32GB (Expandable up to 128GB via Micro SD)
Display Size	10.1 inches
Display Technology	IPS Capacitive Touch Screen

Display Resolution	1280*800 pixels
WiFi	IEEE802.11 b/g/n
SIM Card Support	Dual SIM Card Slots (2G GSM: 850/900/1800/1900MHz, 3G WCDMA 2100MHz)
Charging Port	Magnetic Charging port, 5pin Micro USB (2.0 speed)
OTG	Supported
MIC	Supported
GPS	Supported
FM	Supported
Speaker	Dual Speaker
Camera	2MP Front / 5MP Rear
Battery	6000mAH Lithium Polymer
Size	8.56 X 6.7 X 0.37 inches (21.74 x 17.02 x 0.94 cm)
Weight	Approximately 1.22 kg (Package dimensions: 29.9 x 29.3 x 4.9 cm)

## 7. MAINTENANCE

- Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive cleaners or solvents.
- Storage:** Store the tablet in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care:** To prolong battery life, avoid fully discharging the tablet frequently. Charge it regularly.
- Software Updates:** Periodically check for system updates in **Settings > About tablet > System updates** to ensure optimal performance and security.

## 8. TROUBLESHOOTING

### 8.1. Tablet Does Not Turn On

- Ensure the battery is charged. Connect the tablet to the charger for at least 30 minutes.
- Press and hold the power button for 10-15 seconds to perform a hard reset.

### 8.2. Wi-Fi Connection Issues

- Restart the tablet and your Wi-Fi router.
- Ensure you are within range of the Wi-Fi signal.
- Verify the Wi-Fi password is entered correctly.

### 8.3. Slow Performance

- Close unnecessary background applications.
- Clear cache data for apps in **Settings > Apps > [App Name] > Storage > Clear cache**.
- Consider uninstalling unused applications.

## 8.4. Screen Unresponsive


- Restart the tablet by holding the power button.
- Ensure the screen is clean and free of moisture or debris.


## 9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support or service inquiries, please contact your retailer or the manufacturer's customer service department.

© 2023 Great Asia. All rights reserved.

### Related Documents - TK-E101GC

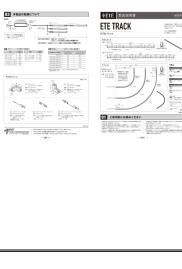	<p><a href="#"><u>Samsung Air Conditioner User Manual - Duct Type Series</u></a></p> <p>User manual for Samsung Duct Type Series air conditioners, covering features, installation, operation, maintenance, troubleshooting, and technical specifications.</p>
	<p><a href="#"><u>ETE TRACK Installation and Operation Manual</u></a></p> <p>This manual provides detailed instructions for the installation, wiring, and operation of the ETE TRACK system. It covers mounting procedures for different surfaces, electrical connections, and component assembly, ensuring safe and correct usage of the ETE TRACK lighting system.</p>
	<p><a href="#"><u>Closet Carousel Installation Guide - White Home Products</u></a></p> <p>Comprehensive installation instructions for the White Home Products Closet Carousel, a space-saving garment storage system. Learn how to install models TK-5 through TK-14 with detailed steps, diagrams, and safety information.</p>
	<p><a href="#"><u>Casio DataCap Credit/Debit/Gift Card Interface Quick Setup Guide</u></a></p> <p>This guide provides setup and programming instructions for integrating DataCap payment processing with various Casio Electronic Cash Register (ECR) models, including TE-900/1500, TK-950/1550, TE-2200/2400, TK-3200, TE-3000/4500, TE-7000/8500, and QT-Series. Learn how to configure your Casio ECR to communicate with the DataCap system for credit, debit, and gift card transactions.</p>

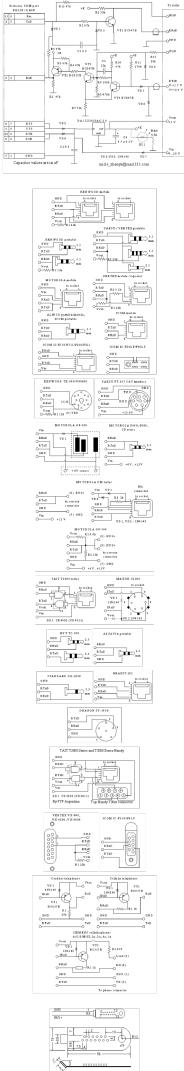

### [Universal Radio Programming Cable: Schematics, Compatibility, and Troubleshooting Guide](#)

A comprehensive technical guide to the universal radio programming cable, detailing its circuit schematics, connection methods, extensive compatibility with over 200 radio models from major brands like Kenwood, Motorola, Yaesu, and Icom, along with essential troubleshooting tips.





### [Liebherr Refrigerator User Manual](#)

Comprehensive user guide for Liebherr refrigerators, covering installation, operation, features, maintenance, and troubleshooting.