

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TELLUR](#) /

› [TELLUR Mood True Wireless Earbuds User Manual](#)

TELLUR TLL511331

TELLUR Mood True Wireless Earbuds User Manual

Model: TLL511331

INTRODUCTION

Thank you for choosing the TELLUR Mood True Wireless Stereo Earbuds. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your earbuds to ensure an optimal audio experience. Please read this manual carefully before use and retain it for future reference.



Image: The TELLUR Mood True Wireless Earbuds resting inside their open charging case, showcasing their compact design and the charging contacts.

WHAT'S INCLUDED

The TELLUR Mood True Wireless Earbuds package includes the following components:

- 1x Mood Bluetooth Headset (Left and Right Earbuds)
- 1x Charging case
- 1x Micro-USB cable
- 2x Silicon ear tips sets (various sizes)
- 1x User manual (this document)

SETUP

1. Charging the Earbuds and Charging Case

Before first use, fully charge both the earbuds and the charging case.

1. **Charging the Earbuds:** Place the earbuds into their respective slots in the charging case. Ensure the charging contacts align. The earbuds will automatically begin charging. An indicator light on the earbuds will show their charging status (e.g., red for charging, blue for fully charged, or off when fully charged, refer to specific LED behavior in the product's quick start guide if available).
2. **Charging the Case:** Connect the Micro-USB cable to the charging port on the case and the other end to a USB power adapter (not included) or a computer's USB port. The charging case's indicator light will show its charging status.



Image: A close-up view of the TELLUR Mood Earbuds charging contacts within the charging case, illustrating how the earbuds connect for power.

Note: A full charge for the earbuds takes approximately 1 hour. The charging case battery is 420mAh, and each earbud battery is

35mAh.

2. Pairing with Your Device

The earbuds use Bluetooth 5.0 technology for quick and stable connections.

1. Initial Pairing:

- Take both earbuds out of the charging case. They will automatically power on and attempt to pair with each other.
- Once paired with each other, one earbud's indicator light will flash (e.g., red and blue alternately), indicating it's ready for device pairing.
- On your device (smartphone, tablet, etc.), enable Bluetooth and search for new devices.
- Select "TELLUR Mood" from the list of available devices.
- Once connected, the earbud's indicator light will stop flashing, and you will hear a confirmation tone.

2. **Reconnecting:** After initial pairing, the earbuds will automatically connect to the last paired device when taken out of the charging case, provided Bluetooth is enabled on the device and it is within range (up to 10 meters).

Tip: If the earbuds do not pair with each other or your device, place them back in the charging case, close the lid, wait a few seconds, and then try again.

OPERATING THE EARBUDS

1. Wearing the Earbuds

Insert the earbuds gently into your ears, ensuring a comfortable and secure fit. Rotate them slightly until they feel snug. Experiment with the different sized silicon ear tips to find the best fit for optimal sound quality and comfort.

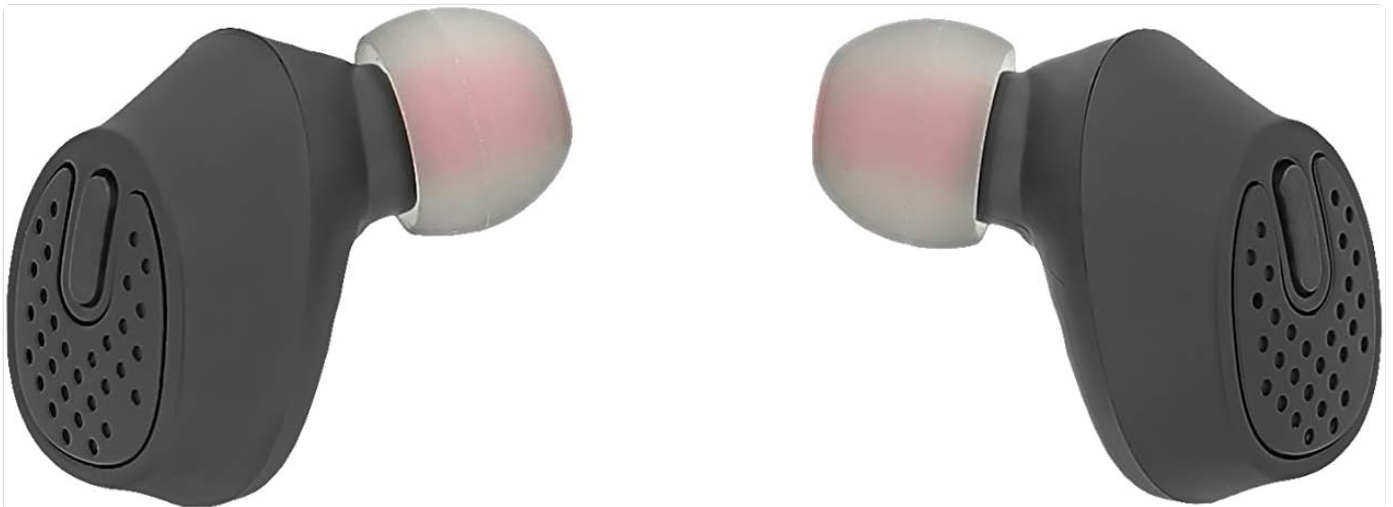


Image: Side view of the TELLUR Mood Earbuds, highlighting their ergonomic shape designed for in-ear comfort.

2. Touch Controls

The TELLUR Mood earbuds feature intuitive touch controls on each earbud. The specific functions may vary slightly depending on your device and application.



Image: Close-up of the TELLUR Mood Earbuds, indicating the touch-sensitive area for control inputs.

Action	Function
Single Tap (Left or Right Earbud)	Play/Pause music, Answer/End call
Double Tap (Right Earbud)	Next track
Double Tap (Left Earbud)	Previous track
Long Press (Left or Right Earbud)	Activate Voice Assistant (Siri, Google Assistant) / Reject call

3. Making and Receiving Calls

The earbuds feature an integrated microphone for hands-free conversations.

- **Answer a Call:** Single tap either earbud.
- **End a Call:** Single tap either earbud during a call.
- **Reject a Call:** Long press either earbud.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your earbuds.

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners, alcohol, or chemical solvents. Gently clean the charging contacts on both the earbuds and the case to ensure proper charging.
- **Storage:** When not in use, store the earbuds in their charging case to protect them from dust and damage. Store the case in a cool, dry place, away from direct sunlight and extreme temperatures.

- **Battery Care:** To preserve battery life, avoid fully discharging the earbuds and case frequently. Charge them regularly, even if not in constant use.
- **Water Resistance:** These earbuds are not waterproof. Avoid exposure to water, rain, or excessive moisture.

TROUBLESHOOTING

If you encounter issues with your TELLUR Mood earbuds, try the following solutions:

Problem	Possible Solution
Earbuds not pairing with each other.	Place both earbuds back into the charging case, close the lid, wait 5 seconds, then open the lid and take them out again. They should automatically pair.
Earbuds not connecting to device.	<ul style="list-style-type: none"> ◦ Ensure Bluetooth is enabled on your device. ◦ Make sure the earbuds are charged. ◦ Forget "TELLUR Mood" from your device's Bluetooth settings and try pairing again. ◦ Ensure the earbuds are within the 10-meter wireless range.
No sound from one or both earbuds.	<ul style="list-style-type: none"> ◦ Check the volume level on your device and the earbuds. ◦ Ensure earbuds are properly paired. ◦ Reboot your device and try connecting again.
Earbuds not charging.	<ul style="list-style-type: none"> ◦ Ensure the charging cable is securely connected to both the case and the power source. ◦ Clean the charging contacts on the earbuds and inside the case. ◦ Try a different USB cable or power adapter.

SPECIFICATIONS

Detailed technical specifications for the TELLUR Mood True Wireless Earbuds:

Feature	Detail
Model	TLL511331
Bluetooth Version	5.0
Wireless Range	Up to 10 meters
Audio Type	True Wireless Stereo (TWS)
Supported Profiles	A2DP, HFP, HSP, AVRCP
Music Play Time	Up to 3 hours
Standby Time	Up to 120 hours
Earbud Charging Time	Approx. 1 hour
Earbud Battery Capacity	35 mAh (each)

Feature	Detail
Earbud Weight	8 grams (each)
Earbud Dimensions	1.8 x 2.5 x 2.7 cm
Charging Case Battery Capacity	420 mAh
Charging Type	Micro-USB (via carrying case)
Material	Plastic
Color	Black

WARRANTY AND SUPPORT

TELLUR products are manufactured to the highest standards and are designed to provide reliable performance. For detailed warranty information, please refer to the warranty card included with your product or visit the official TELLUR website. If you require technical support or have questions regarding your TELLUR Mood True Wireless Earbuds, please contact TELLUR customer service through their official channels.

For further assistance, please visit: www.tellur.com