

[Manuals.plus](#) /

› [HEALTHY CHOICE](#) /

› Healthy Choice Electric Glass Kettle User Manual

HEALTHY CHOICE Electric Glass Kettle with Tea Infuser

Healthy Choice Electric Glass Kettle User Manual

Model: 800W Cordless Fast Boil Digital Glass Kettle with Tea Infuser

1. INTRODUCTION

Thank you for choosing the Healthy Choice Electric Glass Kettle. This appliance is designed for efficient and convenient water boiling and tea brewing. Featuring a 1.2-liter capacity, digital controls, and a built-in tea infuser, it offers precise temperature settings and a keep-warm function to enhance your beverage experience. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image 1.1: Healthy Choice Electric Glass Kettle with Tea Infuser.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the kettle.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the kettle base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been

damaged in any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- The kettle is equipped with boil-dry and overheat protection. If the kettle boils dry, it will automatically shut off. Allow it to cool before refilling.

3. PRODUCT COMPONENTS

The Healthy Choice Electric Glass Kettle consists of the following main components:

- **Glass Kettle Body:** Made of high borosilicate glass, with a 1.2L capacity and clear water level markings.
- **Lid:** Stainless steel lid with a handle for easy opening and closing.
- **Tea Infuser:** Removable stainless steel mesh infuser for brewing loose-leaf tea.
- **Power Base:** Cordless 360-degree rotational base with digital control panel and concealed heating element.
- **Control Panel:** Digital display and touch buttons for temperature selection, time/delay, regulate, function, and on/off.



Adjustable temperature thermostat 40°C-100°C for keep warm mode

40°C



100°C



Image 3.1: Close-up of the digital control panel on the kettle base.

4. SETUP

1. **Unpack:** Carefully remove all packaging materials from the kettle and its base.
2. **Initial Cleaning:** Before first use, fill the kettle with clean water to the MAX line. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a flat, stable, heat-resistant surface, away from the edge of the counter. Ensure the power cord is not dangling where it can be pulled or tripped over.
4. **Connect Power:** Plug the power cord into a grounded electrical outlet (220V).

5. OPERATING INSTRUCTIONS

5.1. Boiling Water

1. **Fill Kettle:** Open the lid and fill the kettle with the desired amount of fresh, cold water. Do not fill below the MIN line or above the MAX line (1.2L).

2. **Place on Base:** Securely place the kettle onto the power base.
3. **Power On:** Press the "On/Off" button on the control panel. The display will illuminate.
4. **Select Temperature:** Use the temperature control buttons (e.g., "Regulate" or specific temperature presets) to select your desired water temperature (e.g., 100°C for boiling). The kettle offers 5 quick-start temperature settings.
5. **Start Boiling:** The kettle will begin heating the water to the selected temperature. The digital display will show the current temperature.
6. **Automatic Shut-off:** Once the water reaches the set temperature, the kettle will automatically shut off.

5.2. Using the Tea Infuser

The integrated tea infuser allows for direct brewing of loose-leaf tea.

1. **Insert Infuser:** Place your desired amount of loose-leaf tea into the stainless steel infuser. Insert the infuser into the kettle, ensuring it is properly seated.
2. **Fill Kettle:** Fill the kettle with water, ensuring the water level is appropriate for brewing and does not exceed the MAX line, especially when brewing tea to avoid overflow during boiling.
3. **Select Temperature:** Choose the optimal brewing temperature for your tea type (e.g., 80°C for green tea, 90°C for oolong, 100°C for black tea). The adjustable thermostat ranges from 40°C to 100°C.
4. **Start Brewing:** The kettle will heat the water. Once the temperature is reached, allow the tea to steep for the recommended time.
5. **Remove Infuser:** Carefully remove the hot infuser using its handle once brewing is complete.



Enhanced brewing control



The included tea infuser allows you to boil your favourite loose-leaf tea to your desired temperature, ensuring a customised brew every time.

Image 5.1: Demonstrating the insertion of the tea infuser into the kettle.

5.3. Keep Warm Function

This function maintains the water temperature for an extended period.

- After selecting your desired temperature and starting the heating process, activate the "Keep Warm" mode (often integrated with the temperature setting or a dedicated button).
- The kettle can maintain the selected temperature for 15 minutes up to 12 hours.

5.4. Delay Start Option

The delay start feature allows you to program the kettle to begin heating at a later time.

- Fill the kettle with water and place it on the base.
- Press the "Time/Delay" button and set the desired delay time (from 30 minutes up to 12 hours).
- Confirm your selection. The kettle will start heating after the set delay period.

Experience the ultimate tea brewing convenience

Digital Glass Kettle with Tea Infuser

A must-have for tea enthusiasts.



Image 5.2: Pouring freshly brewed tea from the kettle into a mug.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and performance of your kettle.

- **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- **Exterior:** Wipe the exterior of the kettle and the power base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Interior (Descaling):** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale:
 - Fill the kettle with a mixture of 1 part white vinegar to 2 parts water.
 - Boil the solution and let it stand for at least 30 minutes, or longer for heavy buildup.
 - Empty the kettle and rinse thoroughly with fresh water several times.
 - For stubborn deposits, repeat the process or use a commercial descaling solution following its instructions.

- **Tea Infuser:** Remove the tea infuser and rinse it under running water. Use a small brush if necessary to remove tea residues. It is dishwasher safe.
- **Storage:** When not in use, store the kettle in a clean, dry place.

7. TROUBLESHOOTING

If you encounter issues with your kettle, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in; no power at outlet; kettle not properly seated on base.	Ensure plug is securely in outlet; check power supply; reseal kettle firmly on base.
Water not heating.	Kettle has boiled dry; heating element malfunction.	Allow kettle to cool for 15-20 minutes, then refill with water. If problem persists, contact customer support.
Automatic shut-off not working.	Limescale buildup; faulty sensor.	Descale the kettle as per cleaning instructions. If issue continues, contact customer support.
Water tastes metallic or smells strange.	New kettle odor; mineral deposits.	Perform initial cleaning steps (boil and discard water several times). Regularly descale the kettle.
Kettle leaks.	Overfilled; lid not properly closed; damage to kettle body.	Do not fill above MAX line. Ensure lid is securely closed. If kettle body is damaged, discontinue use and contact support.

8. SPECIFICATIONS

Feature	Detail
Brand	HEALTHY CHOICE
Model	Electric Glass Kettle with Tea Infuser
Capacity	1.2 Litres
Power/Wattage	800 watts
Voltage	220 Volts
Material	Stainless Steel, Glass, Borosilicate Glass
Dimensions (L x W x H)	19 x 20.5 x 20.5 cm
Item Weight	1.41 kg
Special Features	Tea Infuser, Cordless, Digital Controls, Auto Shut-off, Boil Dry Protection, Overheat Protection, Adjustable Temperature (40°C-100°C), Keep Warm Function (15min-12hrs), Delay Start (30min-12hrs), 360-degree Base Rotation

The kettle is equipped with 'boil dry' and overheating protection



Weight 1 KG



**Power/Wattage
800 watts**

20.5 cm



19 cm

Image 8.1: Product dimensions of the Healthy Choice Electric Glass Kettle.

9. WARRANTY AND SUPPORT

This Healthy Choice Electric Glass Kettle is backed by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical support, troubleshooting assistance, or warranty claims, please contact the Healthy Choice customer service department. Contact information can typically be found on the product packaging or the manufacturer's official website.

© 2025 Healthy Choice. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question