

[manuals.plus](#) /

› [TechniSat](#) /

› [TechniSat DIGITRADIO 10 C DAB+ Digital Radio Adapter User Manual](#)

TechniSat DIGITRADIO 10 C

TechniSat DIGITRADIO 10 C DAB+ Digital Radio Adapter User Manual

Model: DIGITRADIO 10 C | Brand: TechniSat

INTRODUCTION

The TechniSat DIGITRADIO 10 C is a digital radio adapter designed to enhance your existing hi-fi system, AV receiver, or active speakers with modern radio reception and audio streaming capabilities. This compact device provides crystal-clear DAB+ digital radio, FM radio, and Bluetooth audio streaming. It features a 2.8-inch color display for showing time, date, station, and title information, and is controlled via the included remote control.

This manual provides essential information for the setup, operation, and maintenance of your DIGITRADIO 10 C.



Figure 1: Front view of the TechniSat DIGITRADIO 10 C.

PACKAGE CONTENTS

Please check that all items are present and undamaged. If any items are missing or damaged, contact your retailer.

- TechniSat DIGITRADIO 10 C unit
- DAB/FM antenna
- Audio connection cable
- Power supply unit
- USB cable
- Remote control
- Batteries for remote control
- Instruction manual (this document)



Figure 2: Included remote control for the DIGITRADIO 10 C.

SETUP

1. Connect the Antenna

Connect the supplied DAB/FM antenna to the **RF IN** port on the rear of the DIGITRADIO 10 C. Position the antenna for optimal reception.

2. Connect to your Audio System

Use the audio connection cable to connect the **AUDIO L/R** outputs on the DIGITRADIO 10 C to an available audio input (e.g., AUX, CD, or Tuner input) on your hi-fi system, AV receiver, or active speakers. Ensure correct left and right channel connections.



Figure 3: Rear connections of the DIGITRADIO 10 C.

3. Power Connection

Connect the power supply unit to the **DC IN 5V 500mA** port on the rear of the DIGITRADIO 10 C, then plug the power adapter into a wall outlet.

4. Initial Power On and Setup

Insert the supplied batteries into the remote control. Press the power button on the remote control to turn on the device. Follow the on-screen prompts on the 2.8-inch color display to select your preferred language and initiate an automatic scan for available DAB+ and FM radio stations.

OPERATING INSTRUCTIONS

1. Selecting Operating Mode

Press the **MODE** button on the remote control to switch between DAB+ radio, FM radio, and Bluetooth modes.

2. DAB+ Radio

In DAB+ mode, use the navigation buttons (< / >) on the remote control to browse through available stations. The display will show station name, program information, and time.

3. FM Radio

In FM mode, use the navigation buttons (< / >) to tune to frequencies. Press the **SCAN** button to perform an automatic scan for FM stations. RDS (Radio Data System) information will be displayed if available.

4. Bluetooth Audio Streaming

Switch to Bluetooth mode. On your mobile device (smartphone, tablet), enable Bluetooth and search for "DIGITRADIO 10 C". Select it to pair. Once connected, you can stream audio from your device to your hi-fi system through the adapter. Use your mobile device to control playback (play/pause, skip tracks).

5. Saving Favorite Stations

The DIGITRADIO 10 C allows you to save up to 20 favorite stations for both DAB+ and FM modes. To save a station, tune to the desired station, then press and hold one of the numeric preset buttons (1-20) on the remote control until the display confirms the save. To recall a favorite, simply press the corresponding numeric button.

6. Display Information

The 2.8-inch color display shows current time, date, station name, and program information (e.g., song title, artist) depending on the broadcast. Use the **INFO** button on the remote control to cycle through different display information.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use abrasive cleaners, waxes, or solvents as they may damage the surface.
- **Placement:** Ensure the device is placed on a stable, flat surface. Avoid direct sunlight, heat sources, and areas with high humidity or dust.
- **Antenna Care:** Handle the antenna carefully. Do not bend or force it, as this may affect reception quality.
- **Battery Replacement:** Replace the remote control batteries when they are depleted. Ensure correct polarity when inserting new batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; power outlet faulty.	Check power cable connection; try a different power outlet.

Problem	Possible Cause	Solution
No sound	Audio cable not connected; incorrect input selected on hi-fi system; volume too low.	Ensure audio cable is connected correctly; select the correct input on your hi-fi system; increase volume on both the adapter and your hi-fi system.
Poor radio reception (DAB+/FM)	Antenna not properly positioned or connected; weak signal in your area.	Adjust antenna position; ensure antenna is securely connected; perform a new station scan. Consider an external antenna if signal remains weak.
Bluetooth pairing issues	Device not in pairing mode; Bluetooth disabled on mobile device; too far from adapter.	Ensure adapter is in Bluetooth mode; enable Bluetooth on your mobile device; move mobile device closer to the adapter.
Remote control not working	Batteries depleted or incorrectly inserted; obstruction between remote and adapter.	Replace batteries, checking polarity; ensure clear line of sight to the adapter's sensor.

For more detailed troubleshooting, please refer to the comprehensive manual available on the TechniSat website or contact customer support.

SPECIFICATIONS

- Brand:** TechniSat
- Model Number:** 0000/3945
- Product Dimensions (LxWxH):** 12 x 6 x 9 cm
- Color:** Neutral (Black/Silver)
- Tuner Technology:** DAB+/DAB, FM
- Connectivity:** Bluetooth (for audio streaming reception), AUX (auxiliary), External antenna connection (IEC socket)
- Special Features:** DAB+ digital radio, FM radio with RDS, Favorite station memory (20 DAB+, 20 FM), Time and date display, Bluetooth audio streaming
- Compatible Devices:** Hi-Fi systems, AV amplifiers, Active speakers
- Power Source:** External power supply unit (DC IN 5V 500mA)
- Included Components:** DIGITRADIO 10 C unit, DAB/FM antenna, Audio connection cable, Power supply, Remote control, User manual

WARRANTY AND SUPPORT

The TechniSat DIGITRADIO 10 C comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, warranty service, or further inquiries, please contact TechniSat customer service or visit the official TechniSat website for detailed support resources and contact information.



 TechniSat DIGITRADIO 601 DIGITRADIO 631 Internet Radio with DAB+/UKW Tuner and Bluetooth Streaming	TechniSat DIGITRADIO 601 & 631: Bedienungsanleitung für Internetradio mit DAB+/UKW und Bluetooth Umfassende Bedienungsanleitung für das TechniSat DIGITRADIO 601 und DIGITRADIO 631. Erfahren Sie mehr über die Funktionen, Einrichtung und Bedienung Ihres Internet-Radios mit DAB+/UKW-Tuner und Bluetooth-Streaming.
 Instrukcja obsługi DIGITRADIO 217 Radio DAB+/FM ze streamingiem dźwięku Bluetooth i budzikiem	DIGITRADIO 217: Instrukcja obsługi radia DAB+/FM z Bluetooth i budzikiem Przewodnik użytkownika dla TechniSat DIGITRADIO 217, szczegółowo opisujący funkcje radia DAB+/FM, strumieniowe przesyłanie dźwięku Bluetooth, ustawienia budzika i obsługę.
 TechniSat DIGITRADIO 140	TechniSat DIGITRADIO 140 Instruction Manual Comprehensive instruction manual for the TechniSat DIGITRADIO 140, covering setup, operation, features like Internet Radio, DAB+, FM, Bluetooth, CD/MP3 playback, and troubleshooting.
 TechniSat DigitRadio 210 IR Radio DAB+/FM Code: 001270007	TechniSat DigitRadio 210 IR User Manual - DAB/FM Radio Guide Comprehensive user manual for the TechniSat DigitRadio 210 IR, covering setup, operation, DAB/FM features, safety, and technical specifications. Learn how to use your digital radio.
 Bedienungsanleitung DIGITRADIO 217 Radio DAB+/FM mit Bluetooth Audio-Streaming und Weckfunktion	TechniSat DIGITRADIO 217 Bedienungsanleitung: DAB+/UKW-Radio mit Bluetooth und Weckfunktion Die offizielle Bedienungsanleitung für das TechniSat DIGITRADIO 217. Erfahren Sie mehr über die Funktionen wie DAB+/UKW-Radioempfang, Bluetooth-Audiostreaming und die Weckfunktion dieses digitalen Radios.
 Operating instructions DIGITRADIO 217 Radio DAB+/FM with Bluetooth audio streaming and alarm clock function	TechniSat DIGITRADIO 217 Operating Instructions Comprehensive operating instructions for the TechniSat DIGITRADIO 217, detailing its features, setup, functions, and safety guidelines for DAB+/UKW radio with Bluetooth audio streaming and alarm clock functionality.