

HUNICOM H-628

HUNICOM H-628 Walkie Talkie Instruction Manual

Model: H-628

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your HUNICOM H-628 Walkie Talkies. Please read this manual thoroughly before using the device and retain it for future reference.

2. PRODUCT FEATURES

- **Clear Sound:** Equipped with upgraded speakers and automatic squelch for clear communication.
- **Multi-Channel Operation:** Features 22 channels for versatile communication.
- **Extended Range:** Up to 5 miles in open areas.
- **Built-in Flashlight:** For use in low-light conditions.
- **VOX Function:** Hands-free communication capability.
- **LCD Display:** Backlit display for easy viewing of channel and settings.
- **Compact and Durable Design:** Lightweight and palm-sized with a belt clip.
- **Water Resistance:** IP65 rated for protection against water ingress.

Great Size for Both Adults and Children



Image: HUNICOM H-628 Walkie Talkie highlighting its compact size (5.91 inches tall, 2.36 inches wide) and key features such as Key Lock, Long Range, Flashlight, One to Many Transmission, HD Voice, VOX Baby Monitor, Auto Power Saver, and 22 Channels.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the walkie talkie.
2. Slide the latch or unscrew the cover to open the compartment.
3. Insert 3 AAA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it.

3.2 Power On/Off

To turn the walkie talkie on or off, press and hold the **Power/Menu** button until the LCD screen illuminates or turns off.

4. OPERATING INSTRUCTIONS

4.1 Adjusting Volume

Use the **Up** and **Down** buttons to adjust the speaker volume. The current volume level will be displayed on the LCD screen.

4.2 Selecting a Channel

1. Press the **Menu** button once. The channel number on the LCD will flash.
2. Use the **Up** or **Down** buttons to select your desired channel (1-22).
3. Press the **Menu** button again or wait a few seconds for the selection to be confirmed.

4.3 Transmitting and Receiving

- To transmit, press and hold the **PTT (Push-To-Talk)** button located on the side of the device. Speak clearly into the microphone.
- Release the **PTT** button to stop transmitting and listen for a response.
- Ensure all walkie talkies are on the same channel for communication.

4.4 Using the Flashlight

Press the **LAMP** button to turn the built-in flashlight on or off. This feature is useful in dark environments.

Your browser does not support the video tag.

Video: Demonstrates the HUNICOM H-628 Walkie Talkie's features, including its design, flashlight function, and LCD display. The video highlights ease of operation, long range, and strong signal.

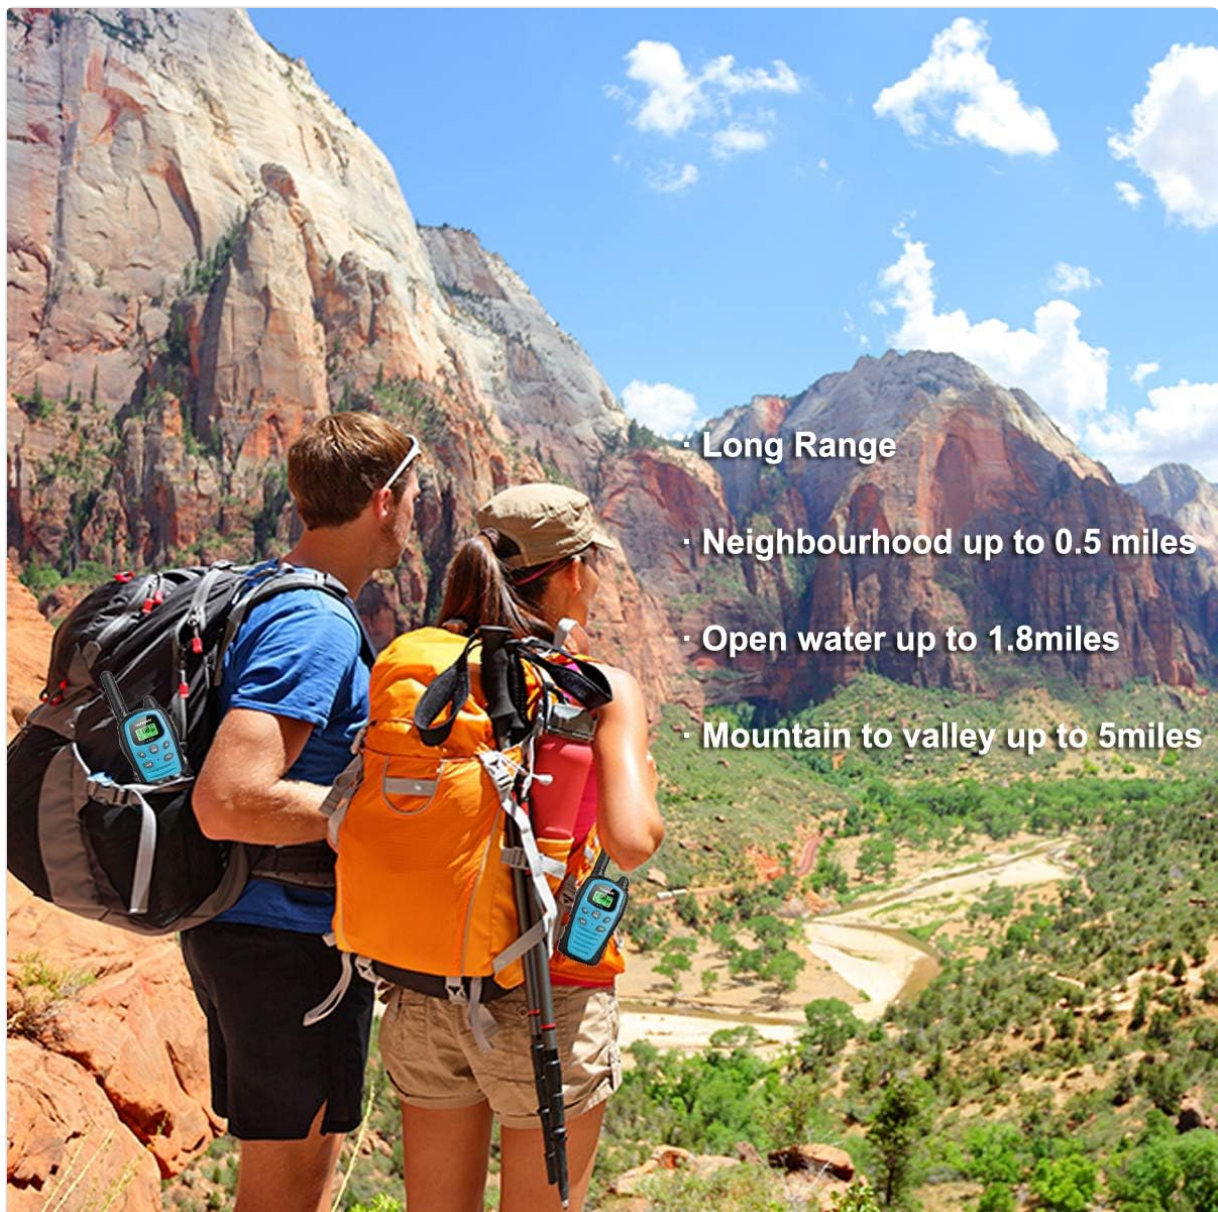


Image: Two individuals hiking, illustrating the long-range communication capabilities of the HUNICOM walkie talkies in various environments: up to 0.5 miles in neighborhoods, 1.8 miles in open water, and 5 miles from mountain to valley.

5. MAINTENANCE

- Keep the walkie talkie dry. If it gets wet, wipe it dry immediately.
- Do not expose the device to extreme temperatures.
- Clean the device with a soft, damp cloth. Avoid using harsh chemicals or cleaning solvents.
- Remove batteries if the device will not be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Batteries are low or incorrectly installed.	Replace batteries or ensure correct polarity.
Cannot communicate	Different channels, out of range, or volume too low.	Ensure both units are on the same channel. Move closer. Increase volume.
Static or unclear sound	Interference, weak signal, or low battery.	Move to an open area. Check battery level.
Short communication range	Obstructions (buildings, hills), weather conditions.	Move to a higher or more open location. Range varies by terrain.

7. SPECIFICATIONS

- **Brand:** HUNICOM
- **Model:** H-628
- **Color:** Blue
- **Number of Channels:** 22
- **Frequency Range:** 400 - 470 MHz
- **Talking Range Maximum:** 3 Kilometers (approximately 1.8 miles, up to 5 miles in open areas)
- **Voltage:** 4.5 Volts (requires 3x AAA batteries)
- **Water Resistance Level:** Waterproof (IP65)
- **Tuner Type:** UHF

8. WARRANTY AND SUPPORT

HUNICOM is committed to customer satisfaction. For any issues with your purchase, please contact HUNICOM customer support. While specific warranty details are not provided in this manual, please refer to your purchase documentation or the official HUNICOM website for warranty information and support contacts.

You can visit the HUNICOM Store for more information:[HUNICOM Official Store](#)

