

SENCOR SCE 5070BK

Sencor SCE 5070 BK American Coffee Maker Instruction Manual

Model: SCE 5070BK

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using your Sencor SCE 5070 BK coffee maker. Keep this manual for future reference.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Close supervision is necessary when the appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- The glass carafe is designed for use with this appliance. It must never be used on a range top.
- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision

or instruction concerning use of the appliance by a person responsible for their safety.

PRODUCT OVERVIEW

The Sencor SCE 5070 BK is an American-style drip coffee maker designed for ease of use and efficient coffee brewing. It features a 1.8-liter glass carafe, suitable for preparing up to 15 cups of coffee at once.



Image: Sencor SCE 5070 BK American Coffee Maker. This image shows the complete coffee maker unit with its glass carafe and filter basket.

SETUP

Unpacking

1. Carefully remove all packaging materials from the coffee maker.
2. Check that all components are present: main unit, glass carafe with lid, and permanent filter.
3. Dispose of packaging materials responsibly.

First Use and Cleaning

1. Before first use, wash the glass carafe, its lid, and the permanent filter in warm, soapy water. Rinse thoroughly and dry.
2. Fill the water reservoir with fresh, cold water up to the "MAX" level (1.8 liters).
3. Place the permanent filter into the filter basket. Do not add coffee grounds for this initial cleaning cycle.
4. Place the glass carafe with its lid on the warming plate.
5. Plug the coffee maker into a suitable electrical outlet.
6. Press the ON/OFF button to start a brewing cycle. Allow the full cycle to complete.
7. Discard the water from the carafe. Your coffee maker is now ready for use.

OPERATING INSTRUCTIONS

Brewing Coffee

1. Ensure the coffee maker is unplugged and cooled if previously used.
2. Fill the water reservoir with fresh, cold water to your desired level, observing the water level markings. The maximum capacity is 1.8 liters (approximately 15 cups).
3. Place the permanent washable filter into the filter basket. If using paper filters, place a standard cone-shaped paper filter into the filter basket.
4. Add your desired amount of ground coffee into the filter. A general guideline is one tablespoon of ground coffee per cup (150ml), but adjust to your taste.
5. Close the filter basket cover securely.
6. Place the glass carafe with its lid onto the warming plate. Ensure the lid is properly seated to activate the drip-stop mechanism.
7. Plug the coffee maker into a suitable electrical outlet.
8. Press the ON/OFF button. The indicator light will illuminate, and the brewing process will begin.
9. Once the brewing cycle is complete, the coffee maker will automatically switch to a "keep warm" function. The warming plate will keep the coffee hot for a period before automatically shutting off.
10. To serve, carefully remove the carafe from the warming plate. The drip-stop feature will prevent coffee from dripping.
11. Unplug the appliance when not in use or when the warming function is no longer needed.

Note: For best results, use fresh, cold water and high-quality ground coffee. Do not open the filter basket cover during the brewing cycle as hot water may escape.

MAINTENANCE

Daily Cleaning

1. Always unplug the coffee maker and allow it to cool completely before cleaning.
2. Remove the permanent filter and discard used coffee grounds. Wash the permanent filter, glass carafe, and carafe lid in warm, soapy water. Rinse thoroughly and dry. The permanent filter is reusable.
3. Wipe the exterior surfaces of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
4. Do not immerse the main unit, power cord, or plug in water or any other liquid.
5. The item is **not** dishwasher safe.

Descaling

Mineral deposits (limescale) can build up in your coffee maker over time, affecting its performance and the taste of your coffee. Descale your coffee maker regularly, depending on the hardness of your water and frequency of use (e.g., every 2-4 weeks).

1. Prepare a descaling solution by mixing white vinegar and water in equal parts, or use a commercial descaling agent according to its instructions.
2. Pour the descaling solution into the water reservoir up to the "MAX" level.
3. Place the empty glass carafe on the warming plate.
4. Start a brewing cycle without coffee grounds. Allow half of the solution to brew through, then turn off the coffee maker and let it sit for 15-20 minutes to allow the solution to work.

5. Turn the coffee maker back on and allow the remaining solution to brew through.
6. Discard the descaling solution from the carafe.
7. Rinse the coffee maker by running at least two full cycles with fresh, cold water to remove any residual descaling solution taste.

TROUBLESHOOTING

If you encounter issues with your coffee maker, please consult the table below before contacting customer support.

Problem	Possible Cause	Solution
Coffee does not brew.	Not plugged in. No water in reservoir. ON/OFF button not pressed.	Ensure power cord is securely plugged into an outlet. Fill water reservoir with fresh water. Press the ON/OFF button.
Coffee brews too slowly.	Mineral deposits (limescale) buildup. Too much coffee grounds. Coffee grounds too fine.	Descale the coffee maker (see Maintenance section). Reduce the amount of coffee grounds. Use a coarser grind of coffee.
Coffee overflows from filter basket.	Too much coffee grounds. Filter basket not properly seated. Carafe not properly placed on warming plate. Clogged filter.	Reduce the amount of coffee grounds. Ensure filter basket is correctly inserted. Ensure carafe is centered on the warming plate and lid is properly seated. Clean the permanent filter or use a new paper filter.
Coffee tastes weak or watery.	Not enough coffee grounds. Coffee grounds too coarse. Poor quality coffee.	Increase the amount of coffee grounds. Use a finer grind of coffee. Use fresh, high-quality coffee.

TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	SENCOR
Model Number	SCE 5070BK
Capacity	1.8 Liters (approx. 15 cups)
Color	Black
Special Features	Permanent filter, Thermal (warming plate)
Coffee Maker Type	Drip Coffee Maker
Material	Glass (carafe)

Feature	Detail
Wattage	1000 watts
Voltage	240 Volts
Input User Interface	Buttons
Coffee Input Type	Ground coffee
Power Source	AC adapter
Filter Type	Reusable
Item Weight	1742 Grams
Dishwasher Safe	No

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Sencor website. If you require technical support or have questions not covered in this manual, please contact Sencor customer service.

Please have your model number (SCE 5070BK) and purchase details ready when contacting support.
