

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [BaByliss](#) /

› BaBylissMEN MT726E 8-in-1 Carbon Titanium Multitrimmer Instruction Manual

## BaByliss MT726E

# BaBylissMEN MT726E 8-in-1 Carbon Titanium Multitrimmer Instruction Manual

## 1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your BaBylissMEN MT726E 8-in-1 Carbon Titanium Multitrimmer. Please read all instructions carefully before using the device and retain this manual for future reference.

### Important Safety Information

- Keep the device away from water. Do not use it near bathtubs, showers, basins, or other vessels containing water.
- This appliance is not intended for use by children. Keep out of reach of children.
- Exercise caution when handling the blades during cleaning or maintenance to prevent injury.
- Ensure the device is fully charged before first use.

## 2. PRODUCT OVERVIEW

### Package Contents

The BaBylissMEN MT726E Multitrimmer package includes the following components:

- Multitrimmer main unit
- Precision Trimmer Head (Carbon Titanium blades)
- Foil Shaver Head
- Nose/Ear Trimmer Head
- Adjustable Guide Comb (0.5-7mm)
- 4 Fixed Guide Combs (3mm, 5mm, 6mm, 7mm)
- Cleaning Brush
- Lubricating Oil
- Power Adapter



Image 2.1: The BaBylissMEN MT726E Multitrimmer shown with all its interchangeable heads and guide combs.

### **Key Features**

- Cordless operation for flexible use.
- Precision Carbon Titanium blades for smooth and effortless trimming (0.5-7 mm).
- Dedicated Nose/Ear Trimmer for unwanted hair removal.
- Foil Shaver for defining contours and achieving a precise, smooth finish.
- Washable heads for easy cleaning.
- Up to 60 minutes of cordless use on a full charge.



Image 2.2: The main BaBylissMEN MT726E Multitrimmer unit with the foil shaver head and nose trimmer head detached.

### 3. SETUP

#### 3.1 Charging the Device

1. Ensure the trimmer is switched off.
2. Connect the power adapter to the charging port at the base of the trimmer.
3. Plug the adapter into a suitable electrical outlet.
4. Allow the trimmer to charge for approximately 8 hours for a full charge. The charging indicator light will illuminate during charging.
5. Disconnect the adapter once charging is complete or before use.

#### 3.2 Attaching and Removing Trimmer Heads

1. To attach a head (e.g., Precision Trimmer, Foil Shaver, Nose/Ear Trimmer), align the head with the main unit and gently push it down until it clicks securely into place.
2. To remove a head, hold the main unit firmly and gently pull the attached head upwards. Some force may be required, but avoid excessive twisting.



Image 3.1: Close-up view of the precision trimmer head, showing the blade mechanism.

### **3.3 Attaching Guide Combs**

1. Ensure the desired trimmer head (typically the Precision Trimmer Head) is attached to the main unit.
2. Select the appropriate guide comb for your desired hair length.

3. Align the guide comb with the trimmer head and slide it on until it locks into position.
4. To remove, gently lift the comb from the back and slide it off.



Image 3.2: Close-up view of the nose and ear trimmer head, ready for attachment.

## 4. OPERATING INSTRUCTIONS

### 4.1 Using the Precision Trimmer Head

The Precision Trimmer Head is ideal for shaping beards, stubble, and body hair.

1. Attach the Precision Trimmer Head to the main unit.
2. For desired hair length, attach an appropriate guide comb (adjustable or fixed).
3. Switch on the trimmer.
4. Hold the trimmer with the blades flat against the skin and move it slowly against the direction of hair growth.

5. For detailing or precise lines, remove the guide comb and use the bare blade carefully.



Image 4.1: Top view of the precision trimmer blade, highlighting its carbon titanium construction.

## 4.2 Using the Foil Shaver Head

The Foil Shaver Head provides a close, smooth finish for edges and small areas.

1. Attach the Foil Shaver Head to the main unit.
2. Switch on the trimmer.
3. Hold the shaver gently against the skin, ensuring the foil makes full contact.
4. Move the shaver in short, light strokes against the direction of hair growth for best results.



Image 4.2: Close-up view of the foil shaver head, designed for a smooth finish.

### **4.3 Using the Nose/Ear Trimmer Head**

The Nose/Ear Trimmer Head is designed for safe and comfortable removal of unwanted hair in sensitive areas.

1. Attach the Nose/Ear Trimmer Head to the main unit.
2. Switch on the trimmer.
3. Gently insert the trimmer tip into the nostril or ear canal. Do not insert too deeply.
4. Move the trimmer in a circular motion to trim hairs.
5. Clean the head after each use.

## **5. MAINTENANCE**

---

## 5.1 Cleaning the Blades and Heads

Regular cleaning ensures optimal performance and hygiene.

1. Ensure the trimmer is switched off and disconnected from the power adapter.
2. Remove the attached trimmer head.
3. Use the provided cleaning brush to remove any loose hairs from the blades and inside the head.
4. The trimmer heads are washable. Rinse the detached heads under running water. Do not submerge the main unit.
5. Allow all parts to air dry completely before reattaching or storing.

## 5.2 Oiling the Blades

To maintain blade sharpness and longevity, oil the precision trimmer blades regularly.

1. After cleaning and drying the precision trimmer head, apply 1-2 drops of the provided lubricating oil onto the blades.
2. Switch on the trimmer for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

## 5.3 Storage

Store the trimmer and its accessories in a dry place, away from direct sunlight and out of reach of children.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is discharged.	Charge the trimmer for 8 hours.
Trimmer pulls hair or cuts poorly.	Blades are dirty or not oiled.	Clean the blades and apply lubricating oil.
Trimmer head is difficult to attach/remove.	Incorrect alignment or debris.	Ensure correct alignment and clear any debris. Apply gentle, firm pressure.
Reduced battery life.	Battery not fully charged or aging.	Ensure full 8-hour charge. Battery performance may decrease over time.

## 7. SPECIFICATIONS

- **Model Number:** MT726E
- **Product Name:** BaBylissMEN 8-in-1 Carbon Titanium Multitrimmer
- **Brand:** BaByliss
- **Blade Material:** Carbon Titanium
- **Power Source:** Cordless (Rechargeable Battery)
- **Battery Type:** Requires 1 battery (integrated)
- **Charging Time:** Approximately 8 hours

- **Cordless Run Time:** Up to 60 minutes
- **Dimensions (L x W x H):** 3.7 x 3.5 x 16.5 cm
- **Weight:** 210 grams
- **Country of Origin:** China
- **Recommended Uses:** Beard, Body, Nose

## 8. WARRANTY AND SUPPORT

---

This BaBylissMEN MT726E Multitrimmer comes with a **3-year supplier warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance beyond this manual, or warranty inquiries, please refer to the contact information provided with your product packaging or visit the official BaByliss website for customer service details in your region.