

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Valuxhome](#) /

› [Valuxhome 33-Inch Electric Fireplace Insert \(Model VEF30T\) User Manual](#)

Valuxhome VEF30T

Valuxhome 33-Inch Electric Fireplace Insert User Manual

Model: VEF30T

1. INTRODUCTION

Thank you for choosing the Valuxhome 33-inch Electric Fireplace Insert. This manual provides essential information for the safe operation, installation, and maintenance of your new electric fireplace. Please read this manual thoroughly before installation and use, and retain it for future reference.

2. IMPORTANT SAFETY INFORMATION

- Read all instructions before using this fireplace.
- This appliance is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the fireplace.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped, or damaged in any manner.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Connect to properly grounded outlets only.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This fireplace has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable

power tap (outlet/power strip).

- The fireplace is equipped with an overheating protection feature that will automatically shut off the unit if it reaches an unsafe temperature.

3. PRODUCT OVERVIEW

The Valuxhome 33-inch Electric Fireplace Insert is designed to provide supplemental heat and a realistic flame effect. It features multiple flame modes, a log speaker for crackling sounds, and two heat settings (750W/1500W).



Figure 3.1: Valuxhome 33-inch Electric Fireplace Insert showcasing different flame colors (yellow, blue, purple) and realistic log set.



Figure 3.2: Detailed view of the fireplace components including the speaker, air inlet, air outlet, and handle for easy installation.

4. SETUP AND INSTALLATION

This electric fireplace is designed for insert installation into an existing fireplace opening or a custom-built cabinet. Ensure the installation area meets the minimum opening requirements.

4.1 Dimensions and Clearance

The front dimension of the 33-inch model is 33"W x 8.84"D x 24.9"H. The back dimension is 29.6"W x 7.7"D x 23.81"H. The minimum required opening wall size is 30"W x 8.6"D x 23.8"H.

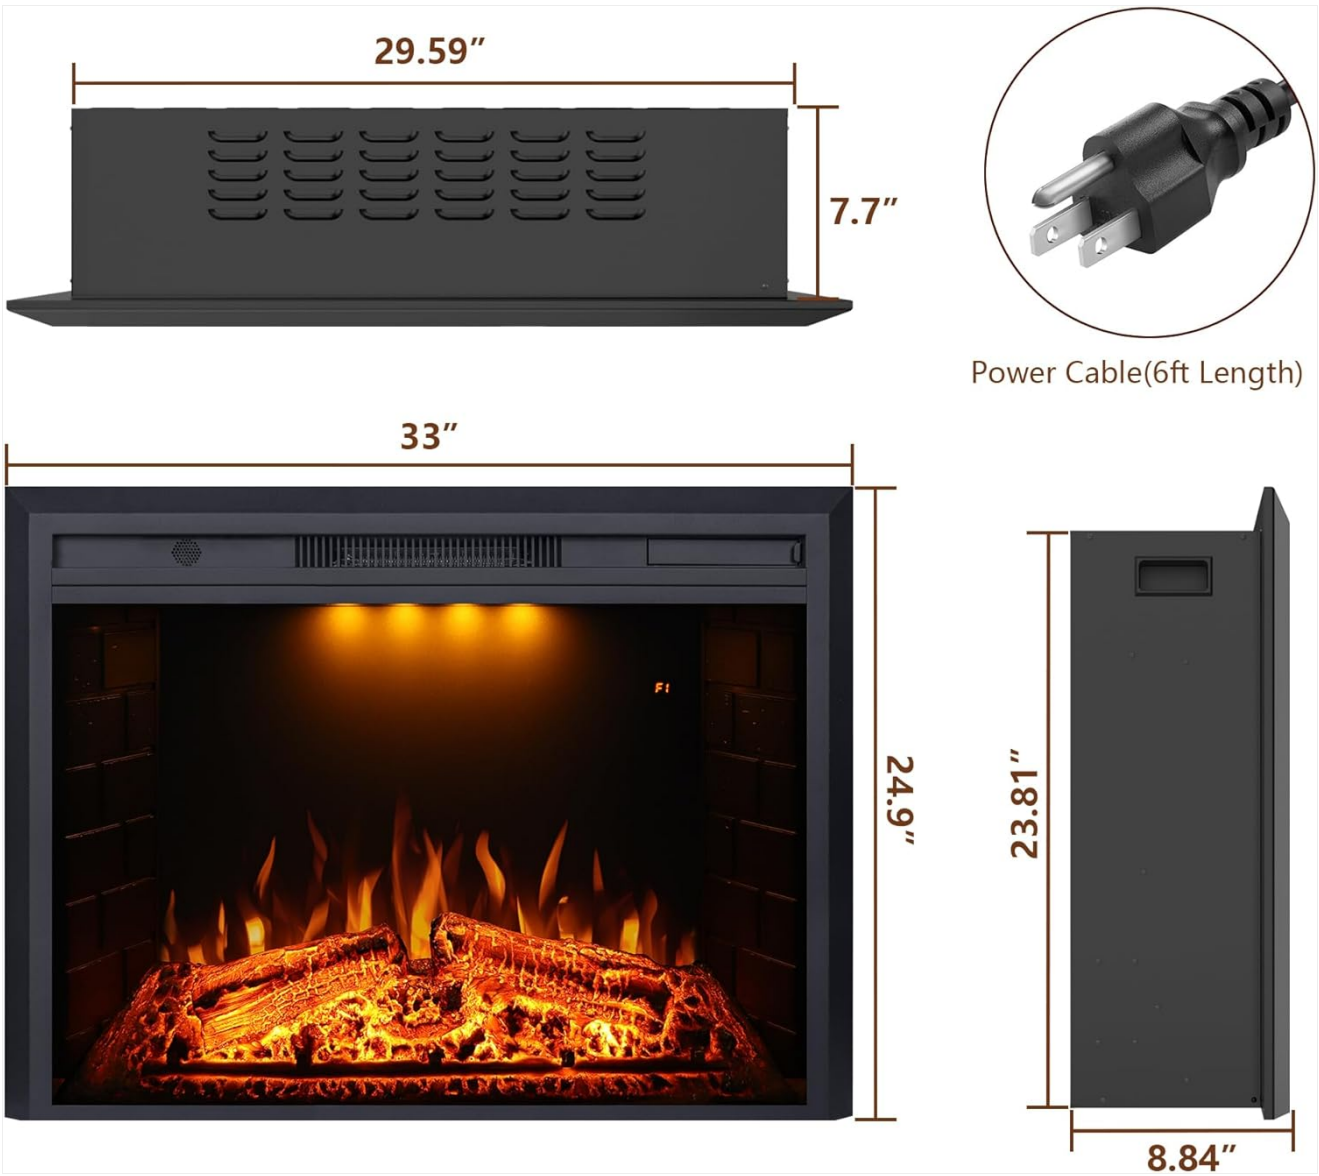


Figure 4.1: Product dimensions and power cable length (6 feet).



Model	Front size(inches)		Back size(inches)		Depth size (inches)	Advise opening size(inches)		Advise minimum opening depth(inches)
	Width(L)	High(H)	Width(L)	High(H)		Width(OL)	High(OH)	Depth(OD)
25"L21"H	25.4	21.1	21.95	19.8	7.7	22.3-25	20-20.7	>8.5
30"L25"H	30.5	24.9	27.11	23.81	7.7	27.5-30.1	23.8-24.3	>8.5
33"L25"H	33	24.9	29.6	23.81	7.7	30-32.6	23.8-24.3	>8.5
36"L27"H	35.6	27.5	32.23	26.41	7.7	32.6-35.2	26.4-27.1	>8.5
36"L21"H	35.6	21.1	32.23	19.99	7.7	32.6-35.2	20-20.7	>8.5
40"L27"H	40	27.5	36.62	26.41	7.7	37-39.6	26.6-27.1	>8.5
43"L27"H	43	27.5	39.57	26.41	7.7	39.96-42.6	26.6-27.1	>8.5
50"L27"H	50	27.5	46.62	26.41	7.7	47-49.6	26.6-27.1	>8.5

Figure 4.2: Installation guide with a table detailing advised opening sizes for different fireplace models.

4.2 Placement Considerations

Ensure the fireplace is placed on a stable, level surface. Maintain proper clearance from combustible materials as specified in the safety section. The unit can be installed in a TV cabinet, built into a wall, or within a fireplace cabinet.

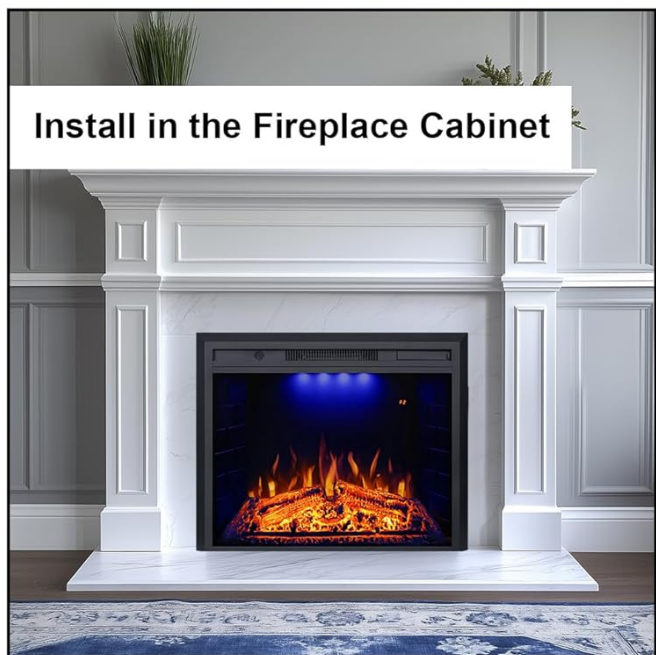
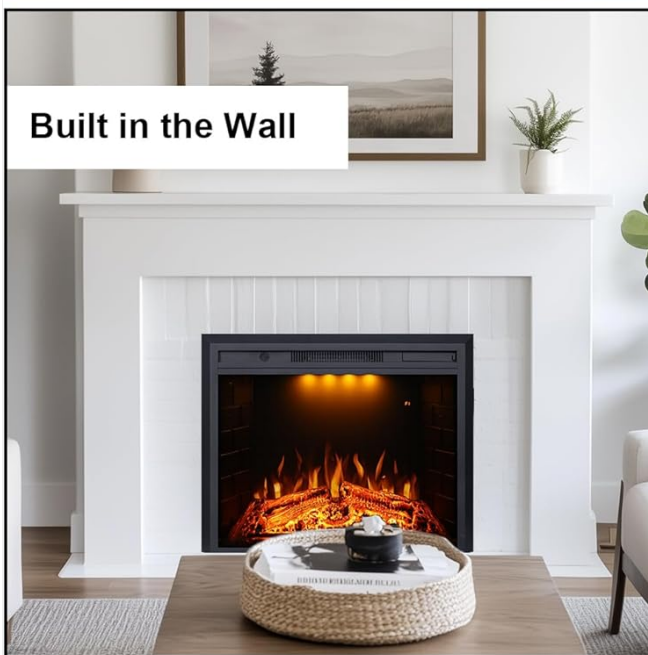


Figure 4.3: Various installation options for the electric fireplace insert.

4.3 Electrical Connection

Plug the 6-foot power cable directly into a 120V AC grounded wall outlet. Do not use extension cords, power strips, or outlet adapters. Ensure the outlet is easily accessible.

5. OPERATING INSTRUCTIONS

The Valuxhome electric fireplace can be operated using the control panel on the unit or the included remote control. The remote control has an effective range of approximately 11.5 feet.



Log Speaker:

Real log burning effect.



Timer:

1-9H timer



Heating Settings:

Low(750W)/High(1500W) temperature



Power ON/OFF:

Turn on/off flame and heating effects



Flame Brightness:

1-5 Levels



Top Light:

3 Clors(orange,blue,purple)

Log Speaker Timer Heating Settings Top Light Flame Brightness Power ON/OFF

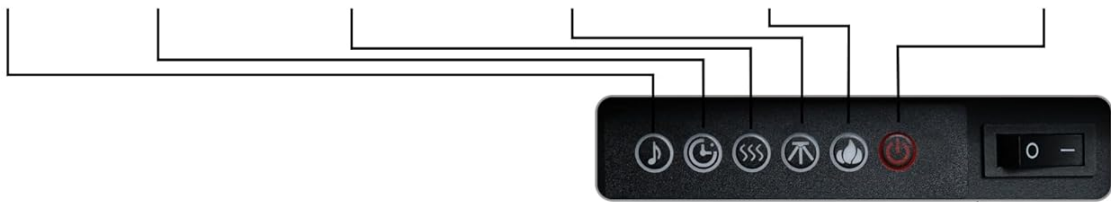


Figure 5.1: Remote control and control panel functions.

5.1 Power ON/OFF

Press the **Power ON/OFF** button on the control panel or remote to turn the unit on or off. This controls both the flame and heating effects.

5.2 Flame Brightness

The flame effect has 5 adjustable brightness levels. Press the **Flame Brightness** button to cycle through the levels (L1-L5).



5 Flame Brightness levels



Figure 5.2: Five flame brightness levels.

5.3 Top Light Colors

The fireplace features 3 top light colors: orange, blue, and purple. Press the **Top Light** button to change the ambient light color.



Figure 5.3: Example of the purple top light effect.

5.4 Heating Settings

The unit offers two heat options: low (750W) and high (1500W). Press the **Heating Settings** button to select your desired heat output. The fireplace can also operate with the flame effect only, without heat.



Only Flame



**Flame
&
Heating**

Figure 5.4: Flame only mode versus Flame and Heating mode.

5.5 Timer Function

A built-in timer allows for automatic shut-off, settable from 1 hour to 9 hours. Press the **Timer** button to adjust the duration.

5.6 Log Speaker

Activate the log speaker feature by pressing the **Log Speaker** button to enjoy a realistic fire crackling sound effect.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your electric fireplace.

6.1 Cleaning

- Always disconnect the power before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

- Clean the air inlet and outlet vents periodically to prevent dust buildup, which can affect heating efficiency.

6.2 Light Bulb Replacement

This unit uses LED technology for the flame effect, which typically does not require bulb replacement. If any issues arise with the lighting, contact customer support.

7. TROUBLESHOOTING

If you experience issues with your electric fireplace, refer to the following common troubleshooting steps. For more detailed guidance, please consult the official Troubleshooting Guide PDF available online.

- **No Power:** Ensure the power cord is securely plugged into a grounded 120V AC outlet. Check if the circuit breaker has tripped.
- **No Heat Output:** Verify that the heating function is activated and set to either low (750W) or high (1500W). Check if the overheating protection has been triggered; if so, unplug the unit, wait 10-15 minutes, and plug it back in. Ensure air vents are not blocked.
- **Flame Effect Not Working:** Ensure the unit is powered on. If the flame effect is still not visible, contact customer support.
- **Remote Control Not Working:** Check and replace the AAA batteries in the remote control. Ensure there are no obstructions between the remote and the fireplace sensor.
- **Unusual Noises:** A quiet fan noise is normal during heating operation. If you hear loud or unusual noises, turn off the unit and contact customer support.

For further assistance, please refer to the [Troubleshooting Guide \(PDF\)](#).

8. SPECIFICATIONS

Feature	Specification
Brand	Valuxhome
Model Name	Electric Fireplace (VEF30T)
Power Source	Electric
Product Dimensions (D x W x H)	8.84" x 33" x 24.9"
Material	Metal, Tempered Glass
Installation Type	Insert
Heat Output	5100 British Thermal Units
Heating Coverage	Up to 400 sq.ft.
Heat Settings	750W / 1500W
Timer	1-9 Hours
Flame Brightness Levels	5
Top Light Colors	Yellow, Blue, Purple

Feature	Specification
Included Components	Log, Remote Control
Item Weight	51.7 Pounds
UPC	842880163181

9. WARRANTY INFORMATION

This Valuxhome electric fireplace insert comes with a limited warranty. Please refer to the warranty documentation included with your purchase for specific terms and conditions. Retain your proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

For technical assistance, replacement parts, or any questions regarding your Valuxhome electric fireplace, please contact Valuxhome customer support. Refer to the contact information provided in your product packaging or visit the official Valuxhome website for support details.