

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [HCDZ](#) /

> [HCDZ Replacement Remote Control User Manual for Emerson TVs](#)

**HCDZ LC320EM93, LC320EM98, LC320SS9, LC320SS9A, LC320SS9B, LC321EM9A, LC321EM9D, LC321EM9E**

# HCDZ Replacement Remote Control User Manual

For Emerson LC320EM93, LC320EM98, LC320SS9, LC320SS9A, LC320SS9B, LC321EM9A, LC321EM9D, LC321EM9E LED LCD HDTV TVs

## INTRODUCTION

---

This manual provides instructions for the HCDZ Replacement Remote Control, designed for use with various Emerson LED LCD HDTV models. This remote control is an infrared (IR) replacement unit and requires no programming. Simply insert batteries, and it is ready for use.

## SETUP

---

### Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



*Image: Back of the remote control with the battery compartment. Ensure correct battery polarity when inserting.*

## **Initial Use**

This replacement remote control does not require any programming. Once the batteries are correctly installed, it is ready for immediate use with compatible Emerson TV models.

## **OPERATING INSTRUCTIONS**

---

Point the remote control directly at the infrared receiver on your Emerson TV. Ensure there are no obstructions between the remote and the TV.



*Image: Front view of the remote control, displaying all buttons.*

### Key Functions

- **POWER** ( ): Turns the TV on or off.
- **SOURCE**: Selects input sources (e.g., HDMI, AV, Component).
- **VOL+ / VOL-**: Increases or decreases the volume level.

- **CH+ / CH-**: Changes the TV channel up or down.
- **MUTE ( )**: Mutes or unmutes the TV audio.
- **SAP**: Selects Secondary Audio Program (if available).
- **ECO**: Activates or deactivates power-saving mode.
- **BACK**: Returns to the previous menu or screen.
- **MENU**: Opens the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right)**: Navigates through menus and options.
- **OK**: Confirms selections in menus.
- **INFO**: Displays information about the current program or input.
- **Number Buttons (0-9)**: Directly enters channel numbers.
- **PREVCH**: Returns to the previously viewed channel.

## MAINTENANCE

---

### Cleaning the Remote

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

### Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

### Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

## TROUBLESHOOTING

---

- **Remote is not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new AAA batteries.
  - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
  - Verify that you are pointing the remote directly at the TV's sensor.
  - Confirm that the TV is powered on.
- **Limited range or intermittent response:**
  - Ensure batteries are fresh. Low battery power can reduce range.
  - Check for strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the IR signal.
  - Clean the remote's IR emitter and the TV's IR receiver with a soft, dry cloth.

## SPECIFICATIONS

---

<b>Brand</b>	HCDZ
<b>Compatible Devices</b>	Emerson LED LCD HDTVs (e.g., LC320EM93, LC320EM98, LC320SS9, LC320SS9A, LC320SS9B, LC321EM9A, LC321EM9D, LC321EM9E)

<b>Connectivity Technology</b>	Infrared (IR)
<b>Maximum Range</b>	Approximately 10 meters (33 feet)
<b>Battery Type</b>	2 x AAA batteries (not included)
<b>Programming Required</b>	No

## **WARRANTY AND SUPPORT**

---

Specific warranty information for this HCDZ replacement remote control is not provided in the product details. For any warranty claims, technical support, or further assistance, please contact the seller or manufacturer directly through your purchase platform.

Please retain your proof of purchase for any support inquiries.