

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Leifheit](#) /
- › [Leifheit Clean Twist Disc Mop Ergo Mop and Bucket Instruction Manual](#)

Leifheit 52101

Leifheit Clean Twist Disc Mop Ergo Mop and Bucket Instruction Manual

Model: 52101 | Brand: Leifheit

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Leifheit Clean Twist Disc Mop Ergo Mop and Bucket. This system is designed for efficient and convenient floor cleaning, featuring a moisture-controlled spin mop and an easy-steer 360° joint microfibre mop head.

Please read these instructions carefully before first use to ensure proper function and longevity of the product. Keep this manual for future reference.

2. PACKAGE CONTENTS

Verify that all components are present in your package:

- 1x Mop with telescopic handle
- 1x Microfibre mop head
- 1x Bucket with wringer mechanism



Image: The Leifheit Clean Twist Disc Mop Ergo Mop and Bucket system, showing the mop with its handle and the bucket with its integrated wringer.

3. SETUP

1. **Assemble the Handle:** Connect the sections of the telescopic handle by twisting them securely. Ensure the handle is fully extended and locked at your desired height for comfortable use (adjustable up to 130 cm).
2. **Attach the Mop Head:** Align the microfibre mop head with the mop base and press firmly until it clicks into place.
3. **Prepare the Bucket:** The bucket comes pre-assembled with the wringer. If your model includes wheels, ensure they are securely attached to the bottom of the bucket.

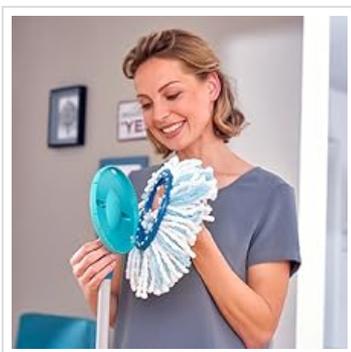


Image: A close-up view of the mop handle, highlighting the locking mechanism for adjusting its length and activating the spin function.

4. OPERATING INSTRUCTIONS

4.1 Filling the Bucket

Fill the bucket with water and your preferred cleaning solution. Do not exceed the maximum fill line indicated inside the bucket. The bucket has a 20 L capacity.

4.2 Wetting and Wringing the Mop

1. **Immerse Mop Head:** Place the mop head into the water compartment of the bucket, ensuring it is fully submerged.
2. **Release Handle Lock:** Unlock the handle by sliding the lever upwards. This allows the handle to move freely for the spin mechanism.
3. **Spin to Clean:** Move the mop head to the wringer basket. Push the mop handle downwards repeatedly to activate the spin mechanism. The more times you push, the drier the mop head will become, allowing you to control the moisture level for different floor types.
4. **Lock Handle:** Once the desired moisture level is achieved, slide the lever downwards to lock the handle in place before mopping.



Image: A person demonstrating the use of the Leifheit Clean Twist Disc Mop, showing the mop head being spun in the bucket's wringer to remove excess water.



Image: A close-up of the mop head spinning within the bucket's wringer, illustrating the water removal process.

4.3 Mopping Your Floors

With the mop head at the desired dampness, proceed to clean your floors. The 360° handle joint allows for easy steering and reaching under furniture. The microfibre mop head is suitable for all hard floor types.



Image: The Leifheit mop head positioned flat to clean effectively under low-lying furniture, demonstrating its flexible joint.

4.4 Product Demonstration Video

Your browser does not support the video tag.

Video: A demonstration of the Leifheit Clean Twist Disc Mop in action, showing how to wet, wring, and use the mop for effective floor cleaning. This video highlights the in-handle spin mechanism and the ease of use.

5. MAINTENANCE

5.1 Cleaning the Mop Head

The microfiber mop head is machine-washable at 60°C. Do not use fabric softener or bleach. Allow to air dry. For best results and to prolong the life of the mop head, it is recommended to wash it regularly after use.



Image: A detached microfiber mop head, ready for cleaning or replacement.



Image: Multiple Leifheit mop heads in a laundry basket, indicating they are washable and reusable.

5.2 Cleaning the Bucket

After each use, empty the dirty water from the bucket. Rinse the bucket thoroughly with clean water. The bucket is designed for easy emptying. Allow the bucket to air dry before storing.



Image: A woman demonstrating how to easily empty the Leifheit mop bucket into a sink after use.

5.3 Storage

Store the mop and bucket in a clean, dry place. The mop handle can be stored upright by clipping it to the bucket handle.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mop head not spinning effectively.	Handle lock is engaged.	Ensure the handle lock lever is slid upwards to the unlocked position before spinning.
Mop head not attaching securely.	Incorrect alignment or debris.	Ensure the mop head is correctly aligned with the base and press firmly until it clicks. Check for any debris obstructing the connection.
Water not draining completely from mop head.	Insufficient spinning.	Push the mop handle downwards more times and with more force to increase spin speed and duration.

7. SPECIFICATIONS

Feature	Detail
Model Number	52101
Included Components	Mop, bucket with wringer, telescopic handle
Item Volume (Bucket)	6 Liters (usable), 20 L capacity
Special Feature	Adjustable, Spin Mop
Item Weight	1.9 Kilograms (4.18 pounds)
Product Dimensions	18.35 x 10.43 x 10.24 inches (Bucket size: 46.6 x 34 x 26 cm)
Color	Green-turquoise
Material (Mop Head)	Microfibre
Handle Material	Aluminum or Plastic
Handle Type	Telescopic (adjustable up to 130 cm)
Assembly Required	No (minor assembly of handle/mop head)



Image: Diagram showing the dimensions of the Leifheit Clean Twist Disc Mop and Bucket, including handle length and bucket measurements.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Leifheit website or contact your retailer. Keep your proof of purchase for any warranty claims.

For further assistance or to purchase replacement parts, please visit the [Leifheit Store on Amazon](#) or contact Leifheit customer service directly.