

[Manuals.plus](#) /

› [Indesit](#) /

› Indesit Innex 10Kg Front Load Washing Machine User Manual

Indesit BWE-101484XWSSSGCC

Indesit Innex 10Kg Front Load Washing Machine User Manual

Model: **BWE-101484XWSSSGCC**

Brand: **Indesit**

1. INTRODUCTION

Welcome to the user manual for your new Indesit Innex 10Kg Front Load Washing Machine. This appliance is designed to provide efficient and convenient laundry care with its advanced features. Please read this manual carefully before using the appliance to ensure safe and optimal operation. Keep this manual for future reference.

Key features of your washing machine include a 10Kg capacity, 1400 RPM spin speed, Inverter Motor for quiet and efficient performance, 16 diverse washing programs, the intuitive Push & Wash function, a clear Big Digit Display, Auto Clean for easy maintenance, and a Child Lock for safety.



Figure 1.1: Indesit Innex 10Kg Front Load Washing Machine, front view.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the appliance is properly grounded and connected to a suitable power supply.
- Do not operate the washing machine if the power cord or plug is damaged.
- Keep children and pets away from the appliance during operation. The Child Lock feature should be activated when children are present.
- Do not attempt to repair or modify the appliance yourself. Contact qualified service personnel for any repairs.
- Always turn off the water supply and unplug the appliance before cleaning or maintenance.
- Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Remove the transport bolts located at the rear of the machine. These bolts are essential for safe transport but must be removed before operation to prevent damage.

3.2 Location and Leveling

Place the washing machine on a firm, level floor. Ensure there is adequate space around the appliance for ventilation and access. The dimensions of the washing machine are approximately 61 cm (Depth) x 60 cm (Width) x 85 cm (Height).



Figure 3.1: Indesit Innex Washing Machine with approximate dimensions.

Adjust the adjustable feet at the bottom of the machine to ensure it is perfectly level. A level machine reduces vibration and noise during operation.

3.3 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure all connections are tight to prevent leaks. Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.

3.4 Electrical Connection

Plug the power cord into a properly grounded electrical outlet. Ensure the voltage and frequency match the specifications

of your appliance.

3.5 First Use

Before washing clothes for the first time, run an empty wash cycle (e.g., a short cotton program at 60°C) without laundry or detergent to clean the drum and remove any manufacturing residues.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel features a program selector dial, function buttons, and a Big Digit Display for program information and time remaining.



Figure 4.1: Close-up view of the control panel, showing the program dial and Big Digit Display.

4.2 Loading Laundry

Open the washing machine door and load laundry into the drum. Do not exceed the maximum 10Kg capacity. Overloading can affect washing performance and cause excessive vibration.

4.3 Adding Detergent and Additives

Pull out the detergent dispenser drawer. Add appropriate amounts of detergent to the main wash compartment and fabric softener to its designated compartment. Refer to detergent packaging for dosage recommendations.

4.4 Selecting a Program

Turn the program selector dial to choose the desired washing program. The Big Digit Display will show the estimated program duration.

4.5 Push & Wash Function

For everyday mixed loads, simply press and hold the 'Push & Wash' button for 2 seconds. The machine will automatically select a suitable program (e.g., Mixed 30°C) and start washing without needing to select a program from the dial.

4.6 Adjusting Options

Depending on the selected program, you may be able to adjust options such as spin speed (up to 1400 RPM) and temperature using the corresponding buttons.

4.7 Starting and Pausing a Program

Press the 'Start/Pause' button to begin the selected program. Press it again to pause the program. The display will indicate the current status.

4.8 Child Lock

To activate the Child Lock, press and hold the designated Child Lock button (or combination of buttons as indicated on the control panel) for a few seconds until the indicator light appears. This prevents accidental changes to the program by children. Repeat the process to deactivate.

5. WASHING PROGRAMS

Your Indesit Innex washing machine offers 16 standard cycles designed for various fabric types and soil levels. Refer to the program descriptions below to select the most suitable cycle for your laundry.

- **Cotton:** For normally soiled cotton items.
- **Synthetics:** For synthetic items or mixed fabrics.
- **Delicates:** For delicate garments requiring gentle care.
- **Wool:** Specific program for wool garments, ensuring gentle washing.
- **Rapid:** Quick wash cycle for lightly soiled items.
- **Eco Cotton:** Energy-efficient program for cotton.
- **Mixed:** For a mixed load of cotton and synthetic items.
- **White:** For white cottons.
- **Spin + Drain:** Drains water and performs a spin cycle.
- **Rinse + Spin:** Rinses and then spins the laundry.
- *And other specialized programs for various needs.*

6. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your washing machine.

6.1 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.2 Detergent Dispenser Cleaning

Periodically remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue. Clean the housing of the dispenser with a brush.

6.3 Drum Cleaning (Auto Clean)

Your machine features an 'Auto Clean' function. Run this program periodically (e.g., once a month) without laundry or detergent to clean the drum and internal components, preventing odors and residue buildup.

6.4 Drain Pump Filter Cleaning

Locate the drain pump filter, usually at the bottom front of the machine. Place a shallow container underneath to catch any water. Unscrew the filter slowly to drain water, then remove and clean any lint or debris. Reinsert and tighten securely.

6.5 Door Seal

After each wash, wipe the rubber door seal with a cloth to remove any moisture or lint, preventing mold and odors.

7. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Program not selected; Start/Pause button not pressed.	Check power connection; Ensure door is latched; Select a program; Press Start/Pause.
No water filling	Water tap closed; Water inlet hose kinked; Water supply pressure too low.	Open water tap; Straighten hose; Check household water pressure.
Excessive vibration/noise	Transport bolts not removed; Machine not level; Laundry unevenly distributed.	Remove transport bolts; Adjust leveling feet; Redistribute laundry in drum.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Check and clear drain hose; Clean drain pump filter.

8. SPECIFICATIONS

Attribute	Detail
Brand	Indesit
Model	BWE-101484XWSSSGCC
Capacity	10 Kilograms
Max Spin Speed	1400 RPM
Product Dimensions (D x W x H)	61 x 60 x 85 cm
Item Weight	77 Kilograms
Installation Type	Freestanding
Special Features	Inverter Motor, Push & Wash, Auto Clean, Child Lock, Big Digit Display
Control Console	Push Button
Standard Cycles	16
Access Location	Front Load
Material Type	ABS

9. WARRANTY AND SUPPORT

Your Indesit Innex washing machine comes with a manufacturer's warranty. Please refer to the warranty card or documentation provided with your purchase for specific terms, conditions, and duration of the warranty.

For technical assistance, repairs, or to order spare parts, please contact Indesit customer support. Ensure you have your product model number (BWE-101484XWSSSGCC) and serial number ready when contacting support.

For the most up-to-date contact information for Indesit customer service in your region, please visit the official Indesit website or refer to your purchase receipt.

© 2024 Indesit. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question