

- Manuals.plus /
- > KitchenAid /
- > KitchenAid Artisan 5KMT2204EPP 2-Slice Toaster User Manual

KitchenAid 5KMT2204EPP

KitchenAid Artisan 5KMT2204EPP 2-Slice Toaster User Manual

Model: 5KMT2204EPP | Brand: KitchenAid

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your KitchenAid Artisan 5KMT2204EPP 2-Slice Toaster. Please read all instructions carefully before using the appliance.



Figure 1: The KitchenAid Artisan 5KMT2204EPP 2-Slice Toaster. This image shows the front view of the toaster, highlighting its Pebble

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Always unplug the toaster from the electrical outlet when not in use.

PARTS AND FEATURES

Familiarize yourself with the components of your KitchenAid Artisan Toaster.

- 1. Toasting Slots:** Two wide slots for various bread types.
- 2. Browning Control Lever:** Adjusts toast shade from 1 (light) to 7 (dark).
- 3. Cancel Button:** Stops the toasting cycle at any time.
- 4. Bagel Button:** Toasts the cut side of bagels and warms the other side.
- 5. Defrost Button:** Gently thaws and toasts frozen bread.
- 6. Reheat Button:** Warms toast without further browning.
- 7. Sandwich Button:** For use with the included sandwich cage.
- 8. Crumb Tray:** Removable tray for easy cleaning of crumbs.

9. Sandwich Cage (Accessory): Holds sandwiches for toasting.

10. Warming Rack (Accessory): For warming pastries or buns.



Figure 2: Front panel controls of the toaster. This image details the buttons for Cancel, Bagel, Defrost, Reheat, and Sandwich, along with the browning control lever.



Figure 3: The toaster shown with its warming rack accessory. This rack can be placed on top of the toaster slots to warm items like croissants or buns.

SETUP

1. **Unpack:** Carefully remove the toaster and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the appliance.
3. **First Use:** Before first use, operate the toaster without bread on the highest browning setting (7) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate. Ensure the area is well-ventilated.
4. **Power Connection:** Plug the power cord into a grounded 240V AC electrical outlet.

OPERATING INSTRUCTIONS

Basic Toasting

1. **Insert Bread:** Place one or two slices of bread into the toasting slots.
2. **Select Browning:** Adjust the browning control lever to your desired shade (1 for light, 7 for dark).
3. **Start Toasting:** Press the toast lever down until it locks into place. The toaster will automatically lower the bread and begin the toasting cycle.
4. **Completion:** Once the cycle is complete, the toast will automatically rise.
5. **Cancel:** To stop the toasting cycle at any time, press the "Cancel" button.



Figure 4: A view into the two wide toasting slots. These slots are designed to accommodate various bread thicknesses.

Special Functions

- **Bagel Function:** Insert bagels with the cut side facing inwards. Press the "Bagel" button before or during the toasting cycle. This function toasts the cut side and gently warms the outer side.

- **Defrost Function:** For frozen bread, insert the bread and press the "Defrost" button. This function adds extra time to thaw and then toast the bread.
- **Reheat Function:** If your toast has cooled, insert it back into the slots and press the "Reheat" button. This warms the toast without further browning.
- **Sandwich Function:** Place your sandwich ingredients inside the sandwich cage. Insert the cage into the toasting slots and press the "Sandwich" button. This function is designed for making grilled sandwiches.

CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your toaster.

1. **Unplug Before Cleaning:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Crumb Tray Cleaning:**
 - Locate the removable crumb tray at the bottom of the toaster.
 - Slide out the tray and discard crumbs.
 - Wipe the tray with a damp cloth and dry thoroughly before reinserting.
 - Do not operate the toaster without the crumb tray in place.
3. **Exterior Cleaning:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
4. **Interior Cleaning:** Do not insert any objects into the toasting slots to clean. If food becomes lodged, unplug the toaster and carefully invert it to dislodge the food.
5. **Storage:** When not in use, store the toaster in a clean, dry place.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure toaster is securely plugged into a working outlet. Check household circuit breaker.
Toast is too light or too dark.	Browning control setting is incorrect.	Adjust the browning control lever to a higher (darker) or lower (lighter) setting.
Bread is stuck in the toaster.	Oversized bread; food lodged.	Unplug the toaster. Carefully remove the bread using non-metallic tongs. Do not force.
Smoke coming from toaster.	Crumbs accumulated; food burning.	Immediately press "Cancel" and unplug. Allow to cool. Clean crumb tray. Ensure no food is lodged.

If the problem persists after attempting these solutions, please contact KitchenAid Customer Support.

SPECIFICATIONS

Feature	Detail
Brand	KitchenAid
Model Number	5KMT2204EPP
Color	Palm Pebbled
Dimensions (L x W x H)	34.8 x 18 x 22.6 cm
Weight	5 Kilograms
Power	1250 Watts
Voltage	240V
Material	Metal
Number of Slots	2
Specific Uses	Bagel, Bread, Grilled Cheese Sandwich

WARRANTY AND SUPPORT

For warranty information, service, or technical support, please refer to the warranty card included with your product or visit the official KitchenAid website. Keep your purchase receipt as proof of purchase.

KitchenAid Official Website: www.kitchenaid.com

For specific regional support, please check the contact information provided in your product's packaging or on the regional KitchenAid website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07Z6J6NJJ>

More documents and user manuals: <https://manuals.plus/>