

[Manuals.plus](#) /

› [ROMP](#) /

› ROMP Flip Wand Vibrator User Manual

ROMP Flip

ROMP Flip Wand Vibrator User Manual

Model: Flip

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your ROMP Flip Wand Vibrator. Please read these instructions carefully before first use and retain for future reference.

The ROMP Flip is a compact, powerful wand vibrator designed for personal massage. It features a flexible head, multiple vibration modes and patterns, and is made from body-safe silicone. The device is also fully waterproof and rechargeable.

2. SAFETY INFORMATION

- For adult use only.
- Do not use if the device appears damaged.
- Discontinue use immediately if you experience any discomfort or pain.
- Consult a healthcare professional if you have any medical conditions or concerns.
- Keep out of reach of children.
- Use only with water-based lubricants. Oil-based lubricants may damage the silicone material.

3. PRODUCT OVERVIEW

The ROMP Flip Wand Vibrator features a sleek design with intuitive controls.



Figure 1: Front view of the ROMP Flip Wand Vibrator. Shows the blue silicone body with yellow accents and two control buttons.

Key Components:

- **Flexible Head:** The rounded tip is designed to adapt to body contours.
- **Control Buttons:** Two buttons located on the body for power and mode selection.
- **Charging Port:** Located at the base of the device, covered by a silicone flap for waterproofing.
- **Body-Safe Silicone:** The entire device is covered in smooth, soft silicone.

4. SETUP

4.1 Initial Charging

1. Locate the charging port at the base of the device.
2. Gently lift the silicone flap to expose the port.
3. Insert the provided USB charging cable into the port.
4. Connect the other end of the USB cable to a compatible USB power source (e.g., computer, wall adapter).
5. The indicator light will blink during charging and become solid when fully charged.
6. A full charge typically takes approximately 2 hours.
7. After charging, ensure the silicone flap is securely closed to maintain waterproofing.

ROMP

Flexible Head

ROMP Flip features a flexible head and is perfect for relieving any tension

Figure 2: The ROMP Flip connected to its charging cable. The charging port is located at the base of the device.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To turn on: Press and hold the lower power button (circle icon) for 2 seconds.
- To turn off: Press and hold the lower power button (circle icon) for 2 seconds.

5.2 Changing Vibration Modes and Patterns

- The ROMP Flip offers 6 vibration modes and 4 pattern modes.
- To cycle through vibration modes: Press the upper wave button (wave icon) briefly.
- To cycle through pattern modes: Press the lower power button (circle icon) briefly while the device is on.



Figure 3: The two control buttons on the ROMP Flip. The upper button controls vibration intensity, and the lower button controls patterns and power.

5.3 Flexible Head Functionality

The flexible head of the ROMP Flip is designed to contour to your body, providing targeted sensation. It can be gently bent to reach different areas.



Figure 4: Illustration demonstrating the flexibility of the ROMP Flip's head, allowing for adaptable use.

6. MAINTENANCE

6.1 Cleaning

- Clean the ROMP Flip thoroughly before and after each use.
- Wash with warm water and a mild, toy-safe soap or a specialized toy cleaner.
- Rinse thoroughly and pat dry with a lint-free cloth.
- Ensure the charging port flap is securely closed before washing to maintain waterproofing.



Figure 5: The ROMP Flip shown in water, highlighting its 100% waterproof design for easy cleaning and use in wet environments.

6.2 Storage

- Store the device in a clean, dry place, away from direct sunlight and extreme temperatures.
- Avoid storing with other toys made of different materials to prevent material degradation.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully (refer to Section 4.1).
Vibrations are weak or inconsistent.	Low battery.	Recharge the device.

Problem	Possible Cause	Solution
Device does not charge.	Cable not properly connected; faulty cable/charger.	Ensure cable is securely connected. Try a different USB port or charger. Contact support if issue persists.
Buttons are unresponsive.	Device may be locked or require a reset.	Try pressing and holding the power button for 5-10 seconds to reset. Ensure device is charged.

8. SPECIFICATIONS

- **Model Name:** Flip
- **Brand:** ROMP
- **Material:** Body-safe Silicone
- **Color:** Blue
- **Vibration Modes:** 6
- **Pattern Modes:** 4
- **Waterproof:** Yes (100%)
- **Rechargeable:** Yes
- **Manufacturer:** WOW Tech
- **Package Dimensions:** 9.37 x 4.8 x 2.44 inches
- **Weight:** 3.53 ounces

9. WARRANTY AND SUPPORT

ROMP products are manufactured by WOW Tech. For warranty information and customer support, please refer to the official ROMP website or contact WOW Tech customer service directly. Keep your proof of purchase for warranty claims. The product typically comes with a 2-year warranty from the date of purchase, covering manufacturing defects.

Your browser does not support the video tag.

Video 1: Official ROMP Flip Massage Wand product video from WOW Tech USA, demonstrating features and use.

© 2026 ROMP. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07Z6KKF4H>

More documents and user manuals: <https://manuals.plus/>