

[Manuals.plus](#) /

› [ROMP](#) /

› ROMP Wave Clitoral Vibrator Instruction Manual

ROMP Wave

ROMP Wave Clitoral Vibrator Instruction Manual

Model: Wave

1. PRODUCT OVERVIEW

The ROMP Wave is a compact, rechargeable clitoral vibrator designed for external stimulation. It features a body-safe silicone construction, multiple vibration modes and patterns, and is fully waterproof for versatile use.





Image 1.1: The ROMP Wave clitoral vibrator.

Key Features:

- **Compact and Lightweight:** Designed for portability and comfortable handling.
- **Ergonomic Design:** Rests comfortably in the palm for ease of use.
- **6 Vibration Modes:** Offers a variety of intensity levels.
- **4 Pattern Modes:** Provides diverse sensations.
- **IPX7 Waterproof:** Suitable for use in wet environments, including baths and showers.
- **Rechargeable:** Equipped with a long-lasting lithium-ion battery.
- **Body-Safe Silicone:** Made from high-quality, skin-friendly material.



Image 1.2: Illustrating the compact and lightweight design of the ROMP Wave.

2. GETTING STARTED

2.1 Package Contents

Verify that your package contains the following items:

- ROMP Wave Clitoral Vibrator
- USB Charging Cable
- Instruction Manual

2.2 Initial Charging

Before first use, fully charge your ROMP Wave. This typically takes approximately 2 hours.

1. Locate the charging port on the device. It is usually a small, circular indentation.

2. Connect the magnetic end of the USB charging cable to the charging port on the ROMP Wave.
3. Connect the USB-A end of the cable to a standard USB power adapter (not included) or a computer USB port.
4. The indicator light on the device will illuminate during charging and turn off or change color when fully charged.



Image 2.1: ROMP Wave connected to its charging cable.

2.3 First Use & Cleaning

Clean the device thoroughly before its initial use and after each subsequent use.

- Wash the device with warm water and a mild, toy-safe soap.
- Rinse thoroughly to remove all soap residue.
- Pat dry with a lint-free cloth.

3. OPERATION

3.1 Power On/Off

The ROMP Wave is controlled by a single button located on its surface.

- **To Power On:** Press and hold the control button for 2 seconds. The device will start vibrating.
- **To Power Off:** Press and hold the control button for 2 seconds. The device will stop vibrating.



Image 3.1: Location of the control button on the ROMP Wave.

3.2 Vibration Modes

Once powered on, short presses of the control button will cycle through 6 distinct vibration modes, offering varying intensities.



Image 3.2: The ROMP Wave features 6 vibration modes.

3.3 Pattern Modes

In addition to vibration modes, the ROMP Wave includes 4 carefully designed pattern modes. These patterns provide a range of unique sensations.



Image 3.3: The ROMP Wave offers 4 distinct pattern modes.

4. CARE AND MAINTENANCE

4.1 Cleaning

Regular cleaning ensures hygiene and prolongs the life of your device.

- Always clean the device before and after each use.
- Use warm water and a mild, toy-safe soap or a specialized toy cleaner.
- Avoid harsh chemicals, alcohol-based cleaners, or petroleum-based lubricants, as these can damage the silicone.
- Rinse thoroughly and dry completely with a soft, lint-free cloth.

4.2 Waterproof Information

The ROMP Wave has an IPX7 waterproof rating, meaning it can be submerged in up to 1 meter of water for 30 minutes. This allows for safe use in the bath or shower.



Image 4.1: The ROMP Wave is waterproof.



Image 4.2: The ROMP Wave can be used in water.

4.3 Storage

Store your ROMP Wave in a clean, dry place away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent potential damage or reactions.

5. TROUBLESHOOTING

If you encounter any issues with your ROMP Wave, refer to the following common troubleshooting steps:

- **Device Not Turning On:** Ensure the device is fully charged. Connect it to the charger and wait for the indicator light to confirm charging.
- **Weak Vibration:** A low battery can result in weaker vibrations. Fully charge the device. If the issue persists after a full charge, contact customer support.
- **Not Charging / Not Holding Charge:** Ensure the charging cable is securely connected to both the device and the power source. Try a different USB port or power adapter. If the device still does not charge or loses charge quickly after a full charge, the battery may be faulty. Contact customer support for assistance.
- **Unexpected Shutdown:** The device may have automatically powered off due to low battery. Recharge the device.

6. SPECIFICATIONS

Feature	Detail
Model	Wave
Dimensions	6.5 x 2.95 x 2.36 inches
Weight	3.53 ounces
Material	Body-safe Silicone
Battery	1 Lithium Ion (included)
Runtime	Approximately 60 minutes (depending on intensity)
Waterproof Rating	IPX7



Image 6.1: Certifications for body-safe silicone and German product design.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

ROMP offers a **2-year warranty** on all its products, including the ROMP Wave. This warranty covers manufacturing defects and ensures product quality under normal use. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For further assistance, troubleshooting not covered in this manual, or warranty claims, please contact ROMP customer support. Visit the official ROMP website or refer to the contact information provided with your product packaging.

You can also visit the [ROMP Store on Amazon](#) for more information.

© 2024 ROMP. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question