

Casio MCW-110H

Casio MCW-110H Series Chronograph Watch User Manual

Model: MCW-110H

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Casio MCW-110H Series Chronograph Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

The Casio MCW-110H features a rugged design with an analog display, chronograph functionality, a date indicator, and 100-meter water resistance, making it suitable for daily wear and various activities.



Figure 1: Casio MCW-110H Series Chronograph Watch, front view. This image displays the watch face with its blue accents, three sub-dials for chronograph functions, and the date window at the 4 o'clock position. The watch features a black resin case and band.

SETUP AND INITIAL SETTINGS

Before using your watch, it is important to set the correct time and date.

1. Setting the Time

1. Pull the crown (located on the right side of the watch case) out to the second click position. The second hand will stop.
2. Rotate the crown to move the hour and minute hands to the desired time. Ensure the AM/PM is correctly set if your watch has a 24-hour indicator or if setting the date.
3. Push the crown back in to the normal position. The second hand will resume movement.

2. Setting the Date

1. Pull the crown out to the first click position.
2. Rotate the crown clockwise to advance the date. Do not set the date between 9:00 PM and 1:00 AM, as this may interfere with the date change mechanism.
3. Once the correct date is displayed, push the crown back in to the normal position.



Figure 2: Close-up view of the Casio MCW-110H watch face, highlighting the crown and pushers for setting time and operating the chronograph. The sub-dials for minutes, seconds, and 24-hour time are clearly visible.

OPERATING INSTRUCTIONS

Using the Chronograph

The chronograph function allows you to measure elapsed time. The MCW-110H features a 60-minute chronograph with 1/10th second measurement.

1. **Start/Stop:** Press the upper right button (A) to start the chronograph. Press it again to stop.
2. **Reset:** While the chronograph is stopped, press the lower right button (B) to reset the chronograph hands to the zero position.
3. **Split Time:** (If applicable, typical for chronographs) Press button (B) while the chronograph is running to measure split times. Press (B) again to release the split time and display the current elapsed time. Press (A) to stop, then (B) to reset.

Note: If the chronograph hands do not return to the zero position after resetting, refer to the "Troubleshooting" section for chronograph hand position adjustment.

MAINTENANCE

Proper care will ensure the longevity and performance of your Casio MCW-110H watch.

Water Resistance

This watch is rated for **100-meter water resistance**. This means it is suitable for swimming, snorkeling, and showering. However, it is not recommended for scuba diving. Do not operate the crown or buttons while the watch is wet or submerged in water, as this can compromise the water resistance.

Battery Replacement

The watch uses one SR920SW battery, with an approximate battery life of 3 years. When the second hand begins to move at two-second intervals, it indicates that the battery is low and needs replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

Cleaning

Wipe the watch regularly with a soft, dry cloth. For resin bands, you can gently clean them with a mild soap solution and rinse thoroughly with fresh water, then dry completely. Avoid using harsh chemicals or abrasive materials.

TROUBLESHOOTING

Problem	Solution
Watch hands stop or move erratically.	The battery may be low. Replace the battery as soon as possible.
Date changes at noon instead of midnight.	The AM/PM setting is incorrect. Advance the time by 12 hours.
Chronograph hands do not reset to zero.	Chronograph Hand Position Adjustment: <ol style="list-style-type: none">1. Pull the crown out to the second click position.2. Press button (A) to adjust the 1/10th second hand.3. Press button (B) to adjust the minute and second chronograph hands.4. Once all chronograph hands are aligned to the 12 o'clock (zero) position, push the crown back in.
Water ingress or fogging inside the crystal.	Immediately take the watch to a qualified service center. Do not attempt to open the watch yourself.

SPECIFICATIONS

- **Model Number:** MCW-110H-2A2VCF
- **Brand:** Casio
- **Movement:** Quartz
- **Water Resistance:** 100 meters (330 feet)
- **Chronograph:** Yes
- **Date Display:** Yes

- **Case Material:** Resin
- **Band Material:** Resin
- **Approximate Battery Life:** 3 years (using SR920SW)
- **Product Dimensions:** 9.84 x 1.57 x 0.79 inches
- **Weight:** 4.23 ounces

WARRANTY AND SUPPORT

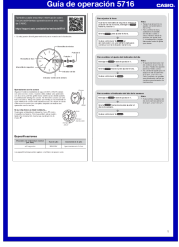 
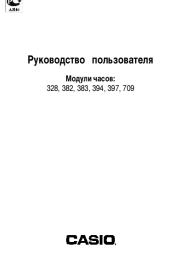 
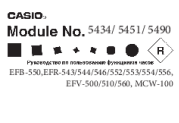 
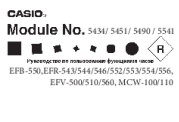 
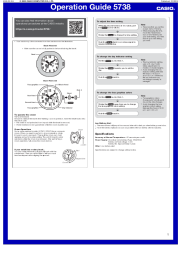 

Your Casio watch is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or warranty claims, please contact Casio customer service or visit the official Casio website. Keep your proof of purchase for warranty validation.

You can find more information and support on the official Casio website: www.casio.com



Figure 3: The packaging box for the Casio MCW-110H watch. The box is predominantly blue with the Casio logo prominently displayed, indicating genuine product packaging.

	<p>Casio 5716 Watch Operation Guide</p> <p>A comprehensive guide to operating the Casio 5716 watch, covering time adjustment, day/date setting, and other functions. Includes specifications and battery information.</p>
	<p>Casio Watch Instruction Manual - Water Resistance and Care</p> <p>A comprehensive guide for Casio watches, detailing water resistance ratings, usage instructions, battery replacement, and care guidelines for various Casio watch modules.</p>
	<p>Casio Watch User Manual: Modules 5434, 5451, 5490, and Related Models</p> <p>Comprehensive user manual for Casio watches featuring modules 5434, 5451, 5490, and related models like EFB-550, EFR-543 series, EFV-500 series, and MCW-100. This guide covers essential information on battery, water resistance, watch care, time and date setting, crown operations, bezel usage, stopwatch functionality, hand correction, technical specifications, and product details.</p>
	<p>CASIO Watch Module 5434/5451/5490/5541 User Manual</p> <p>User manual for CASIO watches with modules 5434, 5451, 5490, and 5541, covering important information, water resistance ratings and care, crown and bezel operations, stopwatch usage, technical specifications, and product details.</p>
	<p>Casio Watch 5738 Operation Guide</p> <p>Comprehensive operation guide for the Casio 5738 watch, detailing time setting, day indicator adjustments, face graphics color changes, crown operations, low battery alerts, and technical specifications.</p>
	<p>Casio Watch User Manual: Modules 5396 & 5483</p> <p>Comprehensive user manual for Casio watches with modules 5396 and 5483. Covers battery information, water resistance ratings, detailed care instructions for various strap types, operating procedures for setting time and day, crown operations, technical specifications, and product details.</p>