

[Manuals.plus](#) /

> [ReadyWired](#) /

> ReadyWired USB Data Cable User Manual for Sony Camcorders DCR-TRV608, DCR-TRV730, DCR-TRV740, DCR-TRV830

## ReadyWired ReadyWired USB

# ReadyWired USB Data Cable User Manual

For Sony Camcorder Models: DCR-TRV608, DCR-TRV730, DCR-TRV740, DCR-TRV830

[Introduction](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

[Support](#)

## 1. INTRODUCTION

---

This manual provides instructions for the proper use and care of your ReadyWired USB Data Cable. This cable is designed to connect compatible Sony camcorder models (DCR-TRV608, DCR-TRV730, DCR-TRV740, DCR-TRV830) to a computer or other devices for data transfer.



This image displays the ReadyWired USB Data Cable, featuring a standard USB Type-A connector, typically used for connecting to a computer, and a mini-USB Type-B connector, designed for compatibility with various Sony camcorder models.

## 2. SETUP

---

Follow these steps to connect your camcorder to a computer using the ReadyWired USB Data Cable:

1. **Identify Connectors:** Locate the standard USB Type-A connector (larger, rectangular end) and the mini-USB Type-B connector (smaller, trapezoidal end) on your cable.
2. **Connect to Camcorder:** Insert the mini-USB Type-B connector into the corresponding USB port on your Sony camcorder. Ensure it is inserted correctly and firmly.
3. **Connect to Computer:** Insert the standard USB Type-A connector into an available USB port on your computer.
4. **Power On Devices:** Turn on your Sony camcorder and your computer.
5. **Driver Installation (if necessary):** Your computer may automatically detect and install necessary drivers. If prompted, follow the on-screen instructions. For older operating systems or specific camcorder models, you might need to install drivers from Sony's official website or the camcorder's original software disc.

Once connected, your computer should recognize the camcorder as a removable storage device or a media device, depending on the camcorder's settings and computer's operating system.

## 3. OPERATING (DATA TRANSFER)

---

After successful connection, you can transfer data (videos, photos) from your camcorder to your computer:

1. **Access Camcorder Storage:**
  - **Windows:** Open "This PC" or "My Computer." Your camcorder should appear as a drive or a device under "Devices and drives." Double-click to open.
  - **macOS:** The camcorder may appear on the desktop or in Finder under "Devices." You might also need to use an application like Image Capture or iMovie.
2. **Locate Files:** Navigate through the camcorder's folders to find your video and photo files. These are typically found in folders like "DCIM," "MP\_ROOT," or similar directories.
3. **Transfer Files:** Select the files you wish to transfer. You can then drag and drop them to a desired folder on your computer, or use copy-paste functions.
4. **Eject Safely:** Before disconnecting the cable, always safely eject the camcorder from your computer.
  - **Windows:** Click the "Safely Remove Hardware and Eject Media" icon in the system tray, then select your camcorder.
  - **macOS:** Drag the camcorder icon to the Trash (which changes to an Eject icon) or right-click and select "Eject."
5. **Disconnect:** Once safely ejected, you can disconnect the USB cable from both the computer and the camcorder.

*Note:* Refer to your Sony camcorder's specific user manual for detailed instructions on its data transfer modes and settings.

## 4. MAINTENANCE

---

Proper care will extend the life of your ReadyWired USB Data Cable:

- **Storage:** Store the cable in a cool, dry place, away from direct sunlight and extreme temperatures.

Avoid tightly coiling or bending the cable sharply, as this can damage internal wires.

- **Cleaning:** Use a soft, dry cloth to wipe the cable and connectors. Do not use liquid cleaners or solvents, as these can damage the cable's insulation or connector pins.
- **Handling:** Always grasp the connector housing when plugging or unplugging the cable, not the cable itself. Avoid pulling or tugging on the cable.
- **Inspection:** Periodically inspect the cable for any signs of damage, such as frayed insulation, bent pins, or loose connections. Discontinue use if damage is observed.

## 5. TROUBLESHOOTING

---

If you encounter issues with your ReadyWired USB Data Cable, consider the following:

- **Cable Not Recognized:**
  - Ensure both ends of the cable are securely connected to the camcorder and the computer.
  - Try connecting the cable to a different USB port on your computer.
  - Restart your computer and camcorder.
  - Test the cable with another compatible device if available, or try a different USB cable with your camcorder to rule out a cable fault.
  - Check your camcorder's settings to ensure it is in the correct USB mode for data transfer (e.g., "Mass Storage" or "PC Connect").
- **Slow Data Transfer:**
  - Ensure you are using a USB 2.0 compatible port on your computer for optimal speed (this cable is USB 2.0).
  - Avoid running multiple demanding applications during data transfer.
  - Large file sizes naturally take longer to transfer.
- **Intermittent Connection:**
  - Check for physical damage to the cable or connectors.
  - Ensure the cable is not being bent or stressed during use.
  - Try a different USB port on your computer.

## 6. SPECIFICATIONS

---

| Feature            | Detail  |
|--------------------|---|
| Brand              | ReadyWired  |
| Model              | ReadyWired USB  |
| Connector Type     | USB Type A (Male) to Mini-USB Type B (Male)                             |
| Cable Type         | USB Data Cable  |
| Compatible Devices | Sony Camcorder models DCR-TRV608, DCR-TRV730, DCR-TRV740, DCR-TRV830    |
| Recommended Uses   | Connecting Sony camcorder to computer or other device for data transfer |
| Number of Pins     | 4   |

|                                |         |
|--------------------------------|---------|
| <b>Maximum Voltage</b>         | 5 Volts |
| <b>Connectivity Technology</b> | USB     |
| <b>Color</b>                   | Black   |

## 7. WARRANTY INFORMATION

---

ReadyWired products are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the packaging or contact ReadyWired customer support. Typically, cables are covered against manufacturing defects for a limited period from the date of purchase.

This warranty does not cover damage caused by misuse, abuse, accident, unauthorized modification, or improper installation.

## 8. CUSTOMER SUPPORT

---

If you require further assistance or have questions not covered in this manual, please contact ReadyWired customer support. Contact information can usually be found on the product packaging or the official ReadyWired website.

When contacting support, please have your product model information and a description of the issue ready.