

Screen Media DSM801588D

Crown Vic DVD User Manual

Official Guide for Your Crown Vic DVD

1. INTRODUCTION

The **Crown Vic DVD** provides access to the action and adventure film "Crown Vic". This manual offers essential information for playing, maintaining, and understanding your DVD product.

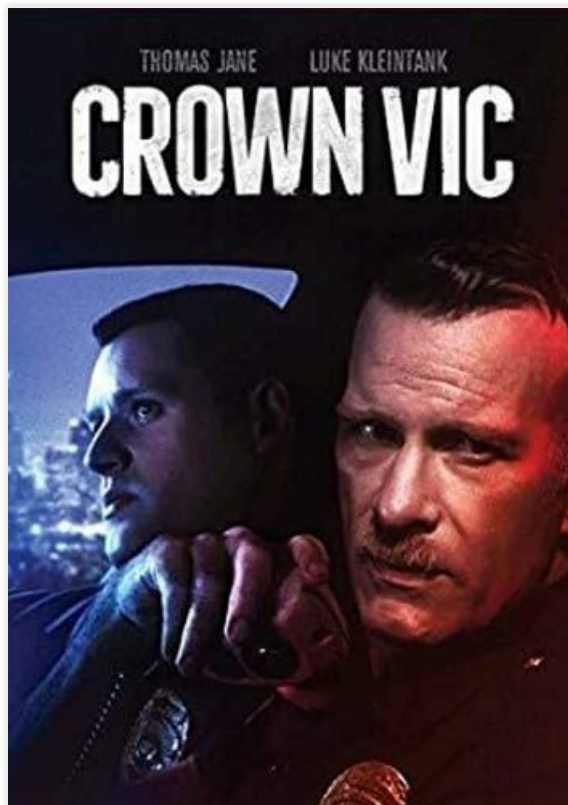


Image 1.1: Front cover of the Crown Vic DVD. It depicts two police officers, one with a mustache, in a patrol car with city lights in the background, reflecting the film's setting and theme.

2. SETUP AND PLAYBACK

To enjoy your Crown Vic DVD, follow these simple steps:

1. **Disc Insertion:** Gently insert the Crown Vic DVD into a compatible DVD player or computer DVD drive with the label side facing up.
2. **Power On:** Ensure your DVD player or computer is powered on and connected to a display device (TV, monitor).

3. **Playback:** The DVD should auto-play. If not, navigate to the DVD drive or disc icon on your device and select "Play" or "Open".
4. **Menu Navigation:** Use your remote control or keyboard to navigate the DVD menu for options such as "Play Movie", "Scene Selection", or "Special Features" (if available).

For optimal viewing, ensure your display device is set to the correct input source (e.g., HDMI 1, AV).

3. CONTENT INFORMATION

The Crown Vic DVD features a compelling action and adventure film. Below are key details about the movie:

- **Title:** Crown Vic
- **Genre:** Action & Adventure
- **Synopsis:** During one night's patrol, a veteran cop and his rookie partner navigate the streets of Los Angeles, chasing down violent suspects and searching for a missing girl, all while hunting two cop killers.
- **Director:** Joel Souza
- **Main Actors:** Thomas Jane, Luke Kleintank, Bridget Moynahan, Gregg Bello, Josh Hopkins
- **Run Time:** 1 hour and 50 minutes
- **MPAA Rating:** R (Restricted) - This film contains strong language, violence, and some sexual content. Viewer discretion is advised.
- **Release Date:** January 7, 2020

4. CARE AND MAINTENANCE

Proper care of your DVD will ensure its longevity and optimal playback performance.

- **Handling:** Always hold the DVD by its edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If the disc becomes dirty, gently wipe it with a soft, lint-free cloth (e.g., microfiber) from the center outwards. Do not use abrasive materials or harsh chemicals.
- **Storage:** Store the DVD in its original case, away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Do not place the disc on rough surfaces or stack it without its case. Scratches can lead to playback errors.

5. TROUBLESHOOTING

If you encounter issues during playback, consider the following common solutions:

Problem	Possible Cause	Solution
Disc not playing / "No Disc" error	Disc inserted incorrectly, dirty disc, incompatible player.	Ensure disc is inserted label-side up. Clean the disc. Verify your player supports DVD format.
Skipping or Freezing	Scratches, dirt on disc, or player lens issue.	Clean the disc thoroughly. Try the disc in another player to rule out player issues.
No Audio or Video	Incorrect cable connection, TV input, or player settings.	Check all audio/video cables. Ensure TV is on the correct input. Check player's audio/video output settings.

If problems persist after attempting these solutions, contact the distributor or your retailer for further assistance.

6. SPECIFICATIONS

- **Product Format:** DVD (NTSC)
- **Number of Discs:** 1
- **Item Model Number:** DSM801588D
- **Product Dimensions:** 0.7 x 7.5 x 5.4 inches
- **Item Weight:** 1.44 ounces
- **Language:** English
- **Studio:** Screen Media

7. WARRANTY AND SUPPORT

This product is a media item. Specific warranty information for DVDs typically falls under the retailer's return policy for defective goods. Please refer to your purchase receipt or the retailer's website for details regarding returns or exchanges for defective discs.

For technical support related to playback issues that are not resolved by the troubleshooting steps, or for inquiries about the product content, please contact the distributor, Screen Media, or your point of purchase.

