

ECONTROLLY AA59-00559A

ECONTROLLY AA59-00559A Remote Control User Manual

Model: AA59-00559A

INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY AA59-00559A remote control, designed for use with various Samsung TV models. Please read this manual carefully to ensure proper setup and operation of your remote control.

PRODUCT OVERVIEW





Image: Front view of the ECONTROLLY AA59-00559A remote control, showing all buttons and their labels. The remote is black with various colored buttons for power, source, and function keys.

The ECONTROLLY AA59-00559A is a replacement remote control for a wide range of Samsung televisions. It offers direct functionality without the need for programming or pairing, operating on an infrared (IR) signal.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.

- 3. Insert two (2) AAA alkaline batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
- 4. Close the battery compartment cover securely.

Once batteries are installed, the remote control is ready for immediate use with compatible Samsung TV models. No programming or pairing is required.

OPERATING INSTRUCTIONS

This section details the functions of the buttons on your ECONTROLLY AA59-00559A remote control.

Button	Function
Power ()	Turns the television on or off.
Source	Selects the input source (e.g., HDMI1, AV, Component).
Light Bulb Icon	Activates or deactivates the TV's light sensor or a similar display setting.
Set Up	Accesses the TV's setup menu.
Watch TV	Switches to the live television broadcast.
Device	Used for controlling external devices connected to the TV.
Number Pad (0-9)	Directly selects channels or enters numerical values.
PRE-CH	Switches to the previously viewed channel.
Volume (+/- VOL)	Adjusts the television's volume level.
Mute	Mutes or unmutes the television's audio.
Channel (CH Up/Down)	Changes the television channel up or down.
CH LIST	Displays the channel list.
MENU	Opens the main menu of the television.
Smart Hub Icon (Cube)	Accesses the Samsung Smart Hub for apps and streaming services.
SEARCH	Initiates a search function within the TV's interface.
TOOLS	Provides quick access to frequently used functions or settings.
INFO	Displays information about the current program or input.
Directional Pad (Up, Down, Left, Right)	Navigates through menus and options.
Enter/OK (Center Button)	Confirms selections or enters a menu item.
RETURN	Returns to the previous screen or menu.
EXIT	Exits the current menu or application.

Button	Function
Colored Buttons (A, B, C, D)	Functionality varies depending on the TV model or application. Often used for specific features or teletext.
Family Story	Accesses the Family Story feature on compatible Samsung TVs.
MTS	Multi-channel Television Sound (MTS) selection.
3D (BD)	Activates or deactivates 3D mode on compatible TVs.
SUPPORT	Accesses the TV's support or help menu.
P.SIZE	Adjusts the picture size or aspect ratio.
CC	Activates or deactivates Closed Captions.
Media Control Buttons (Rewind, Play/Pause, Fast Forward, Record, Stop)	Controls media playback for connected devices or TV functions.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA alkaline batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote control to extreme temperatures, direct sunlight, or high humidity.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's IR receiver.
 - Ensure the remote is pointed directly at the TV.
- **Limited functionality:**
 - Verify that your Samsung TV model is listed as compatible with the AA59-00559A remote.
 - Some advanced Smart TV features may require the original Smart Remote or specific TV settings.
- **Remote works intermittently:**
 - This often indicates low battery power. Replace batteries.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	AA59-00559A
Brand	ECONTROLLY
Compatible with	Samsung TVs (various models including UN55ES6580F, UN60ES6500F, PN64E7000FF, etc.)
Power Source	2 x AAA Batteries (not included)
Control Type	IR remote
Material	ABS Environmental protection material
Dimensions	7 x 2 x 0.65 inches
Item Weight	3 ounces
Transmission Distance	Approximately 8-10 meters (26-33 feet)

WARRANTY AND SUPPORT

For any issues or inquiries regarding your ECONTROLLY AA59-00559A remote control, please refer to the seller's return policy or contact the seller directly for support. Specific warranty details may vary by retailer. Ensure to keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question