

## D.Vordingborg AKB75095330

# D.Vordingborg AKB75095330 Replacement Remote Control for LG TVs Instruction Manual

Model: AKB75095330 | Brand: D.Vordingborg

## 1. INTRODUCTION

This instruction manual provides comprehensive guidance for the D.Vordingborg AKB75095330 replacement remote control. This remote is designed to function identically to your original LG TV remote, offering a seamless replacement experience without the need for complex programming. It is compatible with a wide range of LG TV models.



Image 1: Front view of the D.Vordingborg AKB75095330 Replacement Remote Control.

## 2. PRODUCT FEATURES

- **Direct Replacement:** Functions identically to the original LG TV AKB75095330 remote.
- **No Programming Required:** Ready to use immediately after battery insertion.
- **Wide Compatibility:** Supports numerous LG TV models across various series.
- **Includes Batteries:** Comes with 2 AAA Alkaline batteries (GP brand) for immediate use.
- **Standard Functionality:** Features all essential buttons for TV operation, including power, volume, channel, input, home, picture settings, and play/pause controls.

## 3. COMPATIBILITY

The AKB75095330 replacement remote control is compatible with a broad range of LG TV models. Please verify your TV model number against the list below for assured compatibility. This remote is not universal for all LG TVs, but specifically designed for models that originally used the AKB75095330 remote.

### Compatible LG TV Series and Models:

- 24-inch models: 24LH4830, 24LH4830-PU, 24LJ4840, 24LJ4840-WU, 24LJ4540
- 28-inch models: 28LJ400B, 28LJ400BPU, 28MT42DF, 28MT42DF-PU, 28LJ430B, 28LJ430BPU

- 32-inch models: 32LJ500B, 32LJ500BUB, 32LJ500, 32LJ500UB, 32LJ550B, 32LN520B, 32LN530B, 32LN5300, 32LN5310, 32LN541C, 32LF595B, 32LK610B, 32LK610BPUA
- 39-inch models: 39LN5300
- 42-inch models: 42LN5300, 42LN541C, 42PN4500
- 43-inch models: 43LJ5000, 43LJ5000UB, 43LJ500M, 43LJ500MUB, 43UF6400, 43UF6430, 43UF6800, 43UF6900, 43UF7590, 43UF7600, 43UH6030, 43UH6100, 43UH610A, 43UH6500, 43UJ6200, 43UJ6300, 43UJ6500, 43UJ6560, 43UK6090PUA, 43UK6300BUB, 43UK6300PUE, 43UK6350PUC, 43UK6500AUA, 43UK6550PUB, 43LK5700PUA, 43LK5750PUA
- 47-inch models: 47LN5400, 47LN541C
- 49-inch models: 49LJ5100, 49LJ5100UC, 49LJ510M, 49LJ510MUD, 49LF5900, 49UF6400, 49UF6430, 49UF6490, 49UF6800, 49UF6900, 49UF7590, 49UH6030, 49UH6090, 49UH6100, 49UH6500, 49UJ6300, 49UJ6350, 49UJ6500, 49UJ6560, 49UK6090PUA, 49UK6300PUE, 49UK7500PUA, 49SK8000PUA, 49SK8050PUA
- 50-inch models: 50PN4500, 50PN5300, 50PN6500, 50LN5100, 50LN5200, 50LN5400, 50LN5750UH, 50UH5500, 50UH5530, 50UK6090PUA, 50UK6300PUE, 50UK6500AUA, 50UK6550PUB
- 55-inch models: 55LN5100, 55LN5200, 55LN5400, 55LN541C, 55UJ6050, 55UJ6300, 55UJ6520, 55UJ6540, 55UJ6580, 55UH6030, 55UH6090, 55UH6550, 55UK6300PUE, 55UK6090PUA, 55UK6500AUA, 55UK6550PUB, 55UK7500PUA, 55SK8000AUB, 55SK8000PUA, 55SK8050PUA, 55SK8550PUA, 55SK9000PUA, 55SK9500PUA
- 60-inch models: 60LN5400, 60PN5000, 60PN5300, 60PN6500, 60UJ6540, 60UH6035, 60UH6150, 60UK6090, 60UK6200PUA, 60UK6250PUB
- 65-inch models: 65UJ6520, 65UJ6540, 65UJ6580, 65UK6090PUA, 65UK6300BUB, 65UK6300PUE, 65UK6350PUC, 65UK6500AUA, 65UK6550PUB, 65UK7500PUA, 65SK8000PUA, 65SK8050PUA, 65SK8550PUA, 65SK9000PUA, 65SK9550PUA
- 70-inch models: 70UJ6520, 70UJ6570, 70UJ657A, 70UK6190PUB, 70UK6570PUB
- 75-inch models: 75UJ657A, 75UK6190PUB, 75UK6570AUA, 75UK6570PUB
- 86-inch models: 86UK657, 86UK6570AUA, 86UK6570PUB

#### 4. SETUP INSTRUCTIONS

Setting up your D.Vordingborg AKB75095330 replacement remote is straightforward and requires no complex programming. Simply follow these steps:

1. **Unpack the Remote:** Carefully remove the remote control from its packaging.
2. **Install Batteries:** Open the battery compartment cover on the back of the remote. Insert the two included AAA Alkaline batteries, ensuring correct polarity (+ and -). Close the battery compartment cover securely.
3. **Begin Use:** Point the remote control at your LG TV. The remote is pre-programmed and should function immediately. No additional pairing or code entry is necessary.



**HAPPY!**

Please share to us  
under the page.

Let us know we've  
**DONE** the right thing.

You know the power  
of Positive Discipline.

*Image 2: Rear view of the remote control with the battery compartment open, showing two AAA batteries being inserted.*

Your browser does not support the video tag.

*Video 1: Official product video demonstrating the D.Vordingborg AKB75095330 LG TV Remote Replacement. This video shows the remote's design and basic functionality.*

## **5. OPERATING INSTRUCTIONS**

The D.Vordingborg AKB75095330 remote features a standard layout for intuitive control of your LG TV. Below are the primary functions:



UNHAPPY!!

Please do tell us  
directly.

Let us know HOW  
to do the thing right.

You know the power  
of Timely Feedback.

Link Enjoy Team

*Image 3: Detailed front view of the remote control, highlighting the button layout.*

- **Power Button (●):** Located at the top-right, press to turn your TV on or off.
- **Number Pad (0-9):** For direct channel selection.
- **Volume Up/Down (VOL +/-):** Adjusts the TV's audio volume.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Input (INPUT):** Selects different input sources (HDMI, AV, etc.).
- **Home (House icon):** Accesses the TV's smart home menu or main dashboard.
- **Navigation Pad (Arrows & OK):** Use arrow buttons to navigate menus and the 'OK' button to confirm selections.
- **Back (Arrow left):** Returns to the previous screen or menu.
- **Exit (EXIT):** Closes current menus or applications.
- **Streaming Service Buttons:** Dedicated buttons for popular streaming services like Netflix and Amazon Prime Video (functionality may vary based on TV model and app availability).
- **Media Playback Controls:** Play, Pause, Stop, Fast Forward, Rewind buttons for media content.
- **Sleep (SLEEP):** Activates the sleep timer function.

## 6. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, please observe the following

maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases. Always use new AAA Alkaline batteries and dispose of old batteries responsibly.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can cause internal damage.



**Yes! We Can Be Trusted!**

*Image 4: Side profile of the remote control, illustrating its ergonomic design.*

## 7. TROUBLESHOOTING

If you encounter issues with your remote control, please try the following troubleshooting steps:

- **Remote Not Responding:**
  - Ensure the batteries are correctly inserted with the proper polarity.
  - Replace old batteries with new AAA Alkaline batteries.
  - Check for any obstructions between the remote and the TV's infrared receiver.
- **Specific Buttons Not Working:**
  - Clean the remote's surface and buttons to remove any dirt or debris that might be causing sticking.
  - Verify that your TV model is listed in the compatibility section. While the remote is pre-programmed, some advanced functions might be specific to certain original remote models.

- **No Programming Required:** This remote does not require any programming. If it is not working, it is likely a battery issue or a compatibility issue with your specific TV model.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	AKB75095330_TV_REMOTE
Product Dimensions	6.69 x 1.77 x 0.79 inches
Item Weight	1.44 ounces
Batteries Required	2 AAA batteries (included)
Compatible Devices	LG Televisions (specific models listed in Compatibility section)
Special Feature	No Programming Required
Color	BLACK

## 9. SAFETY INFORMATION

Please read and adhere to the following safety information:

- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.
- Do not expose the remote to water or other liquids.
- Avoid disassembling the remote control.

## 10. WARRANTY AND SUPPORT

This product comes with a **12-Month No-Worry Warranty**. For any issues or support, please contact the seller or refer to the product's purchase platform for assistance. Ensure to retain your proof of purchase for warranty claims.