

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Philips](#) /

› [Philips TAPH805BK Active Noise Cancelling Over-Ear Headphones User Manual](#)

Philips TAPH805BK

Philips TAPH805BK Active Noise Cancelling Over-Ear Headphones

User Manual

[Introduction](#)

[Safety Information](#)

[Package Contents](#)

[Product Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Philips TAPH805BK Active Noise Cancelling Over-Ear Headphones. These headphones are designed to provide a superior audio experience with advanced features such as Bluetooth 5.0 connectivity, active noise cancellation, and integrated Google Assistant. This manual will guide you through the setup, operation, and maintenance of your new headphones to ensure optimal performance and longevity.

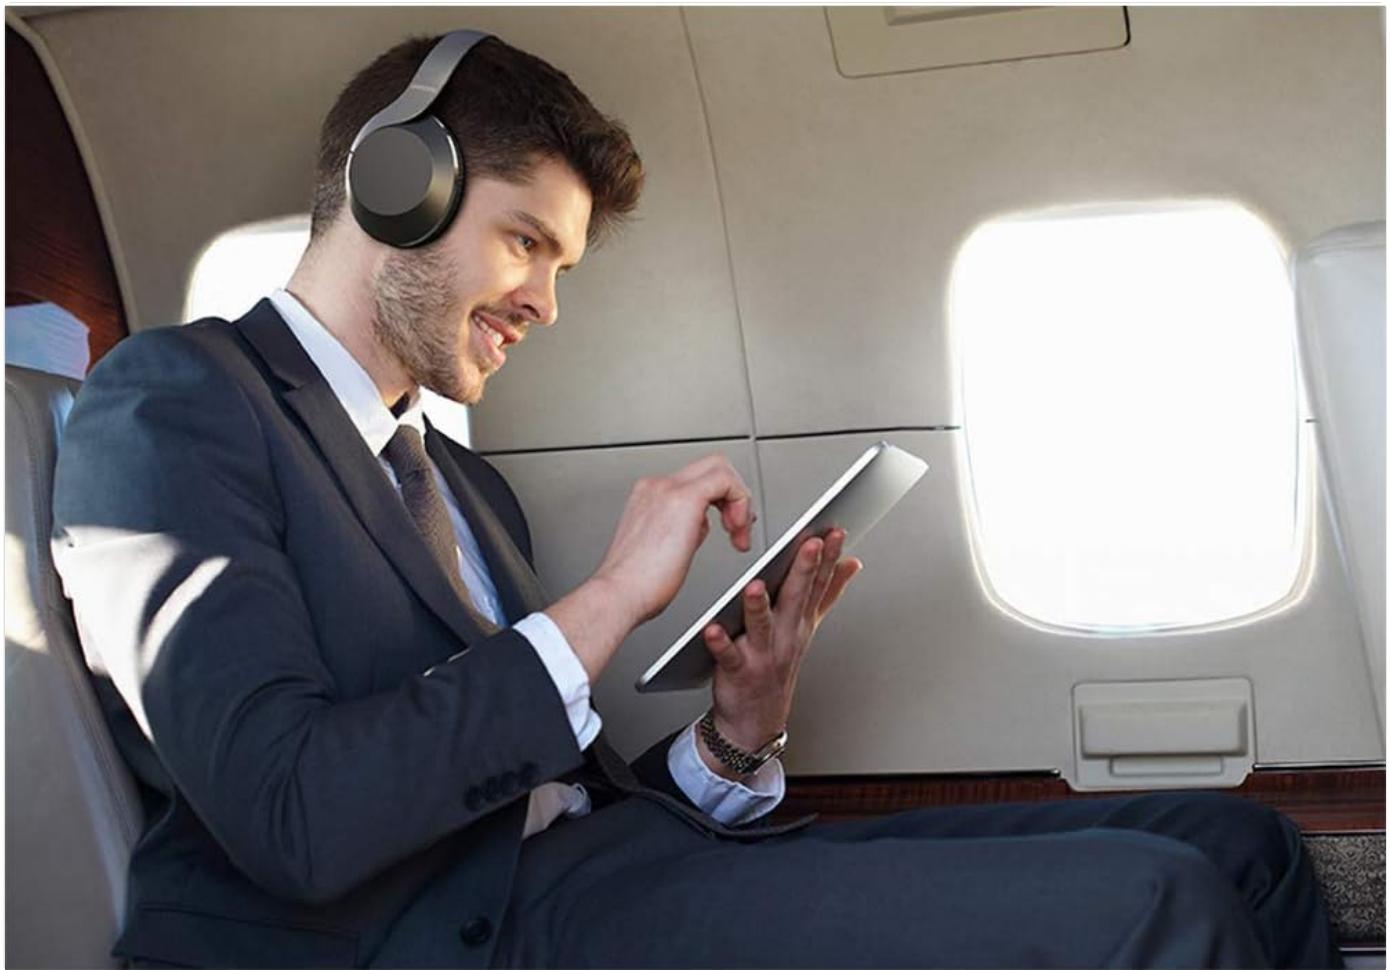


Image: Philips TAPH805BK Over-Ear Headphones. The headphones are black with a sleek design, featuring soft earcups and an adjustable headband.

2. SAFETY INFORMATION

Please read all safety instructions before using your headphones. Failure to follow these instructions may result in electric shock, fire, or other hazards.

- Do not expose the headphones to excessive heat, direct sunlight, or moisture.
- Do not disassemble or modify the headphones. This will void the warranty.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.
- Keep the headphones away from children and pets.
- Use only the provided charging cable or a certified equivalent.
- Do not use the headphones while driving or cycling, or in situations where you need to be aware of your surroundings.

3. PACKAGE CONTENTS

Ensure all items are present in your package:

- Philips TAPH805BK Over-Ear Headphones
- USB Charging Cable
- Audio Cable (3.5mm)
- Carrying Case
- Quick Start Guide (not included in this manual)
- Ear Cushions (pre-installed or included as spare)



Image: Philips TAPH805BK Headphones folded neatly inside their protective carrying case.

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts of your headphones:

- **Power Button:** Used to turn the headphones on/off and initiate Bluetooth pairing.
- **Volume/Track Control:** Touch-sensitive controls on the earcup for adjusting volume and skipping tracks.
- **ANC Button:** Activates or deactivates Active Noise Cancelling.
- **Google Assistant Button:** Activates Google Assistant for voice commands.
- **Microphone:** Built-in for calls and voice commands.
- **USB-C Charging Port:** For charging the headphones.
- **3.5mm Audio Input:** For wired connection.
- **LED Indicator:** Displays power, charging, and Bluetooth status.

5. SETUP

5.1 Charging the Headphones

1. Connect the USB charging cable to the USB-C port on the headphones.
2. Connect the other end of the USB cable to a powered USB charger (not included) or a computer's USB port.
3. The LED indicator will show charging status. A full charge takes approximately 2 hours.
4. A 15-minute quick charge provides up to 6 hours of playback.
5. The headphones offer up to 30 hours of playback time on a full charge.

5.2 Bluetooth Pairing

1. Ensure the headphones are turned off.
2. Press and hold the Power button for approximately 5 seconds until the LED indicator flashes blue and red alternately. This indicates pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, laptop), go to the Bluetooth settings and turn on Bluetooth.
4. Search for available devices and select "Philips TAPH805BK" from the list.
5. Once paired, the LED indicator will flash blue slowly.
6. If prompted for a password, enter "0000".

The headphones will automatically reconnect to the last paired device when turned on, if the device is within range (up to 10 meters).

6. OPERATION

6.1 Power On/Off

- **Power On:** Press and hold the Power button for 2 seconds. The LED will light up blue.
- **Power Off:** Press and hold the Power button for 3 seconds. The LED will turn off.

6.2 Music Playback

- **Play/Pause:** Tap the center of the right earcup (touch control).
- **Volume Up:** Swipe up on the right earcup.
- **Volume Down:** Swipe down on the right earcup.
- **Next Track:** Swipe forward on the right earcup.
- **Previous Track:** Swipe backward on the right earcup.

6.3 Call Management

- **Answer/End Call:** Tap the center of the right earcup.
- **Reject Call:** Press and hold the center of the right earcup for 2 seconds.

6.4 Active Noise Cancelling (ANC)

- Press the dedicated ANC button to toggle Active Noise Cancelling on or off.
- When ANC is active, ambient noise is significantly reduced, enhancing your listening experience.

6.5 Google Assistant

- Press the Google Assistant button to activate your device's Google Assistant.
- Use voice commands for navigation, music control, making calls, and more.



Image: A woman wearing the Philips TAPH805BK headphones, demonstrating comfortable usage.

Your browser does not support the video tag.

Video: Official overview of the Philips TAPH805BK Active Noise Cancelling Headphones, highlighting key features and design.

7. MAINTENANCE

- Cleaning:** Wipe the headphones with a soft, dry cloth. Do not use cleaning agents containing alcohol, ammonia, benzene, or abrasives.
- Storage:** When not in use, store the headphones in their protective carrying case to prevent damage. Avoid storing in extreme temperatures.
- Battery Care:** To preserve battery life, fully charge the headphones at least once every three months if not used regularly.

8. TROUBLESHOOTING

Problem	Solution
Headphones do not turn on.	Ensure the headphones are charged. Connect to a power source and try again.
Cannot pair with Bluetooth device.	Make sure the headphones are in pairing mode (flashing blue/red). Ensure Bluetooth is enabled on your device and it's within 10 meters. Forget previous pairings on your device and try again.
No sound or low volume.	Check volume levels on both headphones and your connected device. Ensure headphones are properly paired. Try restarting both devices.
Active Noise Cancelling not working effectively.	Ensure ANC is activated. Check that the earcups form a good seal around your ears.

Problem	Solution
Google Assistant not responding.	Ensure your device is connected to the internet and Google Assistant is enabled and configured on your device.

9. SPECIFICATIONS

- **Model:** TAPH805BK
- **Connectivity:** Bluetooth 5.0
- **Wireless Range:** Up to 10 meters (33 feet)
- **Battery Life:** Up to 30 hours playback (ANC off), up to 27.5 hours (ANC on)
- **Charging Time:** Approximately 2 hours
- **Quick Charge:** 15 minutes charge for 6 hours playback
- **Audio Driver Size:** 40 mm Dynamic Driver
- **Impedance:** 3 Ohms
- **Sensitivity:** 90 dB
- **Noise Control:** Active Noise Cancelling (ANC)
- **Microphone:** Built-in with Echo Cancellation
- **Control Type:** Touch, Remote
- **Weight:** 1.41 ounces (approx. 40 grams)
- **Dimensions:** 2.76 x 7.48 x 4.33 inches
- **Material:** Plastic
- **Color:** Black

10. WARRANTY AND SUPPORT

Philips products are designed and manufactured to the highest standards. For detailed warranty information and customer support, please refer to the warranty card included in your package or visit the official Philips support website. Keep your proof of purchase for warranty claims.

For further assistance, you may also contact Philips customer service directly.