

## LOGICOM VEGA155T

# Logicom VEGA 155T Cordless Phone with Answering Machine User Manual

Model: VEGA 155T

## 1. INTRODUCTION

---

This manual provides instructions for the proper setup, operation, and maintenance of your Logicom VEGA 155T cordless phone with an integrated answering machine. The VEGA 155T is designed for reliable communication within your home or office, offering features such as DECT/GAP compatibility, an energy-saving mode, and a hands-free function.

Please read this manual thoroughly before using the device to ensure optimal performance and to prevent damage.

## 2. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- One (1) Logicom VEGA 155T Handset
- One (1) Logicom VEGA 155T Base Station with Answering Machine
- One (1) Power Adapter for Base Station
- One (1) Telephone Line Cord
- One (1) Rechargeable NiMH Battery Pack
- This User Manual

## 3. PRODUCT OVERVIEW

---

The Logicom VEGA 155T consists of a cordless handset and a base station. Familiarize yourself with the main components:



**Image 1:** Logicom VEGA 155T Cordless Phone. This image displays the handset and its base station, illustrating the compact design and key buttons on the handset, such as the display, navigation keys, call buttons, and numeric keypad.

### 3.1 Handset

- **Display Screen:** Shows call information, menu options, and battery status.
- **Navigation Keys:** For scrolling through menus and adjusting settings.
- **Call/End Keys:** To initiate or terminate calls.
- **Numeric Keypad:** For dialing numbers.
- **Hands-free Key:** To activate the speakerphone function.

- **Microphone and Speaker:** For communication.

## 3.2 Base Station

- **Charging Cradle:** For charging the handset.
- **Telephone Line Port:** Connects to your telephone wall socket or internet box.
- **Power Adapter Port:** Connects to the power adapter.
- **Answering Machine Controls:** Play/Stop, Skip, Delete messages (specific buttons may vary, refer to detailed diagram in full manual).
- **Paging Button:** To locate a misplaced handset.

## 4. SETUP

---

### 4.1 Battery Installation

1. Open the battery compartment cover on the back of the handset.
2. Insert the supplied NiMH battery pack, ensuring correct polarity.
3. Close the battery compartment cover securely.

### 4.2 Connecting the Base Station

1. Connect one end of the telephone line cord to the "LINE" port on the base station.
2. Connect the other end of the telephone line cord to your telephone wall socket or the phone port on your internet box.
3. Connect the power adapter to the "POWER" port on the base station.
4. Plug the power adapter into a standard electrical outlet.

### 4.3 Initial Charging

Place the handset on the base station's charging cradle. The handset display will indicate charging. For optimal battery performance, charge the handset for at least 12-15 hours before its first use, even if the display indicates a full charge sooner.

### 4.4 Handset Registration (for additional handsets or re-registration)

Your primary handset is usually pre-registered. If you are adding up to 5 additional handsets or need to re-register a handset:

1. On the base station, press and hold the Paging button (or registration button) for approximately 5 seconds until the registration indicator light flashes.
2. On the handset, access the menu, navigate to "Registration" or "Register Handset," and confirm.
3. Enter the system PIN (default is usually 0000 or 1234, refer to the full manual for specific default PIN).
4. The handset will display a confirmation message upon successful registration.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Making and Receiving Calls

- **To Make a Call:** Pick up the handset, dial the number, and press the **Call** key.
- **To Receive a Call:** When the phone rings, press the **Call** key.
- **To End a Call:** Press the **End** key or place the handset back on the base station.
- **Hands-free (Speakerphone):** During a call, press the **Hands-free** key to activate the speakerphone. Press

it again to return to handset mode.

## 5.2 Phonebook

The phonebook can store up to 20 contacts.

- **To Add a Contact:** Access the menu, select "Phonebook," then "Add New Entry." Enter the name and number, then save.
- **To Call from Phonebook:** Access the phonebook, scroll to the desired contact, and press the **Call** key.

## 5.3 Answering Machine

The integrated answering machine records messages when you are unavailable.

- **Activating/Deactivating:** Access the answering machine menu on the handset or use the dedicated button on the base station.
- **Recording a Greeting:** Follow the menu prompts to record a personalized outgoing message.
- **Playing Messages:** Press the **Play** button on the base station or access the answering machine menu on the handset.
- **Deleting Messages:** During playback, press the **Delete** button on the base station or select the option from the handset menu.

## 5.4 Other Functions

- **Call Log:** Review the last 10 incoming/outgoing calls.
- **Keypad Lock:** Press and hold the **#** key to lock/unlock the keypad.
- **Alarm:** Set an alarm through the handset menu.
- **Intercom (Multi-handset system):** If multiple handsets are registered, you can make internal calls between them. Consult the full manual for detailed intercom instructions.
- **Call Transfer (Multi-handset system):** Transfer an external call to another registered handset.

# 6. MAINTENANCE

---

## 6.1 Cleaning

Wipe the handset and base station with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure no liquid enters the device openings.

## 6.2 Battery Care

- Use only the specified rechargeable NiMH battery pack.
- If the phone will not be used for an extended period, remove the battery from the handset.
- Dispose of old batteries responsibly according to local regulations.

# 7. TROUBLESHOOTING

---

Problem	Possible Solution
No dial tone.	<ul style="list-style-type: none"> <li>• Ensure the telephone line cord is securely connected to both the base station and the wall socket/internet box.</li> <li>• Check if the power adapter is properly connected to the base station and a working electrical outlet.</li> <li>• Verify that the handset battery is charged.</li> </ul>
Cannot make or receive calls.	<ul style="list-style-type: none"> <li>• Check for a dial tone.</li> <li>• Ensure the handset is within range of the base station (up to 50m indoors, 300m outdoors).</li> <li>• Confirm the handset is registered to the base station.</li> </ul>
Handset display is blank or shows "Low Battery".	<ul style="list-style-type: none"> <li>• Place the handset on the base station to charge.</li> <li>• Ensure the battery is correctly installed.</li> <li>• If the problem persists, the battery may need replacement.</li> </ul>
Poor call quality or interference.	<ul style="list-style-type: none"> <li>• Move closer to the base station.</li> <li>• Avoid placing the base station near other electronic devices (Wi-Fi routers, microwaves, computers) that may cause interference.</li> </ul>

## 8. SPECIFICATIONS

<b>Brand</b>	LOGICOM
<b>Model Number</b>	VEGA155T
<b>Product Type</b>	Cordless Phone with Answering Machine
<b>Connectivity</b>	DECT/GAP compatible
<b>Color</b>	Slate
<b>Range (Indoor)</b>	Up to 50 meters (depending on wall thickness)
<b>Range (Outdoor)</b>	Up to 300 meters (in open field)
<b>Multi-Handset Support</b>	Up to 5 handsets can be associated
<b>Talk Time</b>	Up to 7 hours
<b>Standby Time</b>	Up to 100 hours
<b>Phonebook Capacity</b>	20 contacts
<b>Call Log Capacity</b>	10 numbers
<b>Special Features</b>	Answering machine, Hands-free, Silence mode, Keypad lock, Alarm, Energy-saving mode
<b>Battery Type</b>	NiMH rechargeable
<b>Material</b>	Plastic
<b>Dimensions (L x W x H)</b>	15 x 15 x 15 cm (approximate)

## 9. WARRANTY AND SUPPORT

Logicom products are designed for reliability. In case you encounter any issues or require assistance with your

VEGA 155T, please contact Logicom Customer Service. Refer to the product packaging or the official Logicom website for the most up-to-date contact information and warranty details applicable to your region. Logicom is committed to providing appropriate solutions for its customers.