

[Manuals.plus](#) /

› [Fel-Pro](#) /

› FEL-PRO ES 73178 Fuel Injector O-ring Set Instruction Manual

Fel-Pro ES 73178

FEL-PRO ES 73178 Fuel Injector O-ring Set Instruction Manual

INTRODUCTION

This manual provides essential information for the proper handling, installation, and maintenance of your FEL-PRO ES 73178 Fuel Injector O-ring Set. These O-rings are designed to provide a reliable seal for fuel injectors, ensuring optimal fuel system performance and preventing leaks. Please read these instructions carefully before proceeding with installation.

SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of the fuel injector O-rings. Always refer to your vehicle's specific service manual for detailed instructions and torque specifications.

1. **Safety First:** Ensure the engine is cool and the fuel system pressure has been relieved before beginning any work. Disconnect the vehicle's battery.
2. **Cleanliness:** Thoroughly clean the fuel injector and the injector bore area on the engine to remove any dirt, debris, or old gasket material. Contaminants can compromise the seal.
3. **Remove Old O-rings:** Carefully remove the old O-rings from the fuel injectors. Inspect the injector for any damage or wear.
4. **Lubrication:** Lightly lubricate the new FEL-PRO O-rings with a small amount of clean engine oil or a fuel-compatible lubricant. This aids in installation and prevents damage to the O-rings.
5. **Install New O-rings:** Gently roll the new O-rings onto the fuel injectors, ensuring they are seated correctly in their grooves without twisting or stretching.
6. **Reinstallation:** Carefully reinsert the fuel injectors into their bores. Ensure they are fully seated and properly aligned. Follow vehicle-specific procedures for securing the injectors and reconnecting fuel lines and electrical connectors.
7. **Leak Check:** After reassembly, reconnect the battery and prime the fuel system (if applicable). Start the engine and carefully inspect all fuel injector areas for any signs of fuel leaks. Address any leaks immediately.

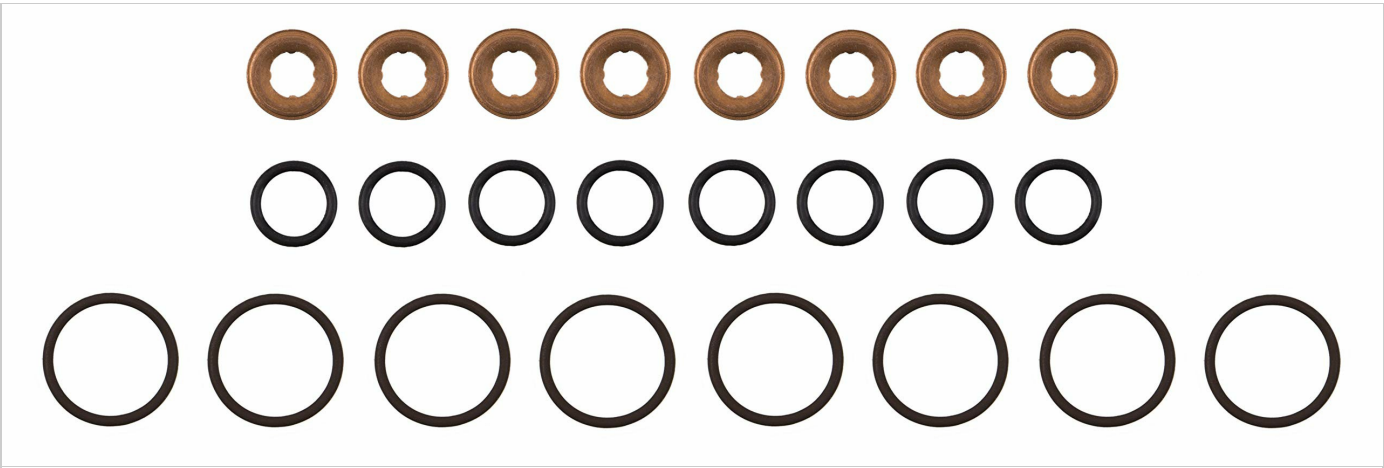


Image: FEL-PRO ES 73178 Fuel Injector O-ring Set. This image displays the complete set of O-rings designed for fuel injector sealing applications.

OPERATING FUNCTION

Once properly installed, the FEL-PRO ES 73178 Fuel Injector O-ring Set functions by creating a tight, leak-proof seal between the fuel injector and the engine's intake manifold or fuel rail. This seal is critical for maintaining correct fuel pressure, preventing fuel leaks, and ensuring that the fuel injectors deliver fuel accurately into the combustion chamber. The O-rings are engineered to withstand the specific temperatures and chemical environments of the fuel system.

MAINTENANCE

Fuel injector O-rings are wear items and are generally replaced rather than maintained. It is recommended to replace O-rings whenever fuel injectors are removed for service or when signs of fuel leaks are present. Regular inspection of the fuel system for any signs of leaks or deterioration of components is advised as part of routine vehicle maintenance. If any O-rings appear cracked, hardened, or show signs of wear, they should be replaced immediately.

TROUBLESHOOTING

If you experience issues after installing new O-rings, consider the following:

- **Fuel Leaks:** The most common symptom of an improperly sealed O-ring. Recheck installation, ensuring O-rings are not pinched or twisted, and that injectors are fully seated. Verify proper torque on any retaining hardware.
- **Fuel Smell:** A strong fuel odor, especially after engine operation, indicates a leak. Inspect all fuel connections and O-ring locations.
- **Rough Idle or Engine Performance Issues:** While less common for O-rings alone, an air leak around an injector (if the O-ring seals against the intake) could cause a lean condition and affect engine performance.

If troubleshooting steps do not resolve the issue, it is recommended to consult a certified automotive technician for diagnosis and repair.

SPECIFICATIONS

Brand	Fel-Pro
Model	ES 73178
Part Number	ES73178

Included Components	Fuel Injector O-ring Set
GTIN/UPC	019826228130
Key Features	Meets or exceeds all original equipment specifications, application-specific design, engineered for the sealing repair environment, unsurpassed quality.

WARRANTY INFORMATION

For warranty assistance regarding your FEL-PRO ES 73178 Fuel Injector O-ring Set, please contact the retailer or seller from whom the product was purchased. Manufacturer warranty details may also be available directly from Fel-Pro.

SUPPORT

If you require further technical assistance or have questions not covered in this manual, please consider the following options:

- Consult your vehicle's official service manual for specific procedures related to your make and model.
- Contact a certified automotive technician for professional advice and service.
- Visit the official Fel-Pro website or contact their customer support for product-specific inquiries.

