

[Manuals.plus](#) /

› [Enchanted Forest](#) /

› Enchanted Forest Porcelain Lighted House Church Instruction Manual

Enchanted Forest Porcelain Lighted House Church

Enchanted Forest Porcelain Lighted House Church Instruction Manual

Model: Porcelain Lighted House Church

1. INTRODUCTION

Thank you for purchasing the Enchanted Forest Porcelain Lighted House Church. This collectible piece is designed to bring a festive and charming ambiance to your home decor. Please read this manual thoroughly before setting up and operating your lighted house to ensure proper use and longevity of the product. Keep this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

- This product is intended for indoor use only. Do not expose to water or high humidity.
- Handle with care. The house is made of porcelain and can break if dropped or mishandled.
- Ensure the power cord is not pinched, cut, or damaged. Do not operate with a damaged cord.
- Keep out of reach of small children and pets to prevent accidental damage or injury.
- Unplug the unit from the power outlet when not in use or before cleaning.
- Do not attempt to modify or repair the product yourself. Refer to qualified personnel for service.

3. PACKAGE CONTENTS

Carefully unpack all items and ensure all components are present and undamaged. If any items are missing or damaged, please contact customer support.

- 1 x Enchanted Forest Porcelain Lighted House Church
- 1 x 6-foot power cord with bulb and on/off switch



Image 1: The Enchanted Forest Porcelain Lighted House Church as packaged in its retail box. The box features an image of the church and product details.



Image 2: A closer front view of the Enchanted Forest Porcelain Lighted House Church packaging, highlighting the detailed artwork of the church on the box.

4. SETUP

1. **Choose a Location:** Select a stable, flat, and dry tabletop surface for your lighted house. Ensure it is away from direct heat sources, open flames, and areas where it might be easily knocked over.
2. **Position the House:** Carefully place the Porcelain Lighted House Church on your chosen surface.
3. **Insert the Bulb:** Locate the opening at the bottom or back of the house designed for the light bulb. Gently insert the bulb from the power cord into this opening. Ensure the bulb is securely seated.
4. **Connect to Power:** Plug the 6-foot power cord into a standard indoor electrical outlet (120V AC).

5. OPERATING INSTRUCTIONS

The Enchanted Forest Porcelain Lighted House Church is designed for simple operation.

1. **Turn On:** Locate the on/off switch on the power cord. Flip the switch to the 'ON' position. The interior light of the church will illuminate.
2. **Turn Off:** To turn off the light, flip the switch to the 'OFF' position.
3. **Unplug When Not in Use:** For safety and energy conservation, always unplug the unit from the electrical outlet when it is not in use for extended periods.

6. MAINTENANCE AND CARE

Proper care will help maintain the beauty and functionality of your lighted house.

- **Cleaning:** To clean the porcelain surface, gently wipe with a soft, dry cloth. For stubborn dust, a slightly damp cloth can be used, followed immediately by a dry cloth. Do not use abrasive cleaners or harsh chemicals.
- **Bulb Replacement:** If the light bulb burns out, unplug the unit. Carefully remove the old bulb and replace it with a new, compatible miniature light bulb (typically C7 or similar, check the existing bulb for specifications).
- **Storage:** When storing, ensure the house is clean and dry. Store it in its original packaging or a protective container in a cool, dry place to prevent damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	<ul style="list-style-type: none">• Power cord not plugged in.• Switch is in 'OFF' position.• Light bulb is burnt out or loose.• No power from outlet.	<ul style="list-style-type: none">• Ensure power cord is securely plugged into a working outlet.• Flip the on/off switch to the 'ON' position.• Unplug, then check and replace the light bulb if necessary.• Test the outlet with another device.
Light flickers.	<ul style="list-style-type: none">• Loose bulb connection.• Faulty bulb.	<ul style="list-style-type: none">• Unplug, then gently re-seat the bulb.• Replace the bulb.

Problem	Possible Cause	Solution
House appears unstable.	Uneven surface.	Move the house to a flat, stable surface.

8. SPECIFICATIONS

- **Product Name:** Enchanted Forest Porcelain Lighted House Church
- **Model:** Porcelain Lighted House Church
- **Material:** Porcelain
- **Power Source:** 120V AC (standard household outlet)
- **Cord Length:** 6 feet
- **Recommended Use:** Indoor Home Decor
- **Care Instructions:** Wipe Clean
- **UPC:** 020972187882

9. WARRANTY AND CUSTOMER SUPPORT

Enchanted Forest stands behind the quality of its products. This product is covered by a limited warranty against manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical assistance, replacement parts, or warranty inquiries, please contact Enchanted Forest customer support through their official website or the retailer from whom the product was purchased. Please have your model name and UPC ready when contacting support.