

## Sanyo FWBP505F

# Sanyo FWBP505F Blu-ray Player User Manual

Model: FWBP505F

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read these safety instructions carefully before operating the unit. Keep this manual for future reference.

- **Power Source:** Connect the player only to the type of power source indicated on the marking label.
- **Ventilation:** Ensure proper ventilation. Do not block ventilation openings. Do not place the unit on a bed, sofa, rug, or similar surface that may block the openings.
- **Liquids:** Do not expose the unit to dripping or splashing liquids. Do not place objects filled with liquids, such as vases, on the unit.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a dry cloth for cleaning. Do not use liquid cleaners or aerosol cleaners.
- **Heat:** Do not place the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

## 2. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- Sanyo FWBP505F Blu-ray Player
- Remote Control
- HDMI Cable (6FT)
- User Manual (this document)



Image: Sanyo FWBP505F Blu-ray Player shown with its remote control and an HDMI cable, illustrating the complete package contents.

### 3. PRODUCT OVERVIEW

The Sanyo FWBP505F is a compact Blu-ray player designed for high-definition video playback. It supports Blu-ray discs, standard DVDs, and media files from a USB drive. Key features include 1080p Full HD resolution, support for Dolby TrueHD/DTS sound, an HDMI output for TV connection, and a parental lock function.



Image: Front view of the Sanyo FWBP505F Blu-ray Player, displaying the disc tray, control buttons, and USB port.

### 4. SETUP

#### 4.1 Connecting to a Television

1. Ensure both the Blu-ray player and your television are powered off.
2. Connect one end of the HDMI cable to the HDMI OUT port on the back of the Blu-ray player.
3. Connect the other end of the HDMI cable to an available HDMI IN port on your television. Note the HDMI input number (e.g., HDMI 1, HDMI 2).

#### 4.2 Power Connection

1. Plug the power cord of the Blu-ray player into a standard AC wall outlet.

#### 4.3 Remote Control Setup

1. Open the battery compartment on the back of the remote control.
2. Insert two AAA batteries (not always included) according to the polarity indicators (+ and -).
3. Close the battery compartment securely.

### 5. OPERATING THE PLAYER

---

## 5.1 Disc Playback

1. Power on your television and select the correct HDMI input source.
2. Press the **POWER** button on the player or remote control to turn on the Blu-ray player.
3. Press the **OPEN/CLOSE** button to open the disc tray.
4. Place a Blu-ray disc or DVD onto the disc tray with the label side facing up.
5. Press the **OPEN/CLOSE** button again to close the disc tray.
6. The player will automatically begin playback or display a disc menu. Use the remote control's navigation buttons and **ENTER** to make selections.
7. Use the **PLAY**, **PAUSE**, **STOP**, **FAST FORWARD**, and **REWIND** buttons on the remote for playback control.

## 5.2 USB Playback

1. Insert a USB flash drive into the USB port on the front of the Blu-ray player.
2. The player should detect the USB device and display a menu for media selection (e.g., photos, music, videos).
3. Navigate through the files using the remote control and press **ENTER** to play selected content.

## 5.3 Parental Lock

The parental lock feature allows you to restrict access to certain content based on rating levels.

1. Access the player's **SETUP** menu using the remote control.
2. Navigate to the **PARENTAL CONTROL** or **RATING** section.
3. You may be prompted to enter a password (default is often 0000 or 1234).
4. Set the desired rating level for content restriction.
5. Save your settings and exit the menu.

## 5.4 Audio Settings

This player supports Dolby TrueHD and DTS sound formats. You can adjust audio output settings through the player's setup menu to match your audio receiver or television capabilities for optimal sound experience.

---

## 6. MAINTENANCE

### 6.1 Cleaning the Unit

Wipe the exterior of the player with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

### 6.2 Cleaning Discs

Wipe discs from the center outwards with a soft, lint-free cloth. Do not use solvents or abrasive cleaners on discs.

---

## 7. TROUBLESHOOTING

If you encounter issues with your Blu-ray player, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Ensure the power cord is securely plugged into both the player and a working wall outlet. Try a different outlet.
No picture on TV	Verify the HDMI cable is correctly connected. Ensure your TV is set to the correct HDMI input source. Check TV settings.
No sound	Check TV or audio receiver volume. Ensure audio cables (if used) are connected. Verify audio settings in the player's menu.
Disc not playing	Ensure the disc is clean and free of scratches. Verify the disc type is supported (Blu-ray or DVD). Try a different disc.
Remote control not working	Check and replace batteries if necessary. Ensure there are no obstructions between the remote and the player's sensor.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Sanyo
Model Name	FWBP505F
Dimensions (W x D x H)	8 x 11 x 1.3 inches
Item Weight	2.72 pounds
Resolution	1920x1080 (Full HD)
Media Type	Blu-Ray Disc, DVD
Connectivity Technology	HDMI, USB
Connector Type	HDMI
Audio Output Mode	Surround (Dolby TrueHD/DTS support)
Color	Black

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact the retailer. Keep your proof of purchase for any warranty claims.