



[Manuals.plus](#) /

› [Goehiaul](#) /

› Goehiaul Cash Box Model 300CB with Combination Lock User Manual

Goehiaul 300CB

Goehiaul Cash Box Model 300CB User Manual

Model: 300CB | Brand: Goehiaul

INTRODUCTION

This manual provides comprehensive instructions for the Goehiaul Cash Box Model 300CB. Designed for secure and organized cash handling, this metal cash box features a combination lock, a tiered money tray, and spring clips to secure currency. Please read this manual thoroughly to ensure proper setup and operation of your cash box.



The Goehial Cash Box Model 300CB, shown open with organized currency and coins in its tiered tray.

PRODUCT FEATURES

The Goehial Cash Box Model 300CB is engineered for efficiency and security. Key features include:

- **Large Storage Capacity:** Designed with three distinct areas for coin storage, bill storage, and additional space for notes or receipts, ensuring all valuables are well-organized.
- **Spring Clips for Bills:** Four dedicated slots for paper currency are equipped with strong spring clips to hold bills securely in place, preventing disarray even during transport.
- **Convenient Combination Lock:** A three-digit combination lock provides secure access without the need for keys, offering ease of use and peace of mind.
- **Durable Construction:** Made from heavy-duty metal, weighing approximately 4 pounds, for robustness and longevity.
- **Portable Design:** Features a sturdy stainless steel handle for easy and comfortable portability.



Detailed view of the cash box features, including the 5-compartment coin tray, spring-loaded bill clips, combination lock, and stainless steel handle.

SETUP: SETTING YOUR COMBINATION LOCK

Your Goehiaul Cash Box comes with a resettable three-digit combination lock. Follow these steps to set your personal code:

1. Step 1: Unlock with Default Code

Use the default code '000' to unlock the cash box. Ensure the dials are set to '000' and then slide the latch to open.

2. Step 2: Locate and Move the Lever

Inside the cash box, locate the small lever on the back of the lock mechanism. Move this lever from position 'A' to position 'B'.


3. Step 3: Set Your Desired Combination

While the lever is in position 'B', rotate the digit wheels to your desired three-digit combination. Choose a memorable but secure code.

4. Step 4: Secure the New Combination

Slide the lever back from position 'B' to position 'A'. Your new password is now set. Test the new combination by scrambling the dials and then entering your new code to open the box.

How to Set Your Password?

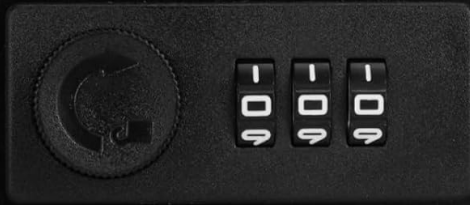

Step 1: Use the default code 000 to unlock the cash box.

Step 2: Inside the box, move the lever from A to B.



Step 3: Rotate the digit wheel to the desired combination.

Step 4: Slide the lever back to A, and your password will be set.



Visual guide for setting or resetting the three-digit combination lock.

OPERATING INSTRUCTIONS

Using your Goehiaul Cash Box is straightforward:

- **Opening the Box:** Enter your set three-digit combination and slide the latch to the right. The lid will open, and the tiered coin tray will automatically lift.
- **Organizing Currency:** Place coins into the five designated compartments within the cantilever tray. For paper currency, lift the spring clips in the four bill slots, insert the bills, and gently lower the clips to secure them.
- **Using Additional Storage:** The space beneath the tiered tray and behind the bill slots can be used for storing larger items, rolled coins, receipts, or other important documents.
- **Closing the Box:** Ensure all items are properly placed. Gently lower the lid, which will cause the coin tray to retract. Press down firmly until the latch engages and the combination lock automatically secures. Scramble the dials to lock the box.



A user demonstrating how to place bills securely under the spring clips in the cash box.

MAINTENANCE

To ensure the longevity and optimal performance of your cash box, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the exterior and interior surfaces with a soft, dry cloth. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by immediate drying. Avoid abrasive cleaners or solvents.
- **Lock Care:** The combination lock mechanism is designed for durability. Avoid forcing the dials or the latch. If the mechanism feels stiff, a small amount of graphite powder (not oil) can be applied to the moving parts.
- **Storage:** Store the cash box in a dry environment to prevent rust or corrosion.

TROUBLESHOOTING

If you encounter issues with your Goehiaul Cash Box, consider the following:

- **Box will not open:**

- Ensure the correct three-digit combination is entered.
 - Verify that the dials are precisely aligned with the indicator marks.
 - If the combination was recently changed, try the previous combination or the default '000' if it was never changed.
- **Lid does not close properly:**
 - Check for any obstructions inside the box, especially around the edges or the tiered tray mechanism.
 - Ensure the tiered tray is fully retracted when closing the lid.
 - **Spring clips are not holding bills:**
 - Ensure bills are placed flat and centered under the clips.
 - Avoid overfilling the compartments, which can reduce clip tension.

If problems persist, please contact Goehiaul customer support for assistance.

SPECIFICATIONS

Feature	Detail
Brand	Goehiaul
Model Number	300CB
Product Dimensions	11.8" W x 9.4" D x 3.54" H
Lock Type	Combination Lock (3-digit)
Material	Heavy-duty Metal
Item Weight	4 Pounds
Special Feature	Portable, Tiered Money Tray with Spring Clips



Diagram illustrating the dimensions of the cash box: 11.8 inches wide, 9.4 inches deep, and 3.54 inches high.

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Goehiaul Cash Box Model 300CB, please refer to the product packaging or contact Goehiaul customer service directly. Contact details can typically be found on the manufacturer's official website or through your point of purchase.