

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [eufy](#) /

› [eufy HomeVac H11 Cordless Handheld Vacuum Cleaner Instruction Manual](#)

eufy H11

eufy HomeVac H11 Cordless Handheld Vacuum Cleaner Instruction Manual

Model: H11

INTRODUCTION

Thank you for choosing the eufy HomeVac H11 Cordless Handheld Vacuum Cleaner. This manual provides essential information for the safe and efficient use of your new appliance. Please read it thoroughly before operation and retain it for future reference.



Image: The eufy HomeVac H11 in black, a sleek, compact handheld vacuum cleaner.

WHAT'S IN THE BOX

Verify that all components are present and in good condition upon unpacking:

- eufy HomeVac H11 Unit
- 2-in-1 Crevice Tool
- USB to Micro-USB Cable

Washable High-Efficiency Filter



Image: The eufy HomeVac H11 unit, 2-in-1 crevice tool, and USB charging cable laid out on a surface.

SETUP

Charging the Device

Before first use, fully charge your HomeVac H11. The device is powered by a Lithium-Ion battery.

1. Connect the provided USB to Micro-USB cable to the charging port on the HomeVac H11.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., phone charger, power bank, computer USB port).
3. The charging indicator lights will illuminate to show charging status. A full charge typically takes approximately 5 hours.

4. Ensure the device is placed in a stable, upright position on a flat surface during charging to prevent damage to the charging port.



Image: The eufy HomeVac H11 charging via a USB cable connected to a wall adapter on a countertop.

OPERATING INSTRUCTIONS

Power On/Off

To turn the HomeVac H11 on or off, press the power button located on the device. The device operates at a single power level with 5500Pa suction.

Attaching Accessories

The 2-in-1 crevice tool is designed for versatility:

- **Crevice Tool Mode:** Use the narrow nozzle to reach into tight spaces, corners, and between cushions.
- **Brush Mode:** Slide the brush attachment forward to engage the bristles. This mode is ideal for delicate surfaces, upholstery, and dislodging stubborn dirt.



Image: A hand holding the eufy HomeVac H11 with the 2-in-1 crevice tool extended, cleaning crumbs from a sofa.

Cleaning Applications

The lightweight and compact design of the HomeVac H11 makes it suitable for various cleaning tasks:

- **Vehicle Interiors:** Easily clean car seats, floor mats, and tight spaces around the console.

- **Home Upholstery:** Remove crumbs and pet hair from sofas, chairs, and other fabric surfaces.
- **Kitchen Countertops:** Quickly clear away food debris, coffee grounds, or spills.
- **Desks and Workspaces:** Keep your desk free of dust and small particles.

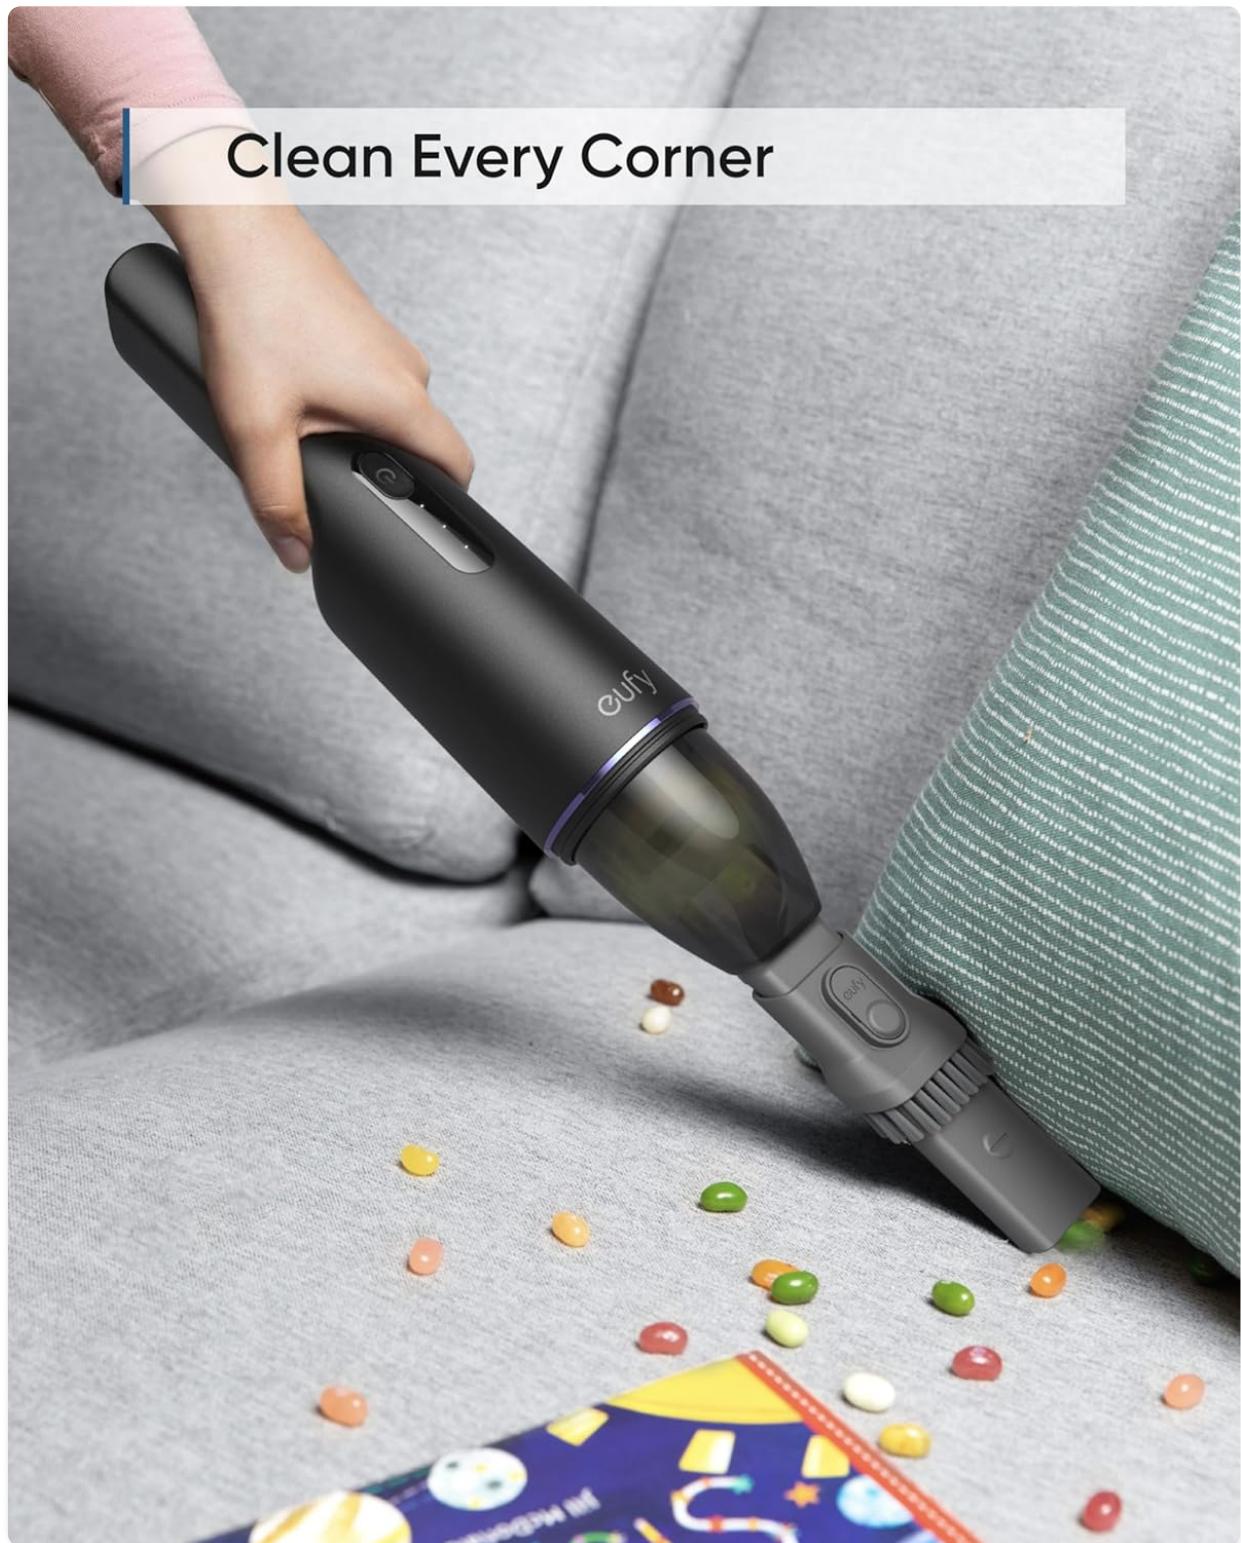


Image: A person using the eufy HomeVac H11 to clean crumbs from a car seat.

Light and Nimble

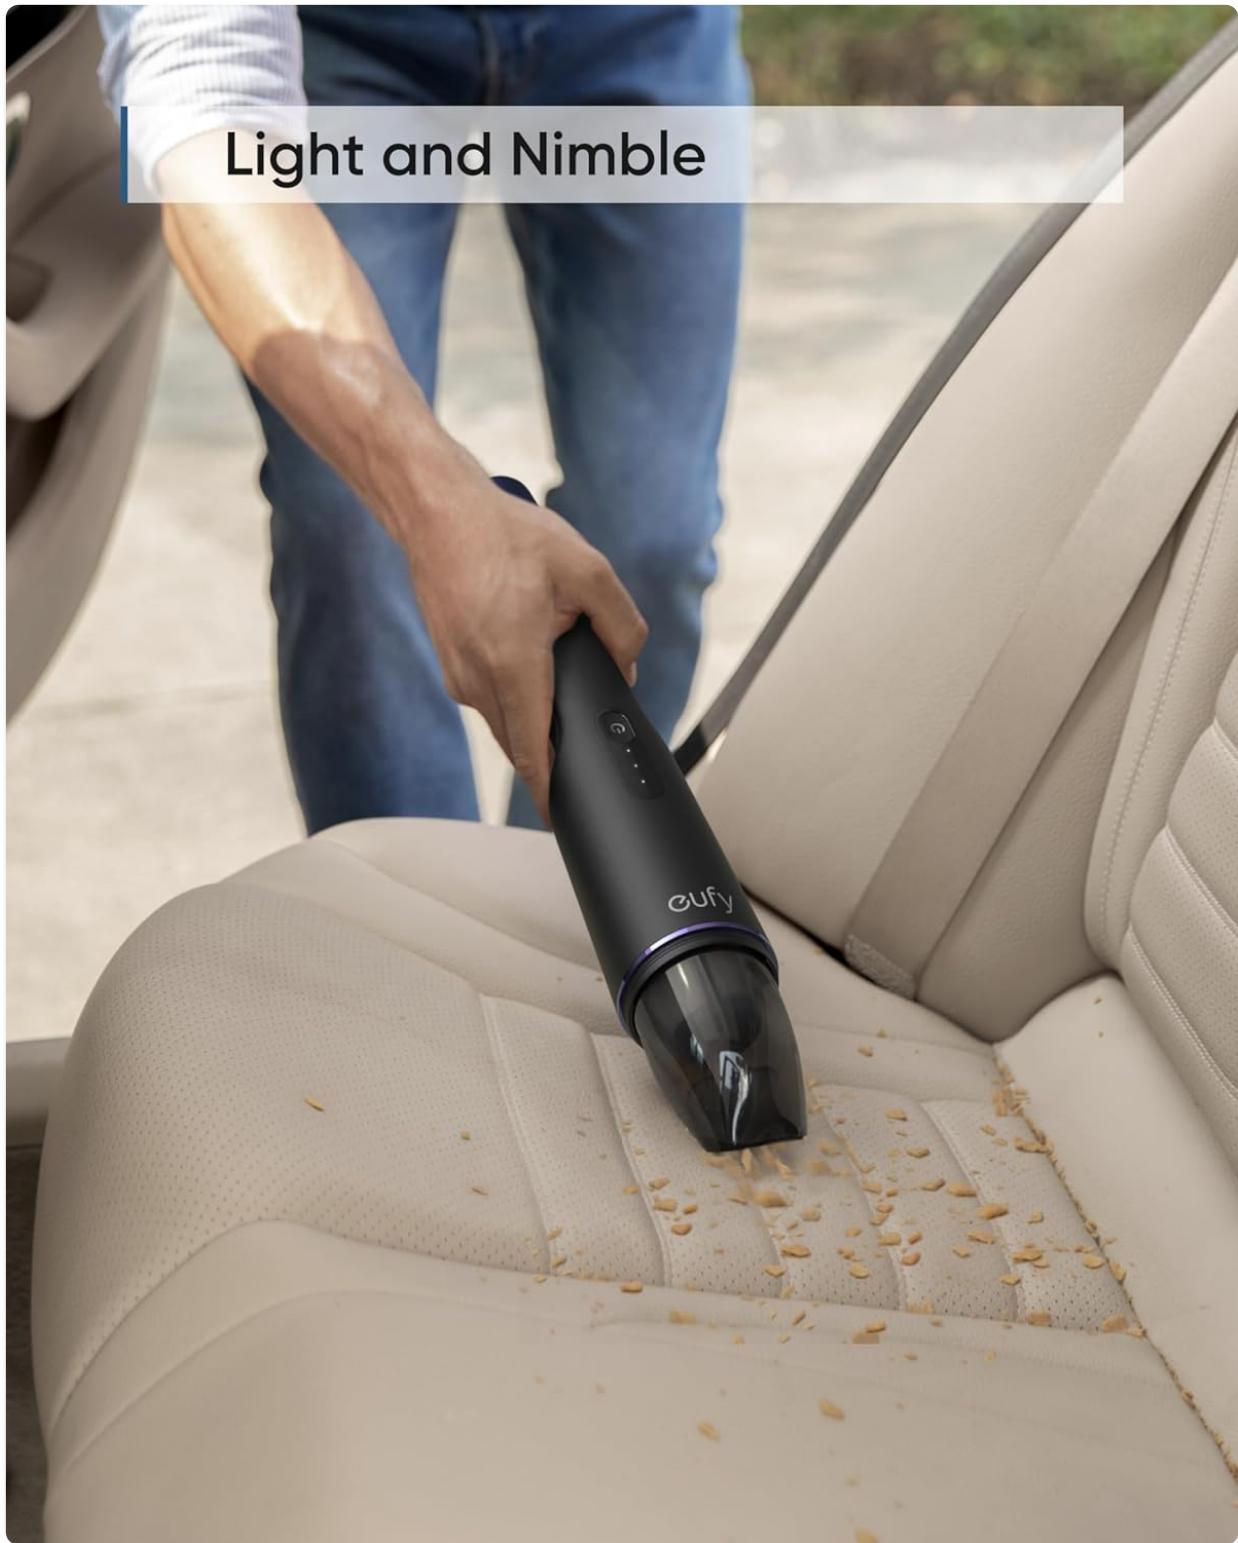


Image: A person using the eufy HomeVac H11 to clean debris from a sofa cushion.

One-Pass Suction Power



Image: The eufy HomeVac H11 with its nozzle close to a countertop, demonstrating its 5500Pa suction power on spilled coffee grounds.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your HomeVac H11.

Emptying the Dust Cup

To empty the dust cup, twist the transparent dust cup counter-clockwise and detach it from the main unit. Dispose of the collected debris into a waste bin.

Cleaning the Filter

The HomeVac H11 features a washable high-efficiency filter. For best cleaning performance, clean the filter regularly.

1. Remove the filter from the dust cup.
2. Rinse the filter under running water until clean.
3. Allow the filter to air dry completely for at least 24 hours before reinserting it into the dust cup. Do not use the vacuum with a wet filter.



Image: A hand holding the eufy HomeVac H11's filter under running water in a sink for cleaning.

TROUBLESHOOTING

If you encounter any issues with your HomeVac H11, refer to the following table for common problems and

solutions:

Problem	Possible Cause	Solution
Reduced Suction Power	Clogged filter or full dust cup.	Empty the dust cup and clean the filter. Ensure the filter is completely dry before reinserting.
Device does not charge or holds less charge	Charging cable issue, power adapter issue, or battery degradation over time.	Ensure the USB cable and adapter are functioning correctly. Try a different cable or adapter. Battery capacity may naturally decrease over several years of use.
Air blows debris away before vacuuming	Exhaust vents are positioned to blow air downwards.	Adjust the vacuuming angle (e.g., more vertical) to prevent air from scattering debris.
Slow charging time	Low power USB source or standard charging time.	Ensure you are using a suitable USB power adapter. Full charge takes approximately 5 hours.

SPECIFICATIONS

Feature	Detail
Model Name	H11
Brand	eufy
Suction Power	5500Pa
Item Weight	1.2 pounds
Product Dimensions	13.19" L x 2.91" W x 2.91" H
Battery Type	Lithium-Ion (included)
Charging Time	5 Hours
Dust Cup Capacity	0.7 Liters
Noise Level	70 Decibels
Filter Type	Cartridge (Washable)
Connectivity	USB (Micro-USB)

WARRANTY AND SUPPORT

The eufy HomeVac H11 comes with a **2-year warranty**. For warranty claims, technical support, or any inquiries regarding your product, please contact eufy customer service through their official website or the contact information provided in your product packaging.

For additional information and resources, visit the official [eufy Store on Amazon](#).

