

[Manuals.plus](#) /

› [DUNCHATY](#) /

› DUNCHATY 14-inch 3-Smile Jack-O'-Lantern Halloween Pumpkin Decoration Instruction Manual

DUNCHATY 7SZJQ-2-14IN-3TER13-6-HLOWJKL

DUNCHATY 14-inch 3-Smile Jack-O'-Lantern Halloween Pumpkin Decoration

Model: 7SZJQ-2-14IN-3TER13-6-HLOWJKL

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your DUNCHATY 14-inch 3-Smile Jack-O'-Lantern Halloween Pumpkin Decoration. This lighted decoration features a stacked pumpkin design with three distinct carved faces, an integrated LED bulb, and durable plastic construction suitable for both indoor and outdoor display. Please read all instructions carefully before setup and operation.

SAFETY INFORMATION

Your safety is paramount. Please observe the following precautions:

- This product is ETL certified, ensuring it meets recognized safety standards.
- The power cord includes two extra fuses for protection against electrical surges.
- The decoration is weather-resistant, making it suitable for outdoor use. However, avoid submerging the unit in water.
- Always unplug the decoration from the power outlet when not in use, during bulb or fuse replacement, or before cleaning.
- Regularly inspect the power cord and bulb for any signs of damage. Do not use if damaged.
- Keep electrical cords away from high-traffic areas to prevent tripping hazards.

SETUP

1. Carefully remove the DUNCHATY Jack-O'-Lantern from its packaging.
2. Place the decoration on a stable, flat surface where it will not be easily knocked over. Ensure the power cord can reach a suitable electrical outlet without tension.
3. For outdoor use, position the decoration in an area that allows for proper drainage and minimizes direct exposure to extreme weather conditions, despite its weather-resistant design.
4. Plug the power cord into a standard 120V AC electrical outlet. The decoration will illuminate upon connection.



This image shows the DUNCHATY 14-inch 3-Smile Jack-O'-Lantern, a stacked pumpkin decoration with three carved faces, illuminated and plugged into an electrical outlet on an outdoor brick step, demonstrating its appearance when in use.

OPERATING INSTRUCTIONS

The DUNCHATY Jack-O'-Lantern is designed for simple operation:

- To turn the decoration **on**, plug the power cord into a functional electrical outlet.
- To turn the decoration **off**, unplug the power cord from the electrical outlet. This model does not feature an integrated on/off switch on the cord.

MAINTENANCE

Cleaning

To maintain the appearance of your decoration:

- Ensure the unit is unplugged before cleaning.

- Wipe the surface with a soft, dry, or slightly damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish.

Bulb Replacement

If the light stops working, the bulb may need replacement:

1. **Unplug** the decoration from the power source.
2. Locate the bulb access point, typically at the back or bottom of the pumpkin.
3. Carefully twist and pull out the old tungsten bulb.
4. Insert a new standard interface tungsten bulb, ensuring it is securely seated.
5. Plug the decoration back in to test the new bulb.

Long Lasting Tungsten Bulb

- **Standard Interface**
- **Easy replace**
- **Bright Light fits the season**



This image focuses on the internal lighting component, showing a standard tungsten bulb and its connection, indicating it is a long-lasting bulb with a standard interface for easy replacement.

Fuse Replacement

If the decoration does not light up after replacing the bulb, the fuse may be blown:

1. **Unplug** the decoration from the power source.
2. Locate the fuse compartment on the plug (usually a small sliding door).
3. Open the compartment and carefully remove the old fuse.
4. Insert one of the two included extra fuses into the compartment.
5. Close the fuse compartment and plug the decoration back in to test.

ETL Certified & Long Power Cord

- 3FT Power Cord
- ETL Certified
- Extra Fuse Included



This image emphasizes the safety features, showing the ETL certification mark on the power cord and mentioning that an extra fuse is included, along with a 3-foot power cord.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Decoration does not light up.	Not plugged in securely.	Ensure the power cord is fully inserted into a working electrical outlet.
	Bulb is faulty or loose.	Unplug the unit, check the bulb, and replace if necessary (refer to 'Bulb Replacement').
	Fuse is blown.	Unplug the unit, check the fuse in the plug, and replace if necessary (refer to 'Fuse Replacement').
	Power outlet is not functional.	Test the outlet with another device or try a different outlet.

SPECIFICATIONS

- **Brand:** DUNCHATY
- **Model Number:** 7SZJQ-2-14IN-3TER13-6-HLOWJKL
- **Product Dimensions (L x W x H):**9.25 x 8.46 x 14.17 inches
- **Item Weight:** 10.4 ounces
- **Material:** Plastic
- **Light Color:** Orange
- **Number of Light Sources:** 1
- **Power Cord Length:** 3 feet
- **Safety Certification:** ETL Certified
- **UPC:** 791319824028



This image illustrates the physical dimensions of the DUNCHATY 14-inch 3-Smile Jack-O'-Lantern, indicating a height of 14 inches and a width of 9.3 inches at its widest point.

Water Resistant

Safe to Stand Even in Rain
Waterproof ETL Certified Wire and Tungsten Bulb




Safe for both indoor
and outdoor use

This image demonstrates the water-resistant feature of the DUNCHATY 14-inch 3-Smile Jack-O'-Lantern, showing it illuminated outdoors on a brick step with text confirming its suitability for both indoor and outdoor use.

Multi-Layer Color Protection

- Fade-free coating
- Scratch-proof finish
- Sturdy and long-lasting

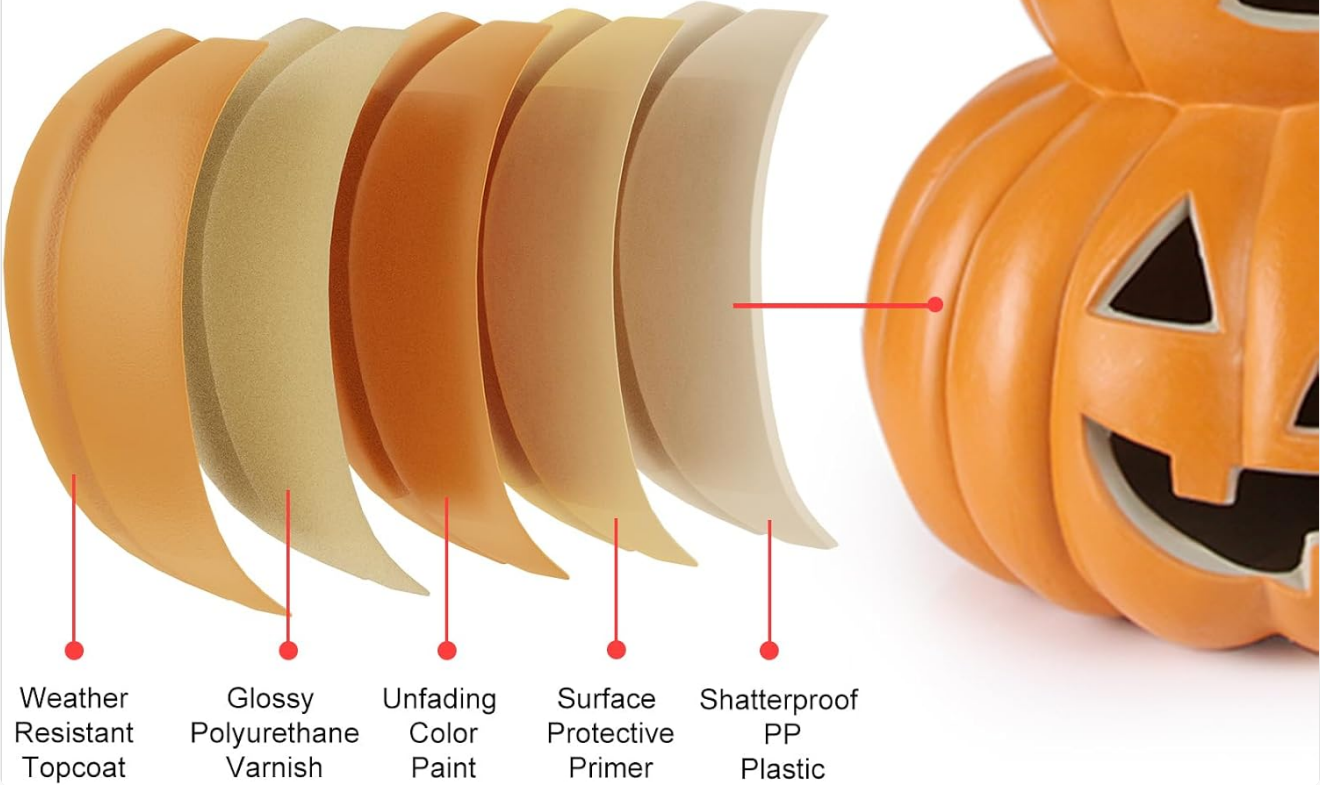

This diagram illustrates the multi-layer construction of the pumpkin's exterior, detailing layers such as a weather-resistant topcoat, glossy polyurethane varnish, unfading color paint, surface protective primer, and shatterproof PP plastic, contributing to its durability.

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For any questions regarding product operation, maintenance, or potential defects, please refer to the retailer's return policy or contact DUNCHATY customer support through their official channels or the platform where the product was purchased.

© 2025 DUNCHATY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07ZD824KG>

More documents and user manuals: **<https://manuals.plus/>**