

[Manuals.plus](#) /

› [USARMT](#) /

› Instruction Manual for USARMT Replacement SANYO TV Remote Control

USARMT CS-90283-1T

Instruction Manual

USARMT REPLACEMENT REMOTE CONTROL FOR SANYO TVs

Model: CS-90283-1T

Introduction

This manual provides detailed instructions for the use and care of your USARMT CS-90283-1T Replacement Remote Control. This remote is designed to function as a direct replacement for original SANYO TV remote controls, offering seamless compatibility with a wide range of SANYO television models without the need for complex programming.

Product Overview



Image: The USARMT CS-90283-1T replacement remote control. It is a black, rectangular remote with grey buttons. Key features include a red Power button at the top right, number pad, volume and channel controls, navigation buttons with an 'OK' center, and various function buttons such as Mute, Input, Menu, Exit, and colored buttons (Red, Green, Yellow, Blue) at the bottom.

The USARMT CS-90283-1T remote is a preprogrammed replacement unit. It is compatible with numerous SANYO TV models, including but not limited to:

- DP32242, DP55441, DP46142, DP40142, DP42142, DP32640, DP42740, DP42841, DP46841, DP50741, DP50842, DP24E14, DP42D24, DP50E44, DP55D44, DP58D34, DP65E34, DP39D14, FVD3924, FVF5044, DP26746, DP26647, DP42647, DP50747, DP42746, DP26647, DP50747, DP26647, DP42647, DP50747, DP42746, DP26647, DP50747, DP26648A, DP32648, DP37649, DP42848, DP46819, DP46848, DP50719, DP52848, HT27546, HT27547, HT32546, DP32640, DP42740, DP42841, DP46841, DP50741, DP50842, GXCC DP19648, DP26649, DP19649, DP32642, DP46812.
- Also replaces Sanyo remote models: GXBD, GXBM, MC42NS00, CS-90283-1T, GXFA, GXAB, GXBC, GXCC, GXBG, GXBJ, GXBG, GXBE, GXBC, GXBD, GXAB.

Setup

This remote control is designed for immediate use with compatible SANYO TV models. No programming or setup is required.

1. **Install Batteries:** Open the battery compartment cover on the back of the remote control. Insert two AAA batteries (not included), ensuring correct polarity (+/-). Close the battery compartment cover.
2. **Ready for Use:** The remote is now ready to operate your SANYO TV.

Operating Instructions

Point the remote control directly at the TV's infrared sensor. Ensure there are no obstructions between the remote and the TV.

- **POWER ():** Turns the TV on or off.
- **MUTE:** Mutes or unmutes the TV audio.
- **Number Buttons (0-9):** Directly select TV channels.
- **INPUT:** Cycles through available video input sources (e.g., HDMI, AV, Component).
- **VOL +/-:** Adjusts the volume level up or down.
- **CH +/-:** Changes the TV channel up or down.
- **Navigation Buttons (Up, Down, Left, Right) & OK:** Navigate through on-screen menus and confirm selections.
- **MENU:** Opens the TV's main menu.
- **EXIT:** Closes the current menu or on-screen display.
- **RECALL:** Switches between the current and previously viewed channel.
- **INFO:** Displays information about the current program or input.
- **FAVORITE:** Accesses favorite channels list.
- **ECO:** Activates or deactivates power-saving modes.
- **GUIDE:** Displays the electronic program guide (if available).
- **PIX SHAPE:** Adjusts picture aspect ratio or display mode.

- **AUDIO:** Selects audio tracks or modes.
- **CAPTION:** Toggles closed captions on or off.
- **SLEEP:** Sets a timer for the TV to automatically turn off.
- **Colored Buttons (R, G, Y, B):** These buttons (Red, Green, Yellow, Blue) are typically used for specific functions within menus or interactive services, as indicated on the TV screen.

Maintenance

Proper care will ensure the longevity of your remote control.

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage. Store in a cool, dry place.

Troubleshooting

If you experience issues with your remote control, try the following solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the proper polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective operating range of the TV.
- **Buttons Not Working:**
 - Press the button firmly.
 - Clean the remote's surface, especially around the buttons, to remove any dirt or debris that might be preventing proper contact.
- **Interference:** Bright light sources (like direct sunlight or strong fluorescent lights) can interfere with the remote's signal. Try operating the remote in a different lighting condition.

Specifications

Model Number	CS-90283-1T
Brand	USARMT
Compatible Devices	SANYO Televisions

Power Source	2 x AAA Batteries (not included)
Color	Black
Item Weight	2.46 ounces
Package Dimensions	7.6 x 1.97 x 0.87 inches

Warranty Information

This product is offered with a 30-day hassle-free return policy. For specific warranty details beyond this period, please refer to the terms provided by the retailer or manufacturer at the time of purchase.

Support

For further assistance or inquiries regarding your USARMT replacement remote control, please contact the seller or manufacturer through the platform where the purchase was made. Provide your model number (CS-90283-1T) and a detailed description of the issue for efficient support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question