

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Misby](#) /
- › [Misby Mug Warmer Instruction Manual](#)

Misby WH-Deep Black

Misby Mug Warmer Instruction Manual

Model: WH-Deep Black



The Misby Mug Warmer in Deep Black, featuring its sleek design and heating surface.

PRODUCT OVERVIEW

The Misby Mug Warmer is designed to keep your beverages at an optimal drinking temperature, ensuring your coffee, tea, or milk stays warm throughout the day. Utilizing gravity-induction technology, it offers a convenient and safe way to enjoy your drinks without constant reheating.

This versatile device can maintain temperatures between 120°F-140°F (40°C-60°C), perfect for those who enjoy their drinks slowly or get absorbed in their work.

SAFETY INFORMATION

Your Misby Mug Warmer is equipped with intelligent safety features to ensure peace of mind:

- **Gravity-Induction Auto Shut-Off:** The warmer automatically activates when a mug weighing over 0.8 lbs (13 oz) is placed on its heating plate and automatically shuts off when the mug is removed. This prevents accidental heating and saves energy.
- **Temperature Control:** Designed to maintain a warm temperature, not to boil liquids. This prevents overheating and potential burns.
- **Surface Temperature:** The heating surface itself is not excessively hot to the touch when a mug is not present, reducing the risk of burns from accidental contact.

Important: While the warmer has auto shut-off, always unplug the device when not in use, especially if pets or small children are present, to prevent unintended activation.

SETUP GUIDE

1. **Unpack:** Carefully remove the Misby Mug Warmer from its packaging.
2. **Placement:** Place the warmer on a flat, stable, and heat-resistant surface, such as a desk or countertop.
3. **Connect Power:** Plug the power adapter into a standard electrical outlet.

The warmer is now ready for use. No complex setup or additional operations are required.

OPERATING INSTRUCTIONS

Operating your Misby Mug Warmer is simple and intuitive:

- **Automatic Activation:** Place your mug, containing your beverage, onto the center of the heating plate. The warmer will detect the mug's weight and automatically turn on, indicated by a blue light.

- **Automatic Shut-Off:** When you lift your mug from the heating plate, the warmer will automatically shut off. The blue indicator light will turn off.
- **Temperature Maintenance:** The warmer will keep your beverage at a constant temperature between 120°F-140°F (40°C-60°C).



Illustration of the gravity-induction auto turn-on and shut-off feature.

Your browser does not support the video tag.

Official Misby video demonstrating the mug warmer's automatic operation.

Your browser does not support the video tag.

Official Misby video highlighting the auto shut-off feature for desk use.

USAGE TIPS

- **Recommended Mugs:** The warmer is suitable for most cups, including glass, stainless steel, and ceramic. For best results, use mugs with a flat bottom.
- **Use a Lid:** Placing a lid on your mug will help retain heat more effectively and achieve optimal warming performance.

- **Minimum Weight:** Ensure your mug's weight is over 0.8 lbs (13 oz) to activate the gravity induction switch.




Versatile mug warmer suitable for any cups with a flat bottom to use at home, office.....

				
glass	porcelain	Metal cup	Milk paper	Cans

Visual guide to compatible mug materials: glass, porcelain, metal cup, milk paper, and cans.



Keep coffee、milk、tea、etc
at the most suitable temp 131°F

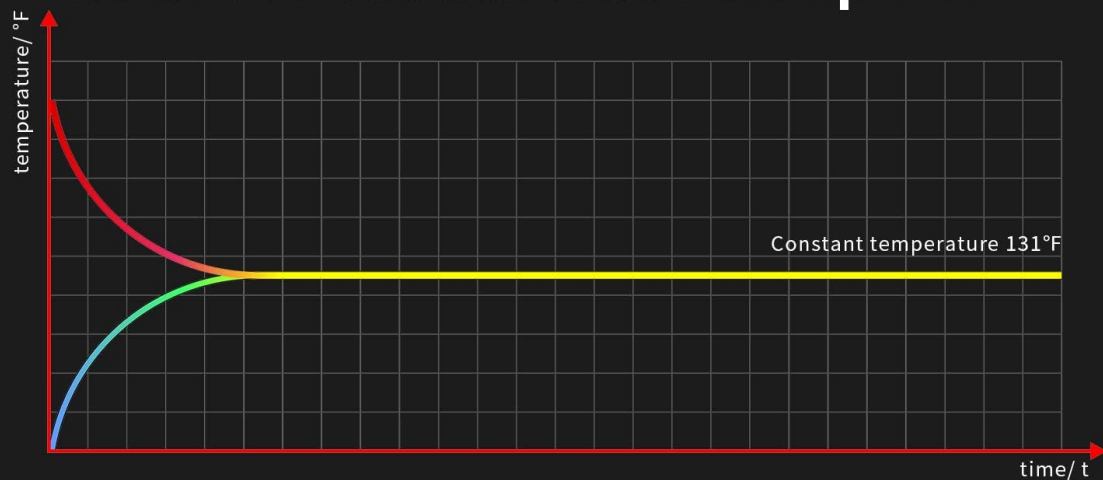

Graph illustrating how the warmer maintains a constant temperature of 131°F (55°C).

SPECIFICATIONS

Brand	Misby
Model Number	WH-Deep Black
Color	Deep Black
Material	Acrylonitrile Butadiene Styrene (ABS)
Product Dimensions	5.9"L x 4.5"W x 4.5"H
Item Weight	7.8 ounces
Power Source	Corded Electric
Voltage	120 Volts

Wattage	16 watts
Temperature Range	120°F-140°F (40°C-60°C)
Cable Length	47 Inches

MAINTENANCE

- **Cleaning:** To clean the heating plate, ensure the device is unplugged and cool. Wipe with a soft, damp cloth. Do not immerse the device in water or use abrasive cleaners.
- **Storage:** Store the mug warmer in a cool, dry place when not in use.




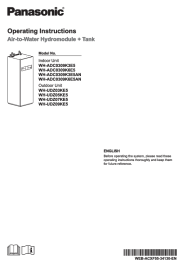

TROUBLESHOOTING

- **Warmer not turning on:**
 - Ensure the device is properly plugged into a working electrical outlet.
 - Verify the mug placed on the warmer weighs at least 0.8 lbs (13 oz) to activate the gravity induction switch.
 - Check if the mug has a flat bottom for proper contact with the heating plate.
- **Beverage not hot enough:**
 - Remember, this is a warmer, not a heater. It is designed to maintain the temperature of an already hot beverage, not to boil cold liquids.
 - Use a mug with a flat bottom and consider placing a lid on your mug to maximize heat retention.
 - Ensure the mug is centered on the heating plate.

WARRANTY AND SUPPORT

For any questions, concerns, or warranty information regarding your Misby Mug Warmer, please refer to the product packaging or contact Misby customer support directly. Contact details can typically be found on the manufacturer's official website or on the product's retail page.

Related Documents - WH-Deep Black

	<p>Anytime & Anywhere Cafe Style Tumbler - Features & Usage Guide</p> <p>Discover the Anytime & Anywhere Cafe Style Tumbler, a sleek and functional beverage container designed for daily use. It offers double-wall vacuum insulation for temperature retention and a secure push-button lid to prevent leaks, making it perfect for coffee, tea, and cold drinks on the go.</p>
	<p>Karran Vitreous China Sinks: Care and Maintenance Guide</p> <p>Comprehensive guide on how to care for and maintain Karran vitreous china sinks, including regular cleaning, stain removal, and recommended cleaning products.</p>
	<p>Black+Decker Steam Iron User Manual and Safety Guide</p> <p>Comprehensive guide for operating, cleaning, and maintaining your Black+Decker steam iron, including safety warnings, features like Auto Clean™ and 3-way Auto Shut-Off, and warranty information. Covers models ICR12XS, ICR15X, ICR16X, ICR17X, ICR19XS, ICR1924, ICR26X, ICR26XC, ICR27XS.</p>
	<p>Panasonic Air-to-Water Hydromodule + Tank Operating Instructions</p> <p>Comprehensive operating instructions for the Panasonic Air-to-Water Hydromodule + Tank system, covering safety precautions, system overview, operating conditions, and detailed setup and servicing information for installers and users.</p>
	<p>J.Burrows Stilford Desk Assembly Instructions Desktop & Frame</p> <p>Step-by-step assembly guide for the J.Burrows Stilford Desktop and S2V1 Desk Frame. Covers models in 1200mm, 1500mm, and 1800mm sizes with various finishes. Includes hardware details and assembly tips.</p>
	<p>BLACK+DECKER BDXBWB02 Bottle Warmer Instruction Manual</p> <p>Comprehensive instruction manual for the BLACK+DECKER BDXBWB02 Bottle Warmer, covering setup, operation, safety, cleaning, descaling, troubleshooting, and warranty information.</p>